

ETT 732

Touch Operating Panel

Operating Manual

Date of creation: 23.09.2014

Version date: 20.11.2023

Article number: 07-230-732-E

Publisher: SIGMATEK GmbH & Co KG A-5112 Lamprechtshausen Tel.: +43/6274/4321 Fax: +43/6274/4321-18 Email: office@sigmatek.at WWW.SIGMATEK-AUTOMATION.COM

> Copyright © 2014 SIGMATEK GmbH & Co KG

Translation from German

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.



Touch Operating Panel

The ETT 732 is an intelligent terminal for programming and visualization of automated processes. Process diagnostics as well as operating and monitoring automated procedures are simplified using this terminal.

A projected capacitive touch screen serves as the input medium for process data and parameters. The output is shown on a 7" WVGA TFT color display.

With the LSE mask editor, graphics can be created on the PC, then stored and displayed on the terminal.

The available interfaces can be used to exchange process data or configure the terminals. In the internal Flash memory, the operating system, application and application data are stored.



ETT 732



Contents

1	Technical Data		4
	1.1	Performance Data	4
	1.2	Electrical Requirements	5
	1.3	Terminal	5
	1.4	Environmental Conditions	5
	1.5	Display 7" WVGA incl. Touch	6
	1.6	Miscellaneous	7
2	Mecha	nical Dimensions	8
3	Conne	ctor Layout	9
	3.1	Backside:	9
	3.1.1	Applicable Connectors	11
4	Cooling	g	12
5	Mounti	ing Instructions	12
6	Buffer	Battery	14
	6.1	Exchanging the Battery: Option 1	15
	6.2	Exchanging the Battery: Option 2	17
7	Wiring	Guidelines	19
	7.1	Ground	19
	7.2	Shielding	19
	7.3	ESD Protection	19

Σ	SIGMA	TEK TOUC	TOUCH OPERATING TERMINAL	
	7.4	USB Interface Connecti	ons	19
8	Displa	y "Burn-In" Effect		20
9	CAN E	Bus Setup		21
	9.1	CAN Bus Station Numb	er	21
	9.2	Number of CAN Bus Pa	rticipants	21
	9.3	CAN Bus Data Transfer	Rate	21
10	CAN E	Bus Termination		22
11	Process Diagram23			
12	Status	and Error Messages		24
13	Cleaning the Touch Screen32		32	



1 Technical Data

1.1 Performance Data

Processor	EDGE2 Technology	
Processor cores	1	
Internal cache	32-kbyte L1 Instruction Cache	
	32-kbyte L1 Data Cache	
	512-kbyte L2 Cache	
Internal program and data memory (DDR3 RAM)	256-Mbyte	
Internal remnant data memory	256-kbyte SRAM (battery buffered)	
Internal storage device	512-Mbyte NAND Flash	
Internal I/O	no	
Interfaces	1x USB 2.0 (Type A)	
	1x Ethernet 10/100 (RJ45)	
	2x CAN bus (6-pin Weidmüller)	
	1x RS232 (9-pin D-Sub)	
Internal interface connections	1x TFT LCD color display	
and devices	1x touch	
Display	7" TFT color display	
Resolution	800 x 480 Pixel	
Control panel	touch screen (projective capacitive)	
Signal generator	no	
Status LEDs	no	
Real-time clock	yes	
Cooling	passive (fanless)	



1.2 Electrical Requirements

Supply voltage	typically +24 V DC (+18-30 V DC)		
Current consumption of	typically 200 mA	maximum 340 mA	
power supply at +24 V	(without externally connected devices)	(with external devices connected)	
Current consumption of	typically 110 mA	maximum 180 mA	
standby voltage at +24 V	(without externally connected devices)	(with external devices connected)	
Inrush current	600 mA (1 ms)		
UL standard for UL ⁽¹⁾ : must be supplied with SELV / PELV and Limi		SELV / PELV and Limited Energy	
Digital output also is SELV / Limited Energy		SELV / Limited Energy.	

⁽¹⁾ In US according to Class 2 UL 1310 or UL 61010-1, 3rd edition, chapter 9.4 or LPS (limited power supply) UL 60950-1 or Limited Energy UL 1585

1.3 Terminal

Dimensions	183.6 x 138.8 x 41.9 mm (W x H x D)
Material	front plate: 4 mm Aluminum
Weight	circa 600 g

1.4 Environmental Conditions

Storage temperature	-10 +80 °C	
Environmental temperature	0 +60 °C	
Humidity	10-90 %, non-condensing	
Operating conditions	Pollution degree 2 indoor use altitude up to 2000 m	
EMC stability	in accordance with proc	duct standard EN 60730-1
Vibration resistance	EN60068-2-6	2 9 Hz: amplitude 3.5 mm 9 200 Hz: 1 g (10 m/s²)
Shock resistance	EN60068-2-27	15 g (150 m/s²) duration 11 ms, 18 Shocks
Protection type	EN 60529 protection through housing	front: IP54 (no UL-rating) cover: IP20 (no UL-rating)



1.5 Display 7" WVGA incl. Touch

Туре	7" TFT LCD color display
Resolution	WVGA 800 x 480 pixels
Color depth	16 Bit RGB (65K colors)
LCD mode	normal white ¹
LCD Polarizer	transmissive ²
Pixel size	0.1926 x 0.1790 mm
Number of pixels	800*3 (RGB) x 480
Active surface	154.08 x 85.92 mm
Backlighting	LED
Contrast	500:1
Brightness	typically 280 cd/m ²
Visible field	left and right 70°, below 70°, above 50°

¹ If there is no display data, the display is white (LED backlight visible)

² Display technology, with which display backlighting is used.

Touch panel	projective capacitive touch	
Sensor type	glass-glass	
Surface	1.0 mm hardened glass front with black frame	
Surface hardness	7H pencil hardness according to JIS K5400	
Transparency	≥ 85 %	
Cleaning	see chapter: Cleaning the Touch Screen	

For input to the touch screen, only the fingers, capacitive touch pens or suitable gloves can be used. No hard or pointed objects can be used. Visualization properties must be adapted to a projected capacitive touch screen.



1.6 Miscellaneous

Article number	01-230-732
Hardware version	1.x
Standard	UL 61010-2-201
Approbations	UL, cUL, CE, UKCA



2 Mechanical Dimensions



3 Connector Layout

3.1 Backside:



X1: CAN 1 (6-pin Weidmüller))



Pin	Function
1	CAN A (LOW)
2	CAN B (High)
3	CAN A (LOW)
4	CAN B (High)
5	GND
6	n.c.



n.c. = do not use



X2: CAN 2 (6-pin Weidmüller)



Pin	Function
1	CAN A (LOW)
2	CAN B (High)
3	CAN A (LOW)
4	CAN B (High)
5	GND
6	n.c.

n.c. = do not use



X3: USB 2.0 (Type A)



Pin	Function
1	+5 V
2	D-
3	D+
4	GND

X4: RS232 (D-Sub)

1 5		
	Pin	Function
	1	DCD
	2	Rx
	3	Тх
	4	DTR
	5	GND
	6	DSR
e o	7	RTS
6 9	8	CTS
	9	RI .

X5: Ethernet 10/100 (RJ45)

~	Pin	Function
	1	Tx +
	2	Tx-
	3	Rx +
1_	4	n.c.
	5	n.c.
	6	Rx -
	7	n.c.
	8	n.c.

Problems can arise if a control is connected to an IP network, which contains modules that do not have a SIGMATEK operating system. With such devices, Ethernet packets could be sent to the control with such a high frequency (i.e. broadcasts), that the high interrupt load could cause a real-time runtime error or runtime error. By configuring the packet filter (Firewall or Router) accordingly however, it is possible to connect a network with SIGMATEK hardware to a third party network without triggering the error mentioned above.

Des problèmes peuvent survenir si un automate est connecté à un réseau IP contenant des modules qui ne fonctionnent pas sous un système d'exploitation SIGMATEK. Avec de tels dispositifs, les paquets Ethernet peuvent être envoyés à l'automate avec une fréquence tellement élevée (càd. diffusion), que les interruptions ainsi générées peuvent provoquer une erreur d'exécution. En configurant d'une façon appropriée le filtre de paquets (pare-feu ou un routeur) il est toutefois possible de connecter un réseau avec le matériel SIGMATEK à un réseau tiers sans déclencher l'erreur mentionnée ci-dessus.

X6: Power supply (4-pin Phoenix Contact)



🦻 SIGMATEK

Pin	Function
1	+24 V DC
2	+24 V DC
3	GND
4	GND



3.1.1 Applicable Connectors

X1 and X2: 6-pin Weidmüller plug B2L/B2CF 3,5/6 (included in delivery)

- X3: USB 2.0 (Type A) (not included in delivery)
- **X4:** 9-pin D-Sub (not included in delivery)
- X5: 8-pin RJ45 (not included in delivery)
- X6: 4-pin Phoenix Contact plug with spring terminal FK-MCP 1.5/ 4-ST-3.5 (Included with delivery)



4 Cooling

The terminal's power loss can reach up to 7.5 Watts. To ensure the necessary air circulation for cooling, the following mounting instructions must be followed!

5 Mounting Instructions

The following distance from the housing should be maintained:

- Left, right, below, above 2 cm
- In the rear, 10 cm



A mounting position of 60°- 120° is also required.



The screw-mounted brackets can be tightened with a torque of 0.15-0.20 Nm. For this purpose, a 3×0.5 flat-tip screwdriver is required.

To avoid damage to the aluminum frame, it is important to ensure that during installation, the contact surface is clean (free of debris, uneven areas).

Unevenness can lead to stress on the glass/aluminum frame or contamination from dust and water.



Buffer Battery 6

The exchangeable buffer battery ensures that the clock time (RTC) and SRAM data of the ETT 732 is preserved in the absence of a supply voltage. A lithium battery is installed at the manufacturer.

After delivery of the ETT 732 and storage of one year, the lifespan of the battery reaches 10 years, if you make sure, that the device mainly is in operation (supply voltage is on).

We recommend however, that the battery be replaced every 8 years to ensure optimal performance.

ATTENTION: If the device is not supplied for 2 years, the battery is empty.

Battery order number: 01-690-055

	MANUFACTURER	DATA
Lithium battery	RENATA	3.0 V/235 mAh

Use batteries from RENATA with the label CR2032 only! WARNING!

Incorrect use of the batteries could result in fire or explosion! Do not recharge, disassemble or throw batteries into fire!

Utilisez seulement des piles de RENATA CR2032! **ATTENTION!** La pile peut exploser si elle n'est pas manipulée correctement! Ne pas recharger, démonter ou jeter au feu!

When the battery voltage is in between the supervisor circuit thresholds it may happen that the battery is detected "good" during operation but "low" after a power cycle. If this happens it is recommended to replace the battery.

둘 SIGMATEK

ETT 732

6.1 Exchanging the Battery: Option 1

1. Disconnect the ETT 732 supply

2. Loosen the seven locking screws (Torx) on the back of the terminal with a Tx9 screw driver.





3. Lift the rear panel of the terminal.



4. Reconnect supply.

When exchanging the battery, caution must be taken to avoid a short circuit. Otherwise, a defect can be caused in the terminal!

5. Using the strap, remove the battery from the holder.

6. Insert the new battery with the correct polarity (plus side facing the back of the terminal). Disconnect the supply, replace the back panel of the terminal and tighten the locking screws.

7. Connect the ETT 732 supply



6.2 Exchanging the Battery: Option 2

1. The SRAM data are saved in the flash or the microSD card using the CLI command "sramsave FILENAME".

Example: sramsave C:\sram_backup

The commands can be executed via the Remote CLI of LASAL Class 2 or via direct input on the device.

ATTENTION: If the data are not first saved, the settings of the terminal are lost.

2. Disconnect the ETT 732 supply







4. Lift the rear panel of the terminal.



5. Using the strap, remove the battery from the holder.

6. Insert the new battery with the correct polarity (plus side facing the back of the terminal) and replace the back panel of the terminal and tighten the screws.

7. Load the SRAM data from the flash using the CLI command "sramload FILENAME" and set the time. The time and date can be set through set Time and set Date.

Example: sramload C:\sram_backup

7 Wiring Guidelines

7.1 Ground

The terminal must be connected to ground through the assembly on the control cabinet or over the connection provided. It is important to create a low-ohm ground connection, only then can error-free operation be guaranteed. The ground connection should have a maximum cross section and the largest (electrical) surface possible.

7.2 Shielding

For the Ethernet, CAT5 cables with shielded RJ45 connectors must be used. The shielding on the CAT5 cable is connected to ground over the RJ45 plug connector. Noise signals can therefore be prevented from reaching the electronics and affecting the function.

7.3 ESD Protection

Typically, USB devices (keyboard, mouse) are not equipped with shielded cables. These devices are disrupted by ESD and in some instances, no longer function.

Before any device is connected to, or disconnected from the terminal, the potential should be equalized (by touching the control cabinet or ground terminal). This will allow the dissipation of electrostatic loads (caused by clothing/shoes).

7.4 USB Interface Connections

The terminal has a USB interface. In LASAL, this interface can be used for various USB devices (keyboard, mouse, storage media, hubs, etc.). Using a hub, several USB devices can be connected that are then fully functional in LASAL.





8 Display "Burn-In" Effect

The "Burn-In" effect describes a pattern burned into the display after displaying the same contents over a longer period of time (e.g. a single screen).

This effect is also described mostly as "image sticking", "memory effect/sticking" or "ghost image". Here, a distinction is made between a temporary and permanent effect. While the temporary effect fades after the screen has been turned off for some time or when dynamic content is displayed, damage from the permanent effect is irreversible.

This effect can have the following causes:

- Operation without a screen saver
- The same contents displayed over a longer time period (e.g. a single screen)
- Operation at high ambient temperatures
- Operation above specifications

The effect can be avoided/reduced by the following actions:

- Using a screen saver
- Deactivating the display when not in use
- Continuously changing screen content (e.g. video)

9 CAN Bus Setup

This section explains how to correctly configure the CAN bus. The following parameters must first be set: Station number and data transfer rate.

9.1 CAN Bus Station Number

Each CAN bus station is assigned its own station number. With this station number, data can be exchanged with other stations connected to the bus. In a CAN bus system however, each station number can only be assigned once!

9.2 Number of CAN Bus Participants

The maximum number of participants on the CAN bus depends on the cable length, termination resistance, data transfer rate and the drivers used in the participants.

With a termination resistance of 120 Ω , at least 100 participants are possible.

9.3 CAN Bus Data Transfer Rate

Various data transfer rates (baud rates) can be set on the CAN bus. The longer the bus line is, the lower the data transfer rate that must be selected.

Value	Baud Rate	Maximum Length
0	615 Kbits/s*	60 m
1	500 kbit/s	80 m
2	250 Kbits/s	160 m
3	125 Kbits/s	320 m
4	100 Kbits/s	400 m
5	50 Kbits/s	800 m
6	20 kbits/s	1200 m
7	1 Mbit/s	30 m

*only between devices with EDGE2 technology

These values apply to the following cable: 120 Ω Twisted Pair.

Note: For the CAN bus protocol: 1 kbit/s = 1 kBaud.



10 CAN Bus Termination

In a CAN bus system, both end modules must be terminated. This is necessary to avoid transmission errors caused by reflections in the line.



The termination is made by an internal 120 Ω resistor between CAN A (LOW) and CAN B (HIGH).

11 Process Diagram





12 Status and Error Messages

Status and error messages are displayed in the LASAL Class software status test. POINT-ER or CHKSUM messages can also be shown on the terminal screen.

Number	Message	Definition	Cause/Solution
00	RUN RAM	The user program is currently running in RAM.	Info
		The display is not affected.	
01	RUN ROM	The user program stored in the program memory module loaded into the RAM is currently running.	Info
		The display is not affected.	
02	RUNTIME	The total time for all cyclic objects	Solution:
		be configured using two system varia- bles:	 Optimize the application's cyclic task.
		- Runtime: time remaining	- Use higher capacity CPU
		 SWRuntime: pre-selected value for the runtime counter 	- Configure preset value
03	POINTER	Incorrect program pointers were detect-	Possible Causes:
		ed before running the user program	 The program memory module is missing, not programmed or de- fect.
			 The program in the user program memory (RAM) is not executa- ble.
			- The buffering battery has failed.
			 The user program has overwrit- ten a software error.
			Solution:
			 Reprogram the memory module, if the error reoccurs exchange the module.
			- Exchange the buffering battery
			- Correct programming error
04	CHKSUM	An invalid checksum was detected before running the user program.	Cause/solution: s. POINTER



05	WATCHDOG	The program was interrupted via the	Possible Causes:
		watchdog logic.	 User program interrupts blocked over a longer period of time (STI command forgotten)
			 Programming error in a hardware interrupt.
			 INB, OUTB, INW, OUTW instruc- tions used incorrectly.
			- The processor is defect.
			Solution
			- Correct programming error
			- Exchange CPU
06	GENERAL ERROR	General error	The error occurs only during the
00		An error has occurred while stopping the application over the online interface.	development of the operating system.
07	PROM DEFECT	An error has occurred while program-	Cause:
		ming the memory module.	 The program memory module is defect.
			- The user program is too large.
			 The program memory module is missing.
			Solution:
			 Exchange the program memory module
08	RESET	The CPU has received the reset signal and is waiting for further instructions.	Info
		The user program is not processed.	
09	WD DEFEKT	The hardware monitoring circuit (watch- dog logic) is defective.	Solution:
		After power-up, the CPU checks the	- Exchange CPU.
		watchdog logic function. If an error	
		ately enters an infinite loop from which	
		no further instructions are accepted.	
10	STOP	The program was stopped by the pro- gramming system.	
11	PROG BUSY	Reserved	
12	PROGRAM LENGTH	Reserved	
13	PROG END	A memory module was successfully programmed.	Info
14	PROG MEMO	The CPU is currently programming the memory module.	Info

ETT 732



15	STOP BRKPT	The CPU was stopped by a breakpoint in the program.	Info
16	CPU STOP	The CPU was stopped by the program- ming software.	Info
17	INT ERROR	The CPU has triggered a false interrupt	Cause:
		and stopped the user program or has encountered an unknown instruction while running the program.	 A non-existent operating system was used.
			 Stack error (uneven number of PUSH and POP instructions).
			 The user program was interrupt- ed through a software error.
			Solution:
			- Correct program error
18	SINGLE STEP	The CPU is in single step mode and is waiting for further instructions.	Info
19	READY	A module or project was sent to CPU and it is now ready to run the program.	Info
20	LOAD	The program is stopped and the CPU is currently receiving a new module or project.	Info
21	UNZUL. MODULE	The CPU has received a module that	Solution:
		does not belong to the project.	 Recompile and download the entire project
22	MEMORY FULL	The operating system memory /heap) is	Cause:
		while calling an internal or interface function from the application.	 Memory is only allocated bun not released.
			Solution
			- Clear memory
23	NOT LINKED	When starting the CPU, a missing	Solution:
		module or a module that does not belong to the project was detected.	 Recompile and download the entire project
24	DIV BY 0	A division error has occurred.	Possible Causes:
			- Division by 0.
			 The result of a division does not fit in the result register.
			Solution:
	DIAG EDDOD	While eccessing a DIAC method	- Correct program error
25	DIAS ERROR	error has occurred.	Hardware problem
26	WAIT	The CPU is busy.	Info



27	OP PROG	The operating system is currently being reprogrammed.	Info
28	OP INSTALLED	The operating system has been rein- stalled.	Info
29	OS TOO LONG	The operating system cannot be loaded; too little memory.	Restart; report error to SIGMATEK.
30	NO OPERATING SYSTEM	Boot loader message.	Restart; report error to SIGMATEK.
31	SEARCH FOR OS	The boot loader is searching for the operating system in RAM.	Restart; report error to SIGMATEK.
32	NO DEVICE	Reserved	
33	UNUSED CODE	Reserved	
34	MEM ERROR	The operating system loaded does not	Solution:
		match the hardware configuration.	 Use the correct operating system version
35	MAX IO	Reserved	
36	MODULE LOAD	The LASAL Module or project cannot be	Solution:
	ERROR	loaded.	 Recompile and download the entire project
37	BOOTIMAGE FAIL-	A general error has occurred while	Solution:
	URE	loading the operating system.	- Contact SIGMATEK
38	APPLMEM ERROR	An error has occurred in the application	Solution:
		memory (user neap).	 Correct allocated memory ac- cess error
39	OFFLINE	This error does not occur in the control.	This error code is used in the programming system to show that there is no connection to the control.
40	APPL LOAD	Reserved	
41	APPL SAVE	Reserved	
44	VARAN MANAGER	An error number was entered In the	Solution:
	ERROR	program.	- Read logfile
45	VARAN ERROR	A required VARAN client was discon-	Solution:
		nected or communication error has occurred.	- Read logfile
			- Error Tree

ETT 732



46	APPL-LOAD-ERROR	An error has occurred while loading the application.	Cause: - Application was deleted. Solution: - Reload the application into the
47	APPL-SAVE-ERROR	An error has occurred while attempting to save the application.	control.
50	ACCESS- EXCEPTION-ERROR	Read or write access of a restricted memory area. (I.e. writing to the NULL pointer).	Solution: - Correct application errors
51	BOUND EXCEEDED	An exception error has occurred when accessing arrays. The memory area was overwritten through accessing an invalid element.	Solution: - Correct application errors
52	PRIVILEDGED INSTRUCTION	An unauthorized instruction for the current CPU level was given. For example, setting the segment register.	Cause: - The application has overwritten the application program code. Solution: - Correct application errors
53	FLOATING POINT ERROR	An error has occurred during a floating- point operation.	
60	DIAS-RISC-ERROR	Error from the Intelligent DIASMaster.	Restart; report error to SIGMATEK.
64	INTERNAL ERROR	An internal error has occurred, all appli- cations are stopped.	Restart; report error to SIGMATEK.
65	FILE ERROR	An error has occurred during a file operation.	
66	DEBUG ASSERTION FAILED	Internal error.	Restart; report error to SIGMATEK.
67	REALTIME RUNTIME	The total time for all real time objects exceeds the maximum time allowed. The time cannot be configured. 2 ms for 386 CPUs 1 ms for all other CPUs	 Solution: Optimize the application's real- time task (RtWork). Reduce the clock time for the real-time task of all objects. Correct application errors CPU is overloaded in real-time => use a higher capacity CPU.
68	BACKGROUND RUNTIME	The total time for all background objects exceed the maximum time; the time can be configured using two system varia- bles: -BTRuntime: time remaining SWBTRuntime: pre-selected value for the runtime counter	Solution: - Optimize the application's back- ground task (background) - Use higher capacity CPU - Set SWBTRuntime correctly



70	C-DIAS ERROR	A connection error with a C-DIAS mod- ule has occurred.	Cause: - The cause of the error is docu- mented in the log file
			Solution:
			- This depends on the cause
72	S-DIAS ERROR	A connection error with a S-DIAS mod-	Possible causes:
		ule has occurred.	 real network does not match the project
			- S-DIAS client is defective
			Solution:
			- analyze logfile
75	SRAM ERROR	An error occurred while initializing, reading or writing SRam data	Possible Causes:
			- SRam configured incorrectly
			 Battery fort he internal program memory supply is empty
			Solution:
			 Analyze log file (Event00.log, Event19.log)
			 Check configuration
			 Change internal program memory supply battery
96	USER DEFINED 1	User-definable code.	
97	USER DEFINED 2	User-definable code.	
98	USER DEFINED 3	User-definable code.	
99	USER DEFINED 4	User-definable code.	
100	C_INIT	Initialization start; the configuration is run.	
101	C_RUNRAM	The LASAL project was successfully started from RAM.	
102	C_RUNROM	The LASAL project was successfully started from ROM.	
103	C_RUNTIME		
104	C_READY	The CPU is ready for operation.	
105	с_ок	The CPU is ready for operation.	

ETT 732



106	C_UNKNOWN_CID	An unknown object from a stand-alone or embedded object, or an unknown base class was detected.	
107	C_UNKNOWN_CONSTR	The operating system class cannot be created; the operating system is probably wrong.	
108	C_UNKNOWN_OBJECT	Indicates an unknown object in an interpreter program; more the one DCC080 object.	
109	C_UNKNOWN_CHNL	The hardware module number is greater than 60.	
110	C_WRONG_CONNECT	No connection to the required channels.	
111	C_WRONG_ATTR	Wrong server attributes.	
112	C_SYNTAX_ERROR	No specific error, recompile all project components and reload the project.	
113	C_NO_FILE_OPEN	An attempt was made to open an un- known table.	
114	C_OUTOF_NEAR	Memory allocation error	
115	C_OUT OF_FAR	Memory allocation error	
116	C_INCOMAPTIBLE	An object with the same name already exists but has a different class.	
117	C_COMPATIBLE	An object with the same name and class already exists but must be updated.	
224	LINKING	The application is currently linking.	
225	LINKING ERROR	An error has occurred while linking. An error messaged is generated in the LASAL status window.	
226	LINKING DONE	Linking is complete.	
230	OP BURN	The operating system is currently being burned into the Flash memory.	
231	OP BURN FAIL	An error has occurred while burning the operating system.	
232	OP INSTALL	The operating system is currently being installed.	
240	USV-WAIT	The power supply was disconnected; the UPS is active.	
		The system is shutdown.	
241	REBOOT	The operating system is restarted.	
242	LSL SAVE		



243	LSL LOAD		
252	CONTINUE		
253	PRERUN	The application is started.	
254	PRERESET	The application is ended.	
255	CONNECTION BREAK		



13 Cleaning the Touch Screen

CAUTION!

Since it may be possible to activate the touch screen by water droplets, grease spots etc., these substances should be removed with a cloth as quickly as possible. Before cleaning the touch screen, the terminal must first be turned off to avoid unintentionally triggering functions or commands!

ATTENTION!

Avant de nettoyer l'écran tactile, le terminal doit d'abord être éteint afin d'éviter un déclanchement involontaire des commandes!

The terminal's touch screen can only be cleaned with a soft, damp cloth. A screen cleaning solution such as an anti-static foam, water with a mild detergent or alcohol should be used to dampen the cloth. The cleaning solution should be sprayed onto the cloth and not directly on the terminal. The cleaning solution should not be allowed to reach the terminal electronics, for example, through the ventilation slots.

No erosive cleaning solutions, chemicals, abrasive cleansers or hard objects that can scratch or damage the touch screen may be used.

If the terminal comes in contact with toxic or erosive chemicals, carefully clean the terminal immediately to prevent corrosion!

To ensure the optimal function of the terminal, the touch screen should be cleaned at regular intervals!

Pour garantir le fonctionnement optimal du terminal, l'écran tactile doit être nettoyé régulièrement!

Documentation Changes

Change date	Affected page(s)	Chapter	Note
26.11.2014	5	1.4 Environmental Conditions	Protection type changed
15.06.2015	19	8.3 CAN Bus Data Transfer Rate	Note added
09.09.2015	5	1.4 Environmental Conditions	Changed Protection type from IP65 to IP54
29.10.2015	15	6 Buffer battery	Description adapted to actual hardware
		6.1 Exchanging the battery	
		6.2 Exchanging the battery	
19.04.2016	4	1.1 Performance Data	Table updated
15.11.2016	27	11 Status and Error Messages	Error code 75 added
28.11.2016	6	1.5 Display	Pixel size updated
06.12.2016	5	1.2 Electrical re- quirements	Added UL standard consumption of power supply corrected
		1.4 Environmental condition	Added Operating conditions and conditions to Protection type
	6	1.6 Miscellaneous	Added Standard
	13	6 Buffer Battery	Added battery surveillance
09.01.2017	5	1.2 Electrical re- quirements	Changed consumption of power supply max value
23.01.2017	5	1.2 Electrical Re- quirements	Table content changed
		1.4 Environmental Conditions	
09.05.2019	20	8 Display "Burn-In" Effect	Chapter added
15.07.2020		6.2 Exchanging the Battery: Option 2	Chapter adjusted

ETT 732 TOUCH OPERATING TERMINAL



03.03.2021	13	5 Mounting Instruc- tions	Text block added
06.12.2022	7	1.6 Miscellaneous	UKCA conformity
20.11.2023	9	3 Connector Layout	B2CF added