


Option Module Installation: Fieldbus



CAUTION: Power down the drive before installing / removing option modules. Failure to do so may result in damage to the product. Refer to section *Safety Information* in the appropriate drive manual.

Figure 1-1 Installation of an SI option module on FDD3 (sizes 2 to 4)

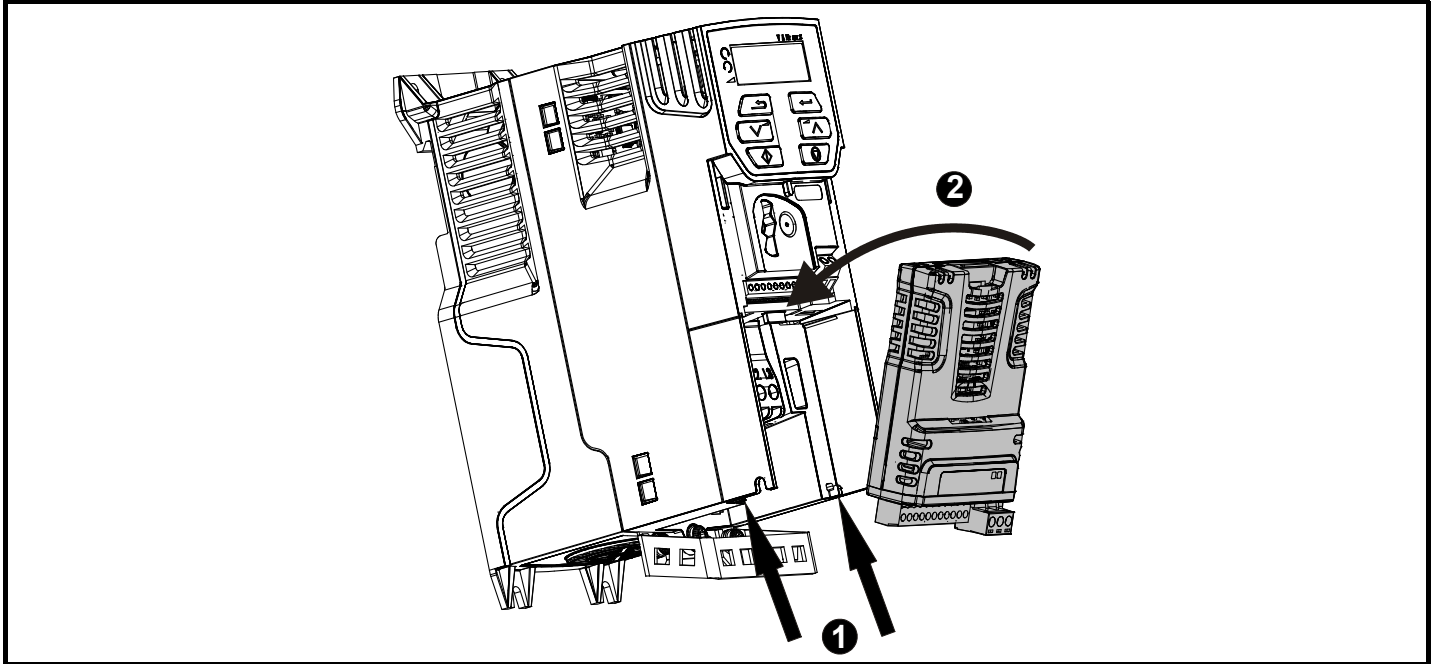


- With the option module tilted slightly backwards, align and locate the two holes in the rear of the option module onto the two tabs (1) on the drive.
- Place the option module onto the drive as shown in (2) until the module clicks into place. The terminal cover on the drive holds the option module in place, so this must be put back on.

NOTE

Option modules can only be installed on drives that have the option module slot functionality.

Figure 1-2 Installation of an SI option module on FDD3 (sizes 5 to 9)

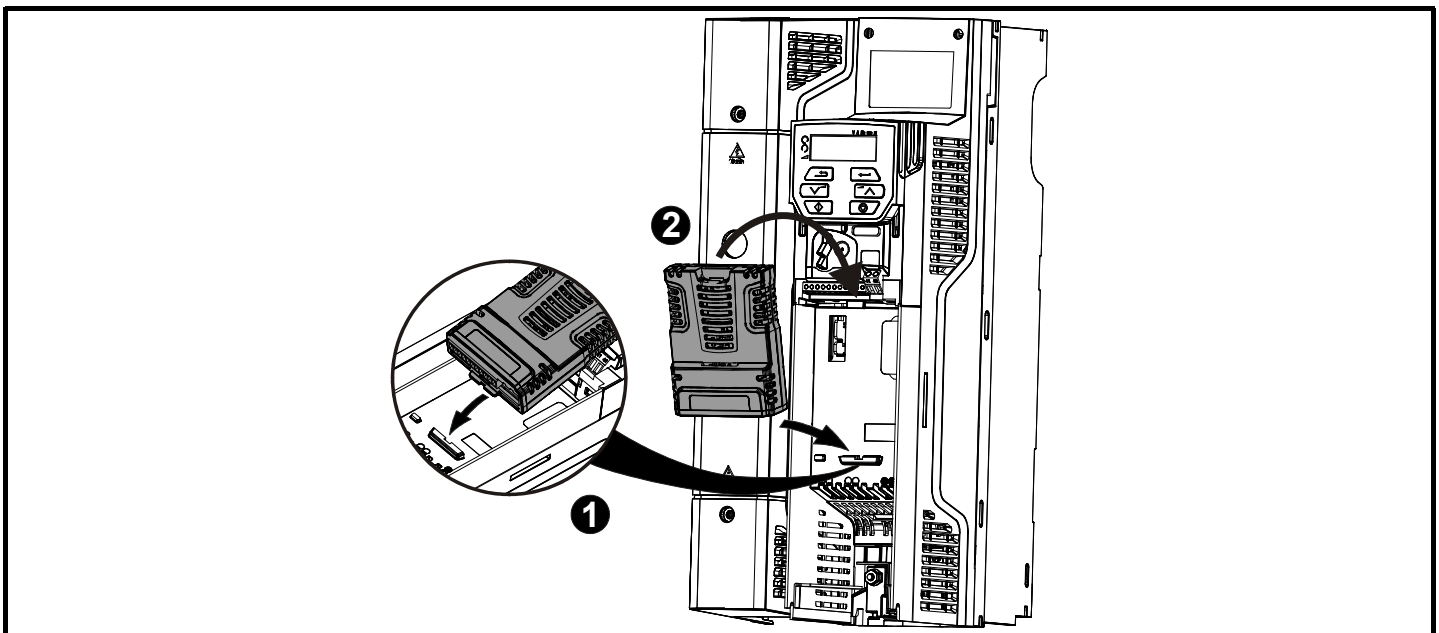


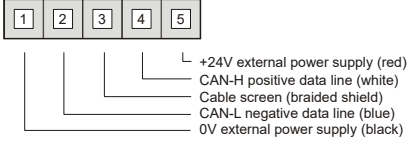

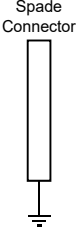
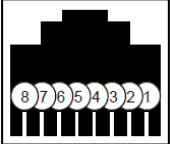
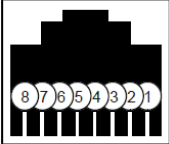
- Place the option module onto the drive as shown in (2) until the module clicks into place. The terminal cover on the drive holds the option module in place, so this must be put back on.

NOTE

Once fitted, the SI option module remains at an angle with respect to the drive.



0478-0647-10

Module	Color	Terminal information																				
 <p data-bbox="134 320 261 344">SI-CANopen</p>	Light Grey																					
 <p data-bbox="134 611 261 636">SI-EtherCAT</p>	Brown Red	 <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p data-bbox="903 405 922 430">A</p>  </div> <div style="text-align: center;"> <p data-bbox="1129 405 1149 430">B</p>  </div> <div style="text-align: center;"> <p data-bbox="1257 461 1343 486">Link/Activity indicators</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="1264 501 1283 526"><input type="checkbox"/></div> <div data-bbox="1315 501 1334 526"><input type="checkbox"/></div> </div> <p data-bbox="1264 535 1334 560">A B</p> </div> </div> <table border="1" data-bbox="823 613 1235 730" style="margin-top: 10px;"> <thead> <tr> <th>Ethernet</th> <th>Function</th> <th>Ethernet</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Transmit +</td> <td>5</td> <td>Not used</td> </tr> <tr> <td>2</td> <td>Transmit -</td> <td>6</td> <td>Receive -</td> </tr> <tr> <td>3</td> <td>Receive +</td> <td>7</td> <td>Not used</td> </tr> <tr> <td>4</td> <td>Not used</td> <td>8</td> <td>Not used</td> </tr> </tbody> </table>	Ethernet	Function	Ethernet	Function	1	Transmit +	5	Not used	2	Transmit -	6	Receive -	3	Receive +	7	Not used	4	Not used	8	Not used
Ethernet	Function	Ethernet	Function																			
1	Transmit +	5	Not used																			
2	Transmit -	6	Receive -																			
3	Receive +	7	Not used																			
4	Not used	8	Not used																			

For full details on any of the option modules, please refer to the appropriate option module user guide.

