

DI 203

S-DIAS Digital Input Module

Instruction Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax : +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2013
SIGMATEK GmbH & Co KG

Translation of the Original Instructions

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.

S-DIAS Digital Input Module

DI 203

with 20 inputs

The S-DIAS DI 203 digital input module has 20 inputs with a +24 V signal for reading the signal status "0" and "1". To suppress noise in the signal lines, input filters are provided.



Contents

- 1 Introduction 5**
 - 1.1 Target Group/Purpose of this Operating Manual 5**
 - 1.2 Important Reference Documentation 5**
 - 1.3 Contents of Delivery 5**

- 2 Basic Safety Directives 6**
 - 2.1 Symbols Used 6**
 - 2.2 Disclaimer 8**
 - 2.3 General Safety Directives 9**
 - 2.4 Software/Training 10**

- 3 Standards and Directives11**
 - 3.1 Directives 11**
 - 3.1.1 EU Conformity Declaration 11**

- 4 Type Plate12**

- 5 Technical Data13**
 - 5.1 Digital Input Specifications 13**
 - 5.2 Electrical Requirements 13**
 - 5.3 Miscellaneous 15**
 - 5.4 Environmental Conditions 15**

- 6 Mechanical Dimensions16**

- 7 Connector Layout17**

7.1	Status LEDs.....	17
7.2	Applicable Connectors.....	18
7.3	Label Field	19
8	Wiring	20
8.1	Wiring Example	20
8.2	Note	21
9	Assembly/Installation	22
9.1	Check Contents of Delivery	22
9.2	Mounting	23
10	Addressing.....	25
11	Supported Cycle Times	26
11.1	Cycle Times below 1 ms (in μ s).....	26
11.2	Cycle Times equal to or higher than 1 ms (in ms).....	26
12	Transport/Storage	27
13	Storage.....	27
14	Maintenance.....	28
14.1	Service	28
14.2	Repair.....	28
15	Disposal	28

16 Hardware Class DI20329

16.1 Interfaces 30

16.1.1 Clients 30

16.1.2 Servers..... 30

16.1.3 Communication Interfaces..... 31

16.2 Example 32

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x DI 203

2 Basic Safety Directives

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes:

DANGER



Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

WARNING



Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION



Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

⇒ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

INFORMATION**Information**

- ⇒ Provides important information on the product, handling or relevant sections of the documentation, which require attention.
-

2.2 Disclaimer

INFORMATION



The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.



INFORMATION

According to EU Directives, the operating manual is a component of a product.

This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions.

This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.

Prevent foreign bodies and fluids from entering the device.

The device must not be opened!

Manipulez l'appareil avec précaution et ne le laissez pas tomber.

Empêchez les corps étrangers et les liquides de pénétrer dans l'appareil.

L'appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé!

The module complies with EN 61131-2.

In combination with a facility, the system integrator must comply with EN 60204-1 standards.

For your own safety and that of others, compliance with the environmental conditions is essential.

Le module est conforme à la norme EN 61131-2.

En combinaison avec une équipement, l'intégrateur de système doit respecter la norme EN 60204-1.

Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essentiel.

2.4 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 Standards and Directives

3.1 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

3.1.1 EU Conformity Declaration



EU Declaration of Conformity

The product DI 203 conforms to the following European directives:

- **2014/35/EU** Low-voltage Directive
- **2014/30/EU** Electromagnetic Compatibility (EMC Directive)
- **2011/65/EU** "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. See Products/Downloads or use the search function and the keyword "EU Declaration of Conformity".

4 Type Plate

	HW: X.XX	
	SW: XX.XX.XXX	
	Safety Version: SXX.XX.XX	
Serial No.	SIGMATEK GMBH & CO KG Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN	
Article Number	Product Name	Short Name

Exemplary nameplate (symbol image)

	HW: 1.00	
	SW: 01.00.000	
	Safety Version: S01.00.00	
12345678	SIGMATEK GMBH & CO KG Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN	
12-246-133-3	Handbediengerät Wireless HGW 1033-3	

HW: Hardware version

SW: Software version


5 Technical Data

5.1 Digital Input Specifications

Number	20	
Input voltage	typically +24 V	maximum +30 V
Signal level (up to HW version 2.20, DI 203) (up to HW version 2.10, DI 203-X) (up to HW version 3.10, DI 203-E)	low: < +8 V	high: > +14 V
Signal level (starting with HW version 2.30, DI 203) (starting with HW version 2.20, DI 203) (starting with HW version 3.20, DI 203-E)	low: < +5 V	high: > +15 V
Input current	3.7 mA at +24 V	
Input delay	typically 0.5 ms	

5.2 Electrical Requirements

Voltage supply from S-DIAS bus	+5 V	
Current consumption on the S-DIAS bus (+5 V supply) for DI 203 HW1.x to HW3.x	typically 36 mA	maximum 50 mA
Current consumption on the S-DIAS bus (+5 V supply) for DI 203-E HW1.x to HW3.x	typically 36 mA	maximum 50 mA
Current consumption on the S-DIAS bus (+5 V supply) for DI 203-E HW6.x	typically 51 mA	maximum 56 mA

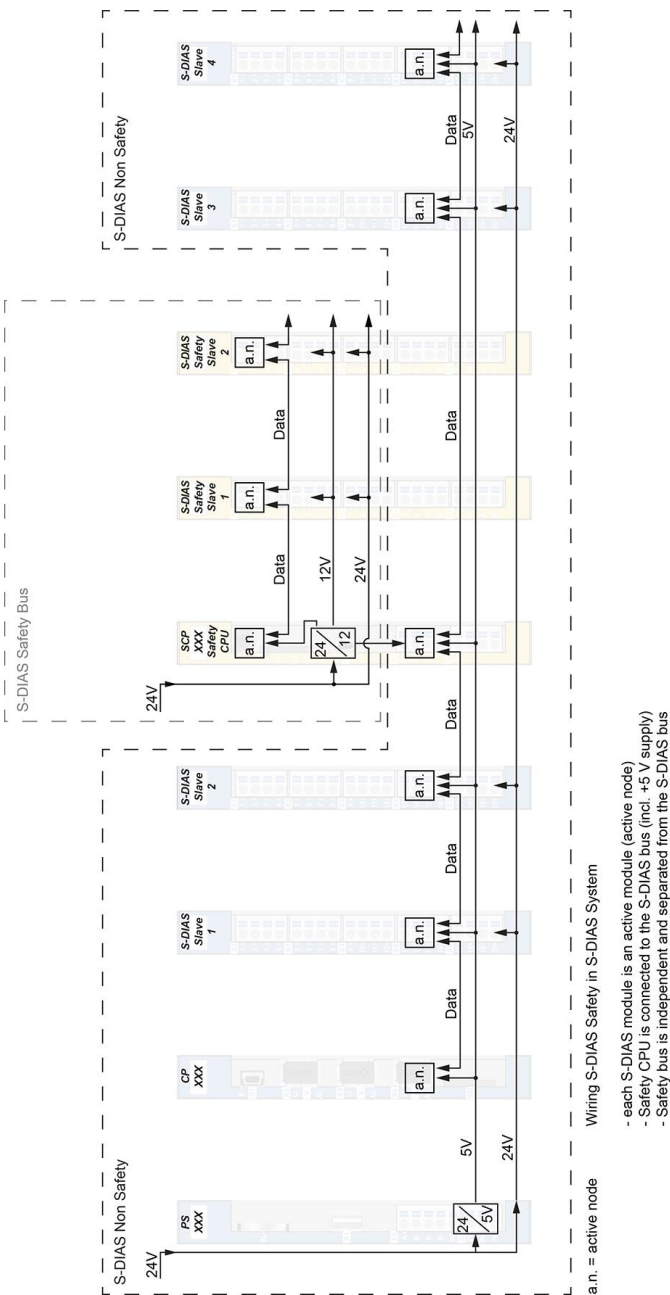


5.3 Miscellaneous

Article number	20-006-203 20-006-203-X (polymer coated printed circuit board)
Standard	UL 508 (E247993)
Approbations	UL, cUL, CE, UKCA


5.4 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +55 °C	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
EMC resistance	in accordance with EN 61000-6-2 (industrial area)	
EMC noise generation	in accordance with EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g
Protection type	EN 60529	IP20

6 Mechanical Dimensions

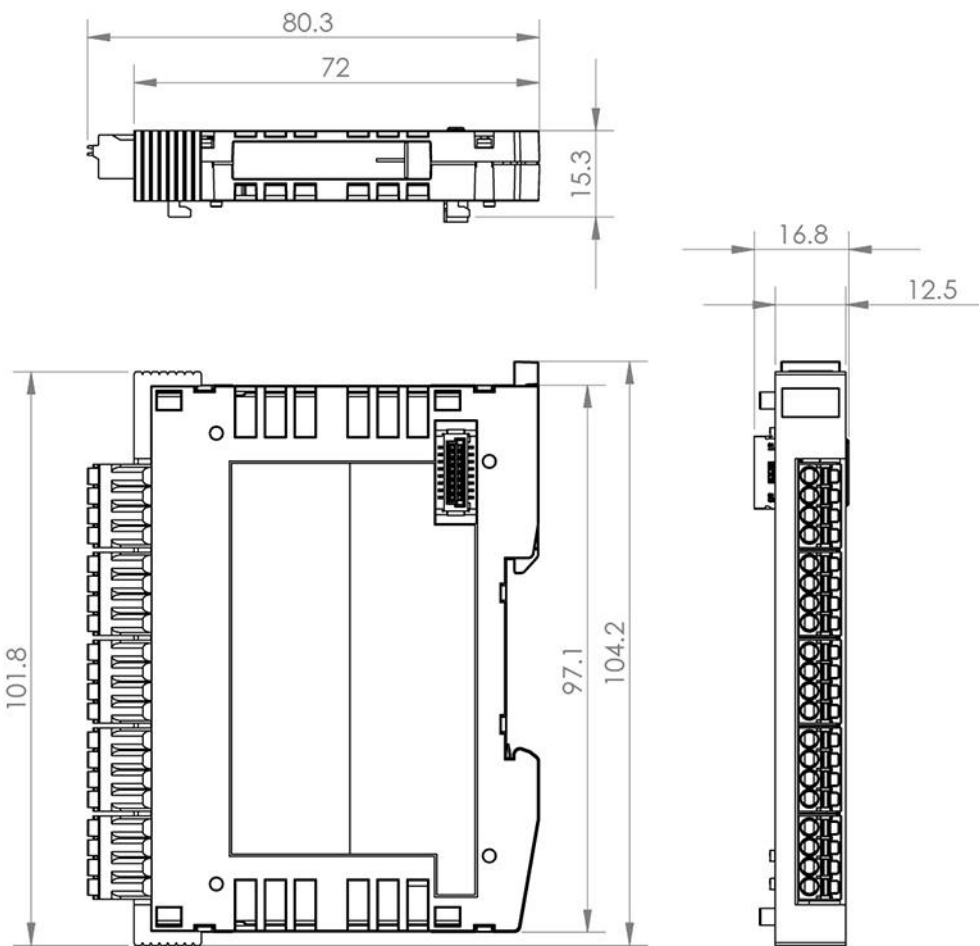

7 Connector Layout

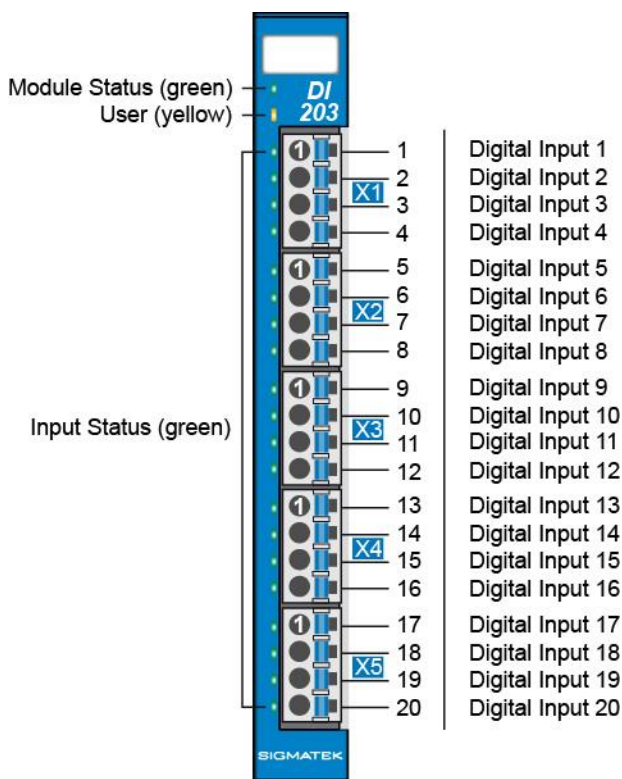

7.1 Status LEDs

Module Status	green	ON	module active
		OFF	no supply available
		BLINKS (5 Hz)	no communication
User	yellow	ON	settable through application
		OFF	(for example, the module LED can be set to blink through the visualization to make finding the module in the control cabinet easier)
		BLINKS (2 Hz)	
Input Status	green	ON	input ON
		OFF	input OFF

7.2 Applicable Connectors

Connectors:

X1-X5: Connectors with spring terminals (included in delivery)


The spring terminals are suitable connecting ultrasonically compacted (ultrasonically welded) strands.

Connections:

Stripping length/Sleeve length:	10 mm
Plug-in direction:	parallel to conductor axis or to PCB
Conductor cross section, rigid:	0.2-1.5 mm ²
Conductor cross section, flexible:	0.2-1.5 mm ²
Conductor cross section, ultrasonically compacted:	0.2-1.5 mm ²
Conductor cross section AWG/kcmil:	24-16
Conductor cross section flexible, with ferrule without plastic sleeve:	0.25-1.5 mm ²
Conductor cross section flexible, with ferrule with plastic sleeve:	0.25-0.75 mm ² (ground for reducing d2 of the ferrule)




7.3 Label Field

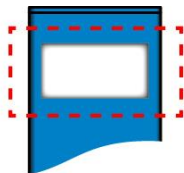

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Weidmüller article number	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Weidmüller article number	1324380000

8 Wiring

8.1 Wiring Example

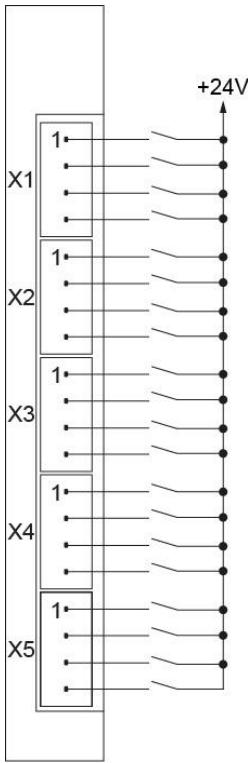

8.2 Note

The input filters, which suppress noise signals, allow operation in harsh environmental conditions. In addition, a careful wiring method is recommended to ensure error-free function.

The following guidelines should be observed:

- Avoid parallel connections between input lines and load-bearing circuits
- Protective circuits for all relays (RC networks or free-wheeling diodes)
- Correct wiring to mass

INFORMATION



Connect the ground bus to the control cabinet.

The S-DIAS module CANNOT be connected/disconnected while voltage is applied!

9 Assembly/Installation

9.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 1.3 Contents of Delivery.

INFORMATION




On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.


Damaged components can disrupt or damage the system.

9.2 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding clamp on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation, so that proper function up to the maximum operating temperature is ensured.

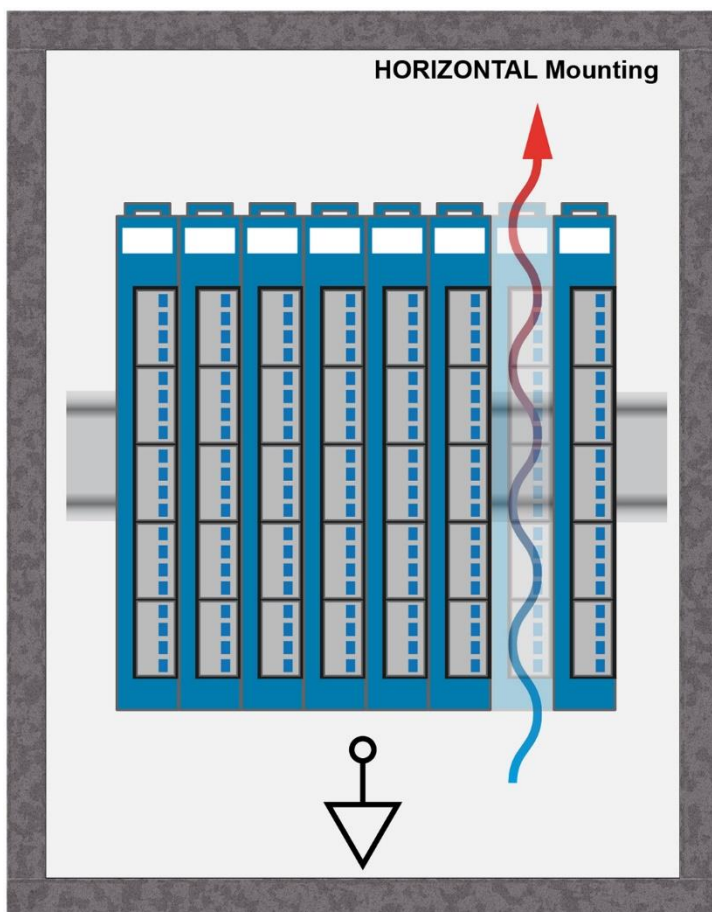

Recommended minimum distances of the S-DIAS modules to the surrounding components or control cabinet wall:

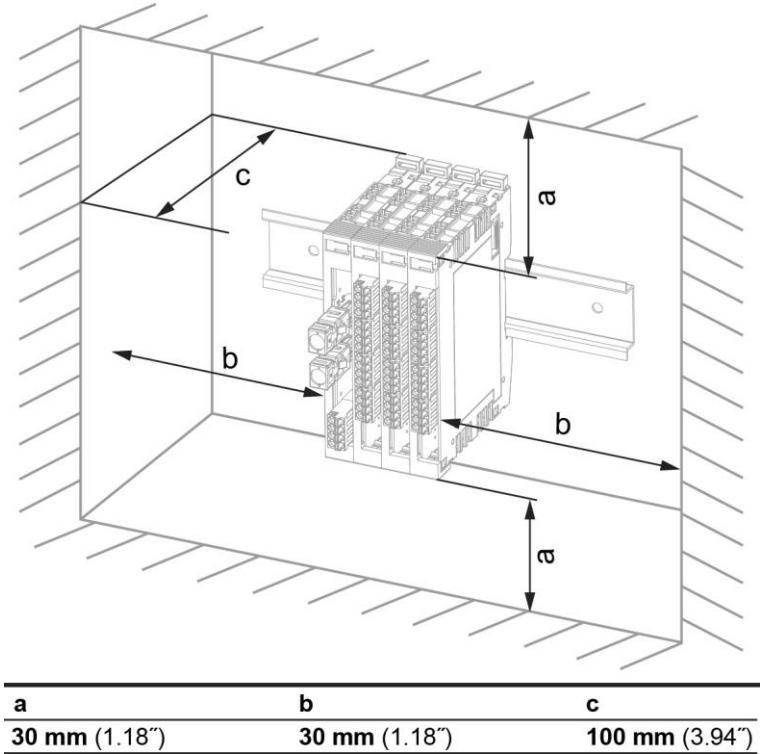

a, b, c ... distances in mm (inches)

10 Addressing

Address (hex)	Size (Byte)	Access Type	Description	Reset value
Speicher				
0000	4	r	Input Register Bit 0 Input 1 Bit 1 Input 2 ... Bit 19 Input 20 Bit 20-31 reserved	000000

11 Supported Cycle Times

11.1 Cycle Times below 1 ms (in μs)

50	100	125	200	250	500
x	x	x	x	x	x

x= supported

11.2 Cycle Times equal to or higher than 1 ms (in ms)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x= supported

17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x= supported

12 Transport/Storage

INFORMATION



This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

13 Storage

INFORMATION



When not in use, store the operating panel according to the storage conditions. See chapter 12.

During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

14 Maintenance

INFORMATION



During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

14.1 Service

This product was constructed for low-maintenance operation.

14.2 Repair

INFORMATION



In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document.

For transport conditions, see chapter 12 Transport/Storage.

15 Disposal

INFORMATION



Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.



16 Hardware Class DI203

DI203 Hardware Class for the DIAS DI203 digital input module

```
SDIAS:39, DI203 (DI2031)
S Class State (ClassState) <-[]->
S Device ID (DeviceID) <-[]->
S FPGA Version (FPGAVersion) <-[]->
S Hardware Version (HwVersion) <-[]->
S Serial Number (SerialNo) <-[]->
S Retry Counter (RetryCounter) <-[]->
O LED Control (LEDControl) <-[]->
----- Digital Inputs -----
I Digital Input 1 (Input1) <-[]->
I Digital Input 2 (Input2) <-[]->
I Digital Input 3 (Input3) <-[]->
I Digital Input 4 (Input4) <-[]->
I Digital Input 5 (Input5) <-[]->
I Digital Input 6 (Input6) <-[]->
I Digital Input 7 (Input7) <-[]->
I Digital Input 8 (Input8) <-[]->
I Digital Input 9 (Input9) <-[]->
I Digital Input 10 (Input10) <-[]->
I Digital Input 11 (Input11) <-[]->
I Digital Input 12 (Input12) <-[]->
I Digital Input 13 (Input13) <-[]->
I Digital Input 14 (Input14) <-[]->
I Digital Input 15 (Input15) <-[]->
I Digital Input 16 (Input16) <-[]->
I Digital Input 17 (Input17) <-[]->
I Digital Input 18 (Input18) <-[]->
I Digital Input 19 (Input19) <-[]->
I Digital Input 20 (Input20) <-[]->
I Inputs Double (InputDouble) <-[]->
ALARM:00, Empty
```

This hardware class is used to control the DI 203 hardware module with 20 digital outputs. More information on the hardware can be found in the module documentation.

16.1 Interfaces

16.1.1 Clients

SdiasIn	The client must be connected to an S-DIAS port, an "SdiasOut"_[x]" server.
Place	The physical location of the hardware module is entered in this client. Up to 64 modules, 0 to 63, can be assigned.
Required	This client is active by default, which means that the S-DIAS hardware module at this position is mandatory for the system and can under no circumstances be disconnected or return an error. Otherwise, the entire hardware deactivated. If the hardware module is missing or removed, an S-DIAS error is triggered. If his client is initialized with 0, the hardware module located in this position is not mandatory. This means that it doesn't have to be available or error-free. However, which components identified as "not required" should be selected with regard to the safety of the system.


16.1.2 Servers

ClassState	This server shows the actual status of the hardware class.								
DeviceID	The device ID of the hardware module is shown in this server.								
FPGAVersion	FPGA version of the module in the format 16#XY (e.g. 16#10 = Version 1.0).								
SerialNo	The serial number of the hardware module is shown in this server.								
RetryCounter	This server increments when a transfer fails.								
LEDControl	With this server, the application LED of the S-DIAS module can be activated to find the module in the network more quickly. The following statuses are possible: <table border="1" data-bbox="400 874 1016 1002"> <tr> <td>0</td><td>LED off</td></tr> <tr> <td>1</td><td>LED on</td></tr> <tr> <td>2</td><td>Blinks slowly</td></tr> <tr> <td>3</td><td>Blinks rapidly</td></tr> </table>	0	LED off	1	LED on	2	Blinks slowly	3	Blinks rapidly
0	LED off								
1	LED on								
2	Blinks slowly								
3	Blinks rapidly								
Input[1-20]	Status of input 1-20								
InputDouble	In this server, the digital outputs are shown in a 32-bit field. Bits 0 to 19 are assigned to inputs 1 to 20 in this double word.								

16.1.3 Communication Interfaces

ALARM	Downlink	With this downlink the corresponding alarm class can be placed via the hardware editor.
-------	----------	---

16.2 Example

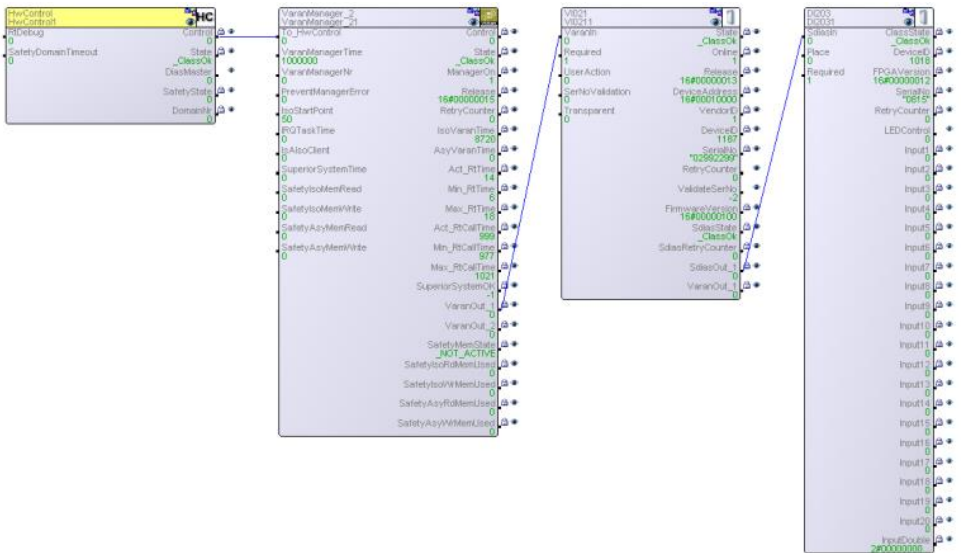

Documentation Changes

Change date	Affected page(s)	Chapter	Note
10.10.2013	3	1.1	Changed values
24.10.2013	4	1.4	Added Vibration resistance
23.12.2013	6	3 Connector Layout	Changed image
11.02.2014	6	3 Connector Layout	Changed image
	7	3.2 Applicable Connectors	Connection capacity added, French notes added
		4.1 Wiring Example	Added wiring schematic
01.04.2014	3	1.3 Miscellaneous	UL added
	9	5 Mounting	Text updated
30.01.2015	8	4.2 Note	Added note concerning connecting the S-DIAS module while voltage is applied
26.03.2015	7	3.2 Applicable Connectors	Added connections
28.04.2016	12	5 Mounting	Graphics distances
17.08.2017	5	1.4 Environmental Conditions	Pollution Degree
	8	3.2 Applicable Connectors	Sleeve length added Added info regarding ultrasonically welded strands
18.10.2017	9	3.3 Label Field	Added chapter
	13	5 Mounting	Graphic replaced
14.11.2019	15	7 Supported Cycle Times	Chapter added
28.02.2020	15	7 Supported Cycle Times	Text adapted
08.09.2020	17	8 Hardware Class DI203	Chapter added
04.11.2020	13	5 Mounting	Expansion functional ground connection
04.05.2021	6	1.3 Miscellaneous	Article number -X added
24.08.2021	4	1.1 Digital Input Specifications	Signal level and Switching threshold
30.08.2021	4	1.1 Digital Input Specifications	DI 203-E Signal level
13.09.2021	4	1.2 Electrical Requirements	Current consumption changed
05.10.2021	4	1.2 Electrical Requirements	HW version -E added

06.12.2022	6	1.3 Miscellaneous	UKCA conformity
26.07.2023		Document	General chapters added, design