

AP 001

S/X-DIAS Adapter Module

Instruction Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2025
SIGMATEK GmbH & Co KG

Translation of the Original Instructions

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

S/X-DIAS Adapter Module

AP 001

The S-DIAS adapter module is required together with the S-DIAS ribbon cable 40 mm to provide the S-DIAS bus as an interface for the X-DIAS modules on the wiring board.



Table of Contents

1 Introduction 4

 1.1 Target Group/Purpose of this Operating Manual 4

 1.2 Important Reference Documentation 4

 1.3 Contents of Delivery 4

2 Basic Safety Directives 5

 2.1 Symbols Used 5

 2.2 Disclaimer 7

 2.3 General Safety Directives 8

 2.4 Software/Training 9

3 Standards and Directives 10

 3.1 Directives 10

 3.1.1 EU Conformity Declaration 10

4 Type Plate 11

5 Technical Data 12

 5.1 Electrical Requirements 12

 5.2 Miscellaneous 12

 5.3 Environmental Conditions 13

6 Mechanical Dimensions 14

7 Connector Layout 15

 7.1 Applicable Connectors 15

 7.1.1 S-DIAS ribbon cable 15

 7.2 Label Field 16

8 Wiring 17

 8.1 Wiring Example 17

 8.2 Note 18

 8.3 ESD Protection 18

9 Assembly/Installation	19
9.1 Check Contents of Delivery	19
9.2 Mounting	20
10 Transport/Storage	22
11 Storage	23
12 Maintenance	24
12.1 Service	24
12.2 Repair	24
13 Disposal	25
14 Accessories	26
14.1 S-DIAS ribbon cable	26

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x AP 001

2 Basic Safety Directives

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes.



DANGER

Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



WARNING

Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

→ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

INFORMATION**INFORMATION**

→ Provides important information on the product, handling or relevant sections of the documentation, which require particular attention.

2.2 Disclaimer

INFORMATION



The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.



INFORMATION

According to EU Directives, the operating manual is a component of a product.

This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions.

This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.
Prevent foreign bodies and fluids from entering the device.
The device must not be opened!

Manipulez l'appareil avec précaution et ne le laissez pas tomber.
Empêchez les corps étrangers et les liquides de pénétrer dans l'appareil.
L'appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé !

The module complies with EN 61131-2.
In combination with a facility, the system integrator must comply with EN 60204-1 standards.
For your own safety and that of others, compliance with the environmental conditions is essential.

Le module est conforme à la norme EN 61131-2.
En combinaison avec une équipement, l'intégrateur de système doit respecter la norme EN 60204-1.
Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essentiel.

2.4 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 Standards and Directives

3.1 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

3.1.1 EU Conformity Declaration



EU Declaration of Conformity

The product AP 001 conforms to the following European directives:

- **2014/35/EU** Low-voltage Directive
- **2014/30/EU** Electromagnetic Compatibility (EMC Directive)
- **2011/65/EU** "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product.

4 Type Plate



HW: X.XX

SW: XX.XX.XXX

Safety Version: SXX.XX.XX

SIGMA TEK GMBH & CO KG

Sigmatelstrasse 1 A-5112 LAMPRECHTSHAUSEN

Serial No.

Article Number

Product Name

Short Name

Exemplary nameplate (symbol image)



HW: 1.00

SW: 01.00.000

Safety Version: S01.00.00

SIGMA TEK GMBH & CO KG

Sigmatelstrasse 1 A-5112 LAMPRECHTSHAUSEN

12345678

12-246-133-3

Handbediengerät Wireless

HGW 1033-3

HW: Hardware version
SW: Software version

5 Technical Data

5.1 Electrical Requirements

Voltage supply from S-DIAS bus	+5 V
Current consumption on the S-DIAS bus (+5 V supply)	0 mA (passive bus loop-through)
Voltage supply from S-DIAS bus	+24 V $\pm$ 20 %
Current consumption on the S-DIAS bus (+24 V supply)	0 mA (passive bus loop-through)


5.2 Miscellaneous

Article number	21-026-001
Printed circuit board coating	no
Standard	designed according to UL
Approvals	CE

5.3 Environmental Conditions


Storage temperature	-40 ... +85 °C	
Environmental temperature	-25 ... +60 °C	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
Noise emission	≤ 70 dB	
EMC resistance	EN 61000-6-2 (industrial area)	
EMC noise generation	EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g (147.15 m/s ²)
Protection type	EN 60529/NEMA 250	IP20/Type1

6 Mechanical Dimensions

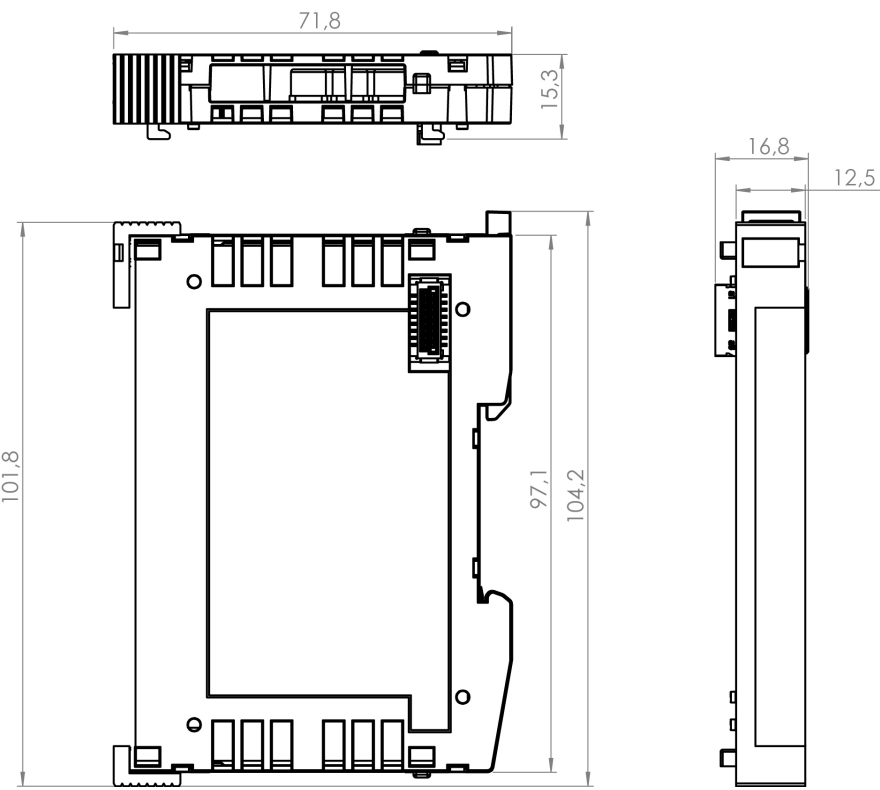

Measurements	12.5 x 104 x 72 mm (W x H x D)
--------------	--------------------------------

 7 Connector Layout




7.1 Applicable Connectors

7.1.1 S-DIAS ribbon cable

The S-DIAS ribbon cable 40 mm is not included in the scope of delivery of the S/X-DIAS Adapter Module AP 001 but is a separate accessory (see chapter 14 Accessories).




7.2 Label Field

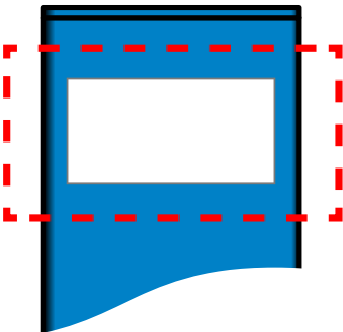

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Article number Weidmüller	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Article number Weidmüller	1324380000

8 Wiring

8.1 Wiring Example

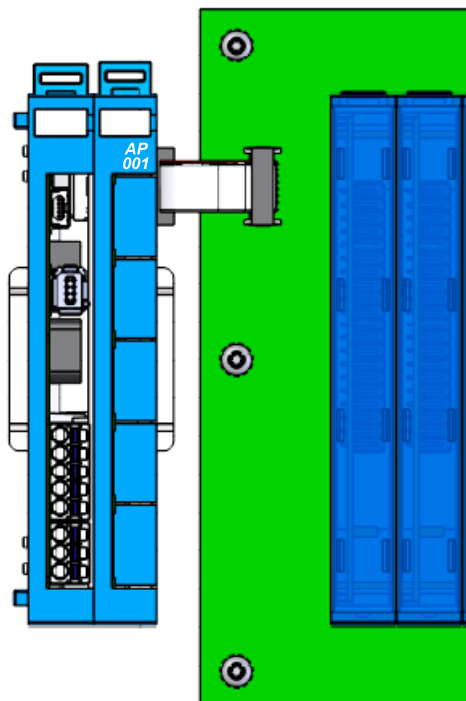

8.2 Note

The following installation guidelines should be observed:

- The DIN rail must have an adequate mass connection.

8.3 ESD Protection



CAUTION

The operator must ensure that no ESD interference affects the product.

L'opérateur doit s'assurer qu'aucune interférence due à des décharges électrostatiques n'affecte le produit.

9 Assembly/Installation

9.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 1.3 Contents of Delivery.




INFORMATION

On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.


Damaged components can disrupt or damage the system.

9.2 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules, a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding lug on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation to ensure proper function up to the maximum operating temperature.

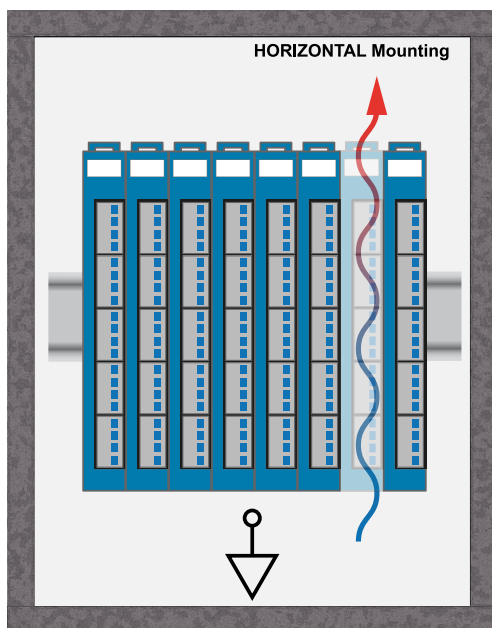

Recommended minimum distances between the S-DIAS modules and the surrounding components or control cabinet wall:

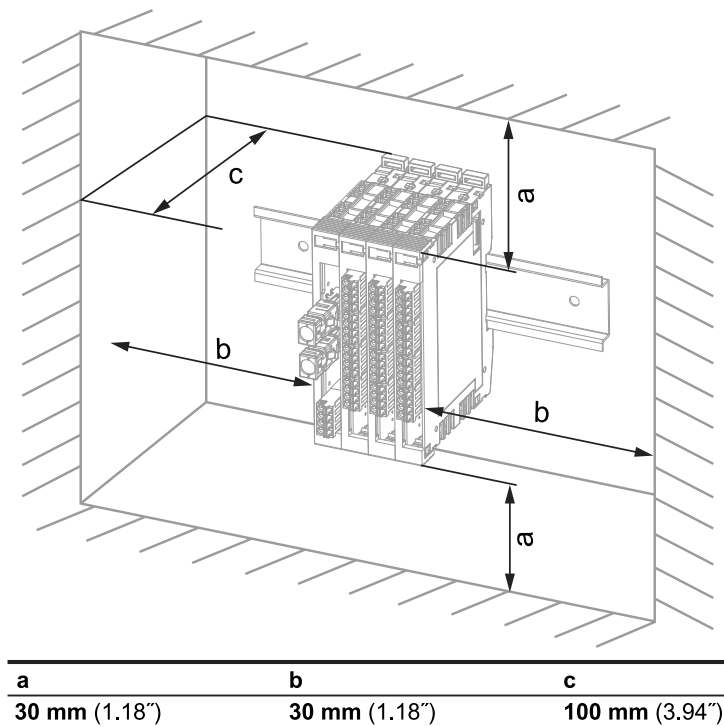

a, b, c ... distances in mm (inches)

10 Transport/Storage

INFORMATION



This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

11 Storage

INFORMATION



When not in use, store the operating panel according to the storage conditions. See chapter 10 Transport/Storage.

During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

12 Maintenance

INFORMATION



During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

Lors de l'entretien et de la maintenance, respectez les consignes de sécurité du chapitre 2 Basic Safety Directives.

12.1 Service

This product was constructed for low-maintenance operation.

12.2 Repair

INFORMATION



In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document. For transport conditions, see chapter 10 Transport/Storage.

13 Disposal



INFORMATION

Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.



14 Accessories

14.1 S-DIAS ribbon cable



Name	Order number
S-DIAS ribbon cable 40 mm	21-900-004

Change History

Change date	Affected page(s)	Chapter	Note
-------------	------------------	---------	------