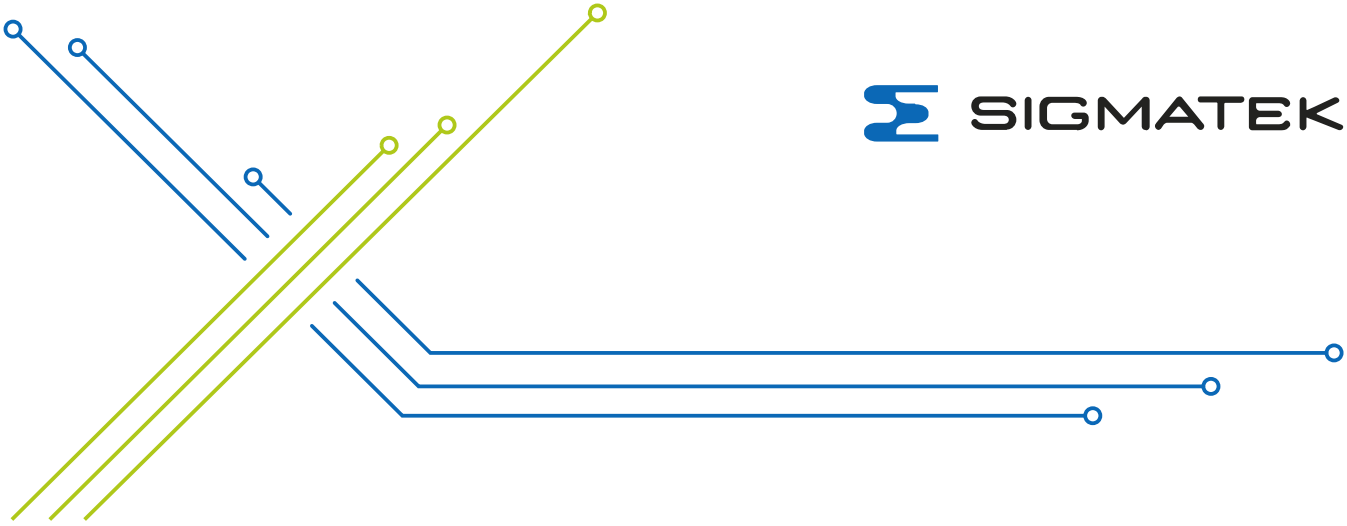

SIGMATEK

DC 061-1(-X)

S-DIAS Axis Module

INSTRUCTION MANUAL

Article number:	20-014-061-1E
Date of creation:	26.07.2016
Version date:	23.10.2026

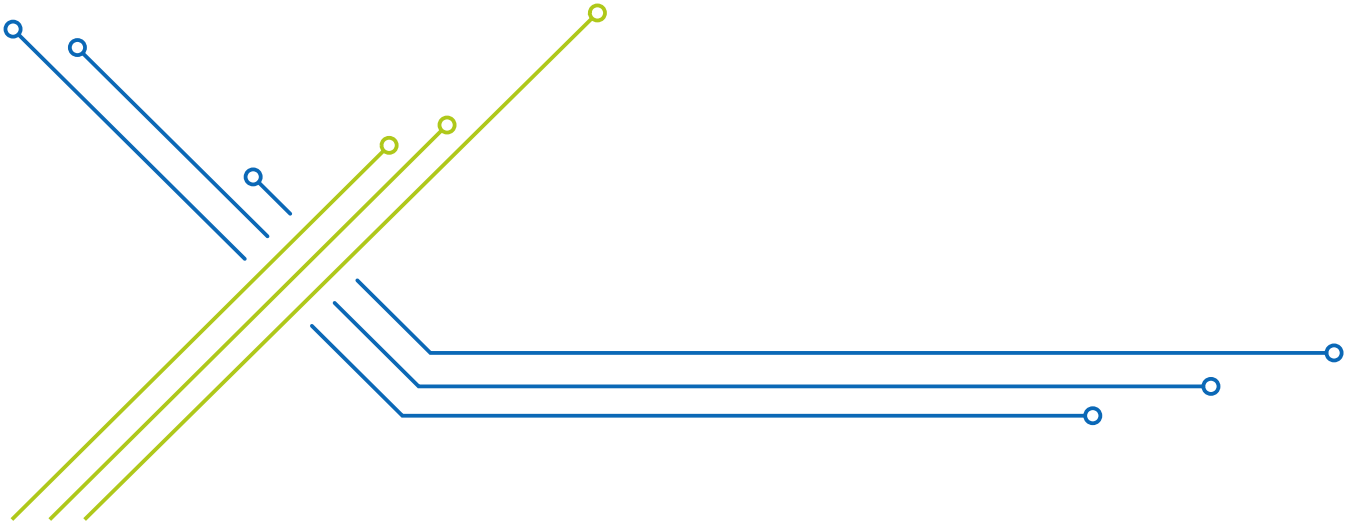

Publisher:
SIGMATEK GmbH & Co KG
Sigmatekstraße 1
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18

Email: office@sigmatek.at
www.sigmatek-automation.com

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

Translation of the Original Instructions

Copyright © 2016
SIGMATEK GmbH & Co KG

S-DIAS Axis Module DC 061-1(-X)

1 motor output stage

1 resolver input

1 holding brake

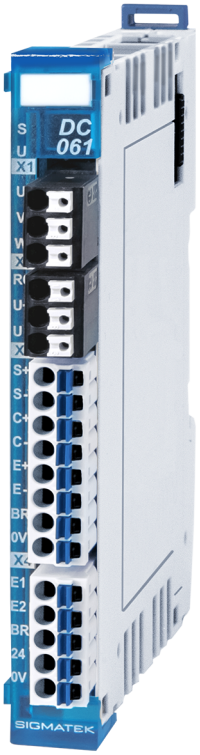

The S-DIAS Axis Module DC 061-1(-X) is used to control a brushless DC motor with a +48 V supply voltage and phase current of up to 6 A. A resolver input is available for position feedback. A +24 V output for connecting a holding brake is provided. External Regen brake can also be connected.

This instruction manual also applies to the product DC 061-1-X (main board and S-DIAS connectors coated in Purocoat (Certonal)), which is no longer explicitly mentioned in the following.

Table of Contents

1 Introduction 5

1.1 Target Group/Purpose of this Operating Manual 5

1.2 Important Reference Documentation 5

1.3 Contents of Delivery 5

2 Basic Safety Directives 6

2.1 Symbols Used 6

2.2 Disclaimer 7

2.3 General Safety Directives 7

2.4 Designated Use 9

2.5 Software/Training 10

3 IT Security 11

4 Standards and Directives 12

4.1 Residual Risks 12

4.2 Safety of the Machine or Equipment 12

4.3 Directives 12

4.3.1 Functional Safety Standards 12

4.3.2 EU Declaration of Conformity 13

4.4 Safety-Relevant Parameters 13

4.5 Compatibility 13

5 Type Plate 14

6 Technical Data 15

6.1 Motor Driver Specifications 15

6.2 Resolver Specifications 15

6.3 Regen Brake Specifications 16

6.4 Enable Inputs Specifications 17

6.5 Holding Brake Specifications 17

6.6 Electrical Requirements 17

6.7 Miscellaneous 20

6.8 Environmental Conditions 20

7 Mechanical Dimensions 21

8 Connector Layout 22

8.1 Connector Layout SIGMATEK 22
8.2 Connector Layout Baumüller 23
8.3 Status LEDs 24
8.4 Applicable Connectors 25
8.5 Label Field 26
9 Wiring 27
9.1 Wiring Example 27
9.2 Note 28
9.3 Wiring SIGMATEK Motors 29
9.4 Servo Motor and Encoder Cables 30
9.4.1 Motor Cable AKM with M23 Round Connectors 31
9.4.2 Motor Cable AKM with Y-Tec Connector 33
9.4.3 Motor Cable AKM with Molex Connectors 35
9.4.4 Encoder Cable with M23 Round Connectors 37
9.4.5 Encoder Cable with Y-Tec Connectors 38
9.4.6 Encoder Cable with Molex Connectors 39
10 Motor Overload Protection 40
11 Additional Safety Information 41
11.1 STO 44
11.2 Function 44
12 Wiring Examples 45
12.1 Performance Level e, Category 4 or SIL 3 - Safety PLC 45
12.2 Performance Level e, Category 3 or SIL 3 - Safety PLC 47
12.3 Performance Level e, Category 4 or SIL 3 - Conventional 49
12.4 Performance Level e, Category 2 or SIL 2 - Conventional 51
13 Assembly/Installation 53
13.1 Check Contents of Delivery 53
13.2 Mounting 53
14 Transport/Storage 55
15 Storage 56
16 Maintenance 57
16.1 Service 57

16.2 Repair 57
17 Disposal 58
18 Supported Cycle Times 59
18.1 Cycle Times below 1 ms (in µs) 59
18.2 Cycle Times equal to or higher than 1 ms (in ms) 59

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions or assist you in case of any issues.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

- Safety System Handbook

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x DC 061-1(-X)

2 Basic Safety Directives

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes.

DANGER

Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

WARNING

Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

→ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

DANGER

Electrical voltage

Tension électrique

WARNING

Hot Surfaces

Surfaces chaudes

CAUTION

Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

INFORMATION

INFORMATION

→ Provides important information on the product, handling or relevant sections of the documentation, which require particular attention.

2.2 Disclaimer

The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.

According to EU Directives, the operating manual is a component of a product. This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions. This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

INFORMATION

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.
Prevent foreign bodies and fluids from entering the device.
The device must not be opened!

Manipulez l’appareil avec précaution et ne le laissez pas tomber.
Empêchez les corps étrangers et les liquides de pénétrer dans l’appareil.
L’appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé !

For your own safety and that of others, compliance with the environmental conditions is essential.

Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essential.

2.4 Designated Use

The Safety functions implemented in the product are designed for use with safety applications in a PLC control and meet the required conditions for safe operation.

CAUTION

The instructions contained in this operating manual must be followed. For error-free operation, proper transport and storage are essential.
Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.
Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict directives and standards of safety technology (Functional Safety).

Les instructions contenues dans ce manuel technique doivent être suivies.
Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels.
L'installation, le montage, la programmation, la mise en service initiale, l'exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.
Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d'un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l'équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité (Sécurité fonctionnelle).

For your own safety and that of others, the product should be used for their designated purpose only.
Correct EMC installation is also included under designated use.

Pour votre propre sécurité et celle des autres, le produit ne doivent être utilisés qu'à des fins prévues.
Une installation CEM correcte est également incluse dans l'utilisation prévue.

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this operating manual or the specifications defined in the technical data.

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
- utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques.

2.5 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor, the Safety application is created using the SAFETYDesigner. Basic information on Safety (Functional Safety) can be found in the Safety System Handbook.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 IT Security

S-DIAS safety modules were developed for integration into a network protected against unauthorized access.

For example, the following dangers can affect the network:

- Unauthorized access
- Data manipulation
- and many other IT security violations

It is the responsibility of the integrator or operator to carry out a risk analysis of the connections between S-DIAS modules and the integration into the overall infrastructure. The following measures, for example, may result from this (if necessary):

- Separation of IT/OT networks (VLANs or physical)
- Firewalls
- Password-protected user accounts
- Data encryption
- and much more

With regard to the functional safety objective, in this case the STO safety function, no direct effects on the function or its integrity are possible, since the function cannot be influenced via communication-based interfaces.

The availability of the overall system (as with all safety functions) can be compromised by external attacks, hence the above measures are necessary.

4 Standards and Directives

4.1 Residual Risks

CAUTION

The following residual risks for the product must be included in the system integrator's risk assessment:

- Release of non-environmentally safe substances, emissions and unusual temperatures
- Hazardous contact voltages
- Effects of operational electrical, magnetic and electromagnetic fields
- Possible effects of information technology devices

Les risques résiduels suivants pour le produit doivent être inclus dans l'évaluation des risques de l'intégrateur de système :

- Libération de substances non respectueuses de l'environnement, émissions et températures inhabituelles
- Tensions de contact dangereuses
- Effets des champs électriques, magnétiques et électromagnétiques opérationnels
- Effets possibles des dispositifs de technologie de l'information

4.2 Safety of the Machine or Equipment

Observe all on-site rules and regulations for accident prevention and occupational safety.

4.3 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

4.3.1 Functional Safety Standards

EN IEC 62061	Safety of machinery - Functional safety of safety-related control systems
EN ISO 13849-1	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2	Safety of machinery - Safety-related parts of control systems - Part 2: Validation
EN IEC 61508-1	Functional safety - Part 1: General requirements
EN IEC 61508-2	Functional safety - Part 2: Requirements for electrical / electronic / programmable electronic safety-related systems
EN IEC 61508-3	Functional safety - Part 3: Software requirements

The issue status of the applied standards can be found in the EU declaration of conformity.

4.3.2 EU Declaration of Conformity

EU Declaration of Conformity

The product DC 061-1(-X) conforms to the following European directives:

- → 2006/42/EG Machine Directive
- → 2014/30/EU Electromagnetic Compatibility (EMC Directive)
- → 2011/65/EU “Restricted use of certain hazardous substances in electrical and electronic equipment” (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product.

4.4 Safety-Relevant Parameters

DC 061-1(-X)	Safety Parameters	Safety Level
Safety function STO	PFH = 4.80E-10 (1/h)	SIL 3 according to EN IEC 62061
	SFF = 99 %	
	$MTTF_D$ = 5387 years	PL e / Cat. 4 according to EN ISO 13849
	DC = 96 %	

4.5 Compatibility

INFORMATION

Compatibility

For compatibility of the S-DIAS Safety modules, see section "Compatibility of S-DIAS Safety Modules" in the system handbook.

5 Type Plate

The type plate provides information about the product's features. The type plate shown here is only an example.

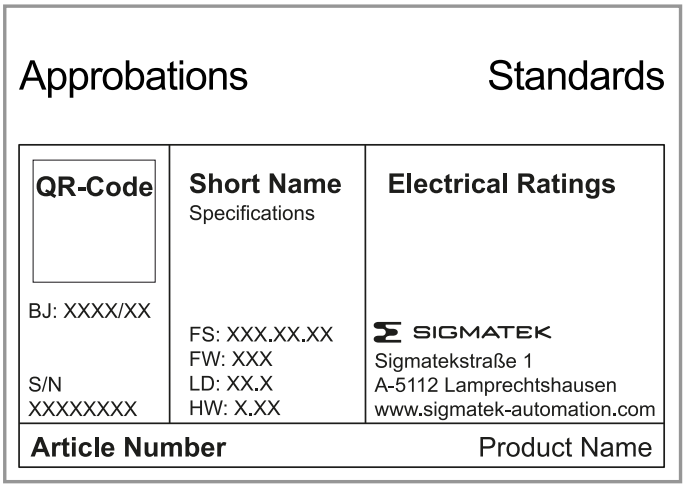

HW: Hardware version
FS: Safety version number
FW: Firmware version
LD: Logic device version
QR-Code: Serial number

6 Technical Data

6.1 Motor Driver Specifications

Type	brushless DC
Operating voltage	+24-55 V
Maximum continuous current	6 A
Maximum peak current (10 s)	15 A
Controller frequency	16 kHz
PWM frequency	16 kHz
Overload protection	short circuit cutoff
	temperature monitoring
	I²t monitor
	overvoltage and under voltage monitoring

6.2 Resolver Specifications

Type	resolver
Resolution	12 bits
Output voltage (EXC)	typically 7 V_{RMS}
Maximum output current (EXC)	200 mA
Output frequency	8 kHz[1)]
Input voltage	typically 3.5 V_{RMS}
Resolver transfer ratio	0.5

1) Resolver excitation of 4 kHz is also possible. See parameter P173 description A-ACME bit 7.

6.3 Regen Brake Specifications

Type	external power resistor
Output	GND switching
Maximum current	10 A[1)]
Lowest possible resistance	6 Ω[2)]
Short-circuit protection	yes
Regen resistor switching threshold on/off	60 V(P168)/55 V(P169)[3)]

WARNING

- Hot surface warning!
- A burn hazard exists with physical contact!
- During operation, the surface of the brake resistor can become very hot and remain hot sometime after operation.

Avoid physical contact with the surface of the brake resistor, and for a significant time after operation as well.

- Avertissement de surface chaude!
- Il existe un risque de brûlure par contact physique!
- Pendant le fonctionnement, la surface de la résistance de freinage peut devenir très chaude et rester chaude quelque temps après le fonctionnement.

Eviter tout contact physique avec la surface de la résistance de freinage, ainsi que pendant une longue période après le fonctionnement.

1) Regen braking must be dimensioned according to the application. For most applications, a 10 Ω/50 W resistor is sufficient. If multiple DC 061-1(-X) are driven with one intermediate circuit supply, it is possible to equip only one module with regen braking. The recommended regen resistor (15 Ω / 100 W) is available at SIGMATEK under the article number 20-014-061-Z1.

2) The resistance must be dimensioned based on its maximum power dissipation corresponding to the braking power generated in the application. However, the permissible short-term power generated must be at least $P=U^2/R$, meaning $60^2/R$.

3) The G-BALDAB threshold must be at least 3 V below the G-BALDAUF.

6.4 Enable Inputs Specifications

Number	2	
Input voltage	+24 V	
Input voltage range	+18-24 V	
Signal level	low: ≤ +5 V	high: ≥ +15 V
Switching threshold	typically +11 V	
Input current	3 mA at +24 V	
Input delay	typically 0.5 ms	
Output test signal control	maximum 1.5 ms	

6.5 Holding Brake Specifications

Output voltage	+24 V
Maximum continuous current	500 mA
Short-circuit protection	yes
Maximum cut-off energy (inductive load)	50 mJ

6.6 Electrical Requirements

Supply voltage +24 V(X4)	+18-30 V, Class 2[1)]	
Current consumption of the +24 V supply	load-dependent (holding brake)	
Supply voltage motor (X2)	+24-55 V DC[2)]	
Switching threshold for motor voltage monitor	minimum +18 V	maximum +65 V
Current consumption supply voltage Motor	load-dependent (motor)	
Voltage supply from S-DIAS bus	+5 V	
Current consumption on the S-DIAS bus (+5 V supply)	-	-
Supply from S-DIAS bus	+24 V	
Current consumption on the S-DIAS bus (+24 V supply)	typically 70 mA	maximum 80 mA

INFORMATION

1) For USA and Canada:

Only suitable for connection to secondary isolated power supply rated 24 V DC, class 2 or fuse rated max. 4 A in accordance with UL 248 shall be connected in the field between the supply source and device terminals.

2) The motor supply (X2) must be connected with an intermediate circuit capacitance appropriate for the application (at least 2000 µF/100 V).
Attention must be paid to short cables and appropriate cable cross-sections.(maximum 15 cm between module and capacitor / 1.5 mm²)

Braking a DC motor:
When braking a DC motor, a generative process can occur whereby the kinetic energy of the motor is converted into electrical energy. The energy of the motor is thereby fed back into the supply of the DC motor output stage; this then increases the supply voltage. It should be noted that the feedback voltage supply voltage of 65 V cannot be exceeded! The external capacity of the motor supply is may be needed. If the capacitors in the power supply are insufficient, a regen resistor, which converts the excess energy into heat must be connected to the DC motor output stage. When selecting the power supply, it is important to ensure that it is appropriately feedback-resistant up to the maximum regenerative voltage that occurs.

Use only conductors, which are rated for at least 75 °C!

There is no motor thermostat analysis in the motor output.

Incorrectly set parameter or incorrect wiring can lead to destruction of the motor. In particular, motor currents and the I^2T settings (A-I2TT, A-I2TERR) must be monitored, which can be parameterized in the DIAS-Drive Editor via the LASAL CLASS 2 tool.
Only motors in a star configuration can be used.

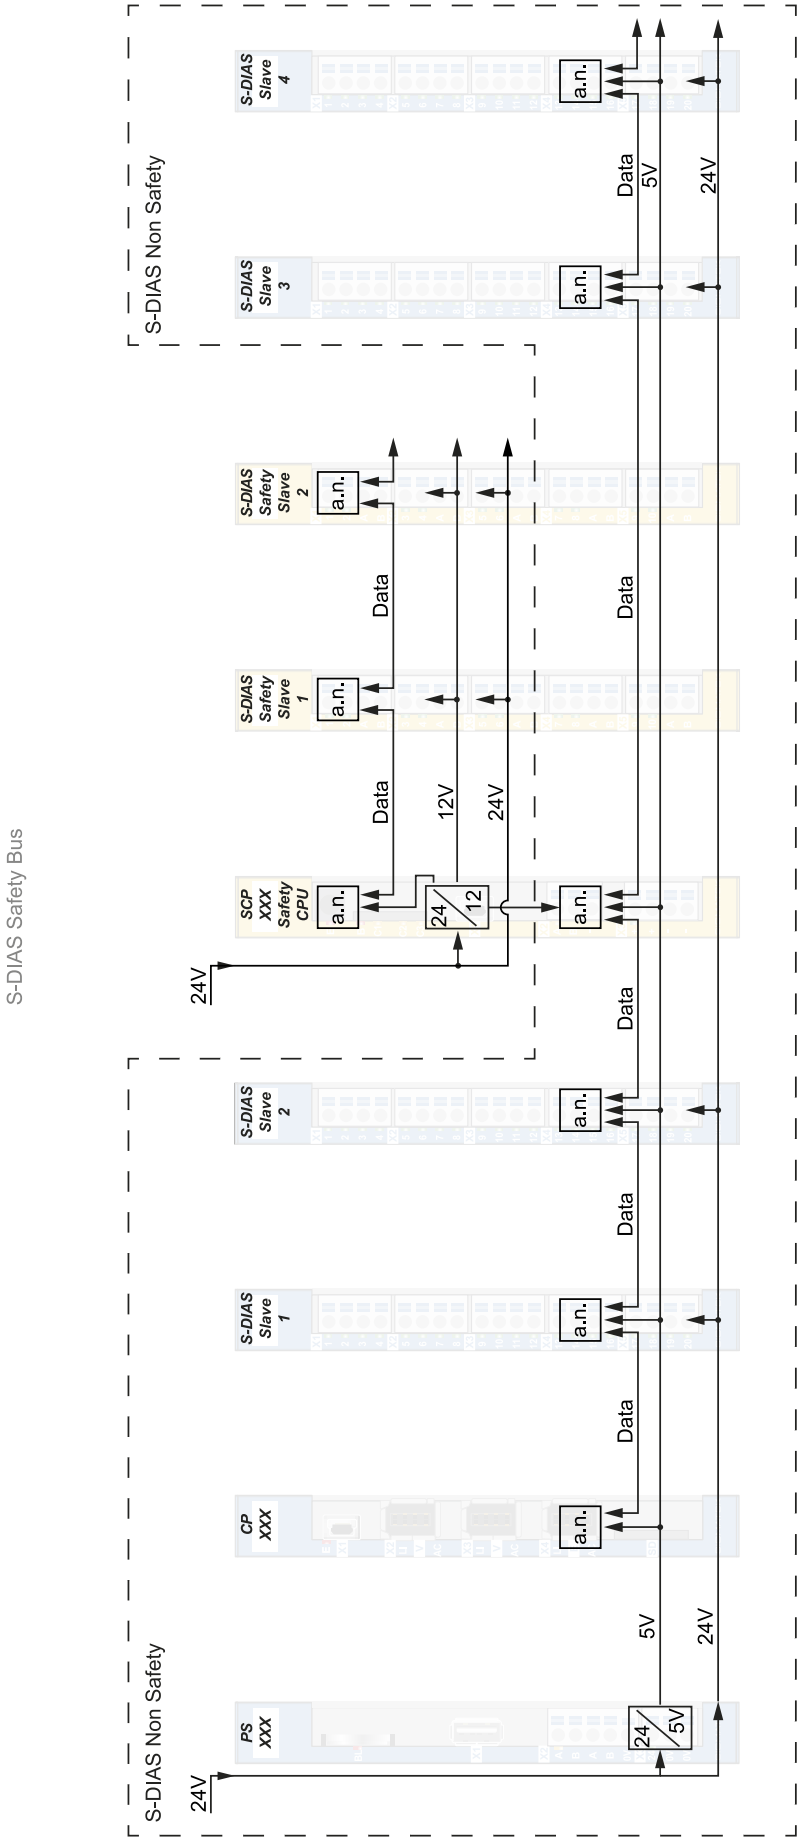

a.n. = active node

Wiring S-DIAS Safety in S-DIAS System

- each S-DIAS module is an active module (active node)
- Safety CPU is connected to the S-DIAS bus (incl. +5 V supply)
- Safety bus is independent and separated from the S-DIAS bus

6.7 Miscellaneous

Article number	20-014-061-1	
Printed circuit board coating	20-014-061-1X (polymer coated printed circuit board)	
Approvals	CE	yes
	UL	cULus (E336350)
	Functional Safety	yes, EG-type-examined
	UKCA	no
Mission time	20 years	

6.8 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +50 °C	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
Noise emission	≤ 70 dB	
EMC resistance	EN 61000-6-2 (industrial area) EN 61000-6-7 (immunity industry functional safety) (increased requirements according to EN IEC 62061)	
	additionally tested in accordance with EN 61800-5-2 (safety requirements - functional safety)	
EMC noise generation	EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm von 5-8.4 Hz 1 g von 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g (147.15 m/s²)
Protection type	EN 60529	IP20 (not evaluated by UL)

7 Mechanical Dimensions

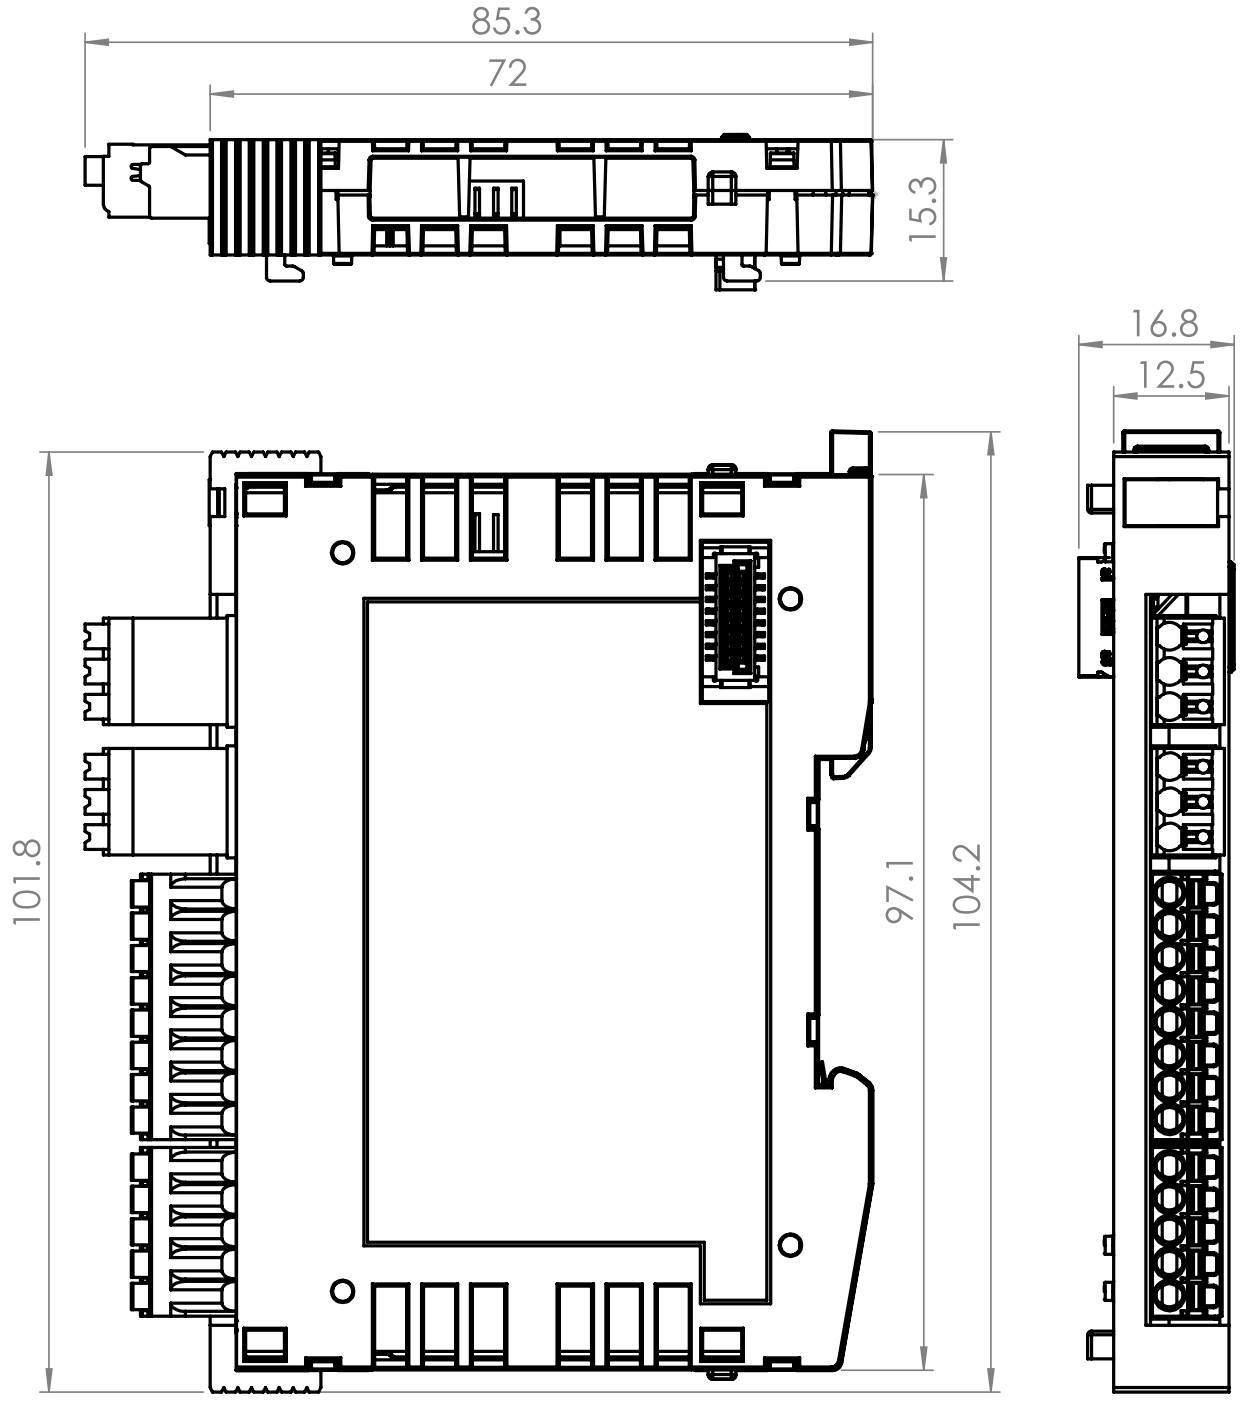

Measurements	12.5 x 104 x 72 mm (W x H x D)

8 Connector Layout

8.1 Connector Layout SIGMATEK

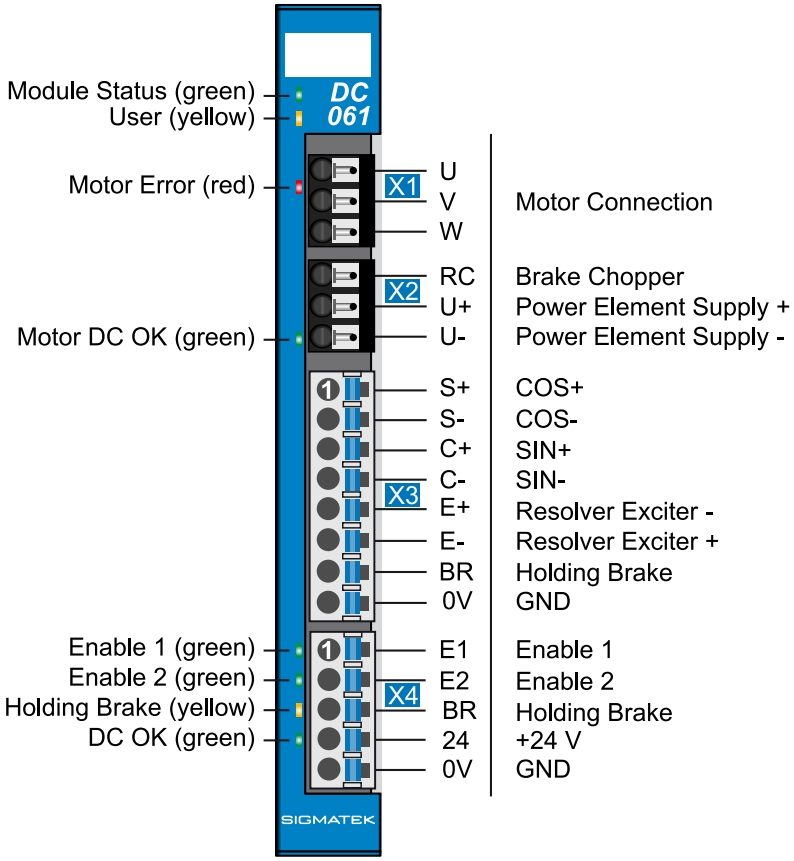

INFORMATION

Both holding brake outputs (BR) are internally connected in parallel. The holding brake can therewith be optionally connected to X3 (pin 7-pin 8) or X4 (pin 3-pin 5).

When using motors with even pole pair number (e.g. AKM31K 4 pole pairs) this results in a feedback offset of 180°.

8.2 Connector Layout Baumüller

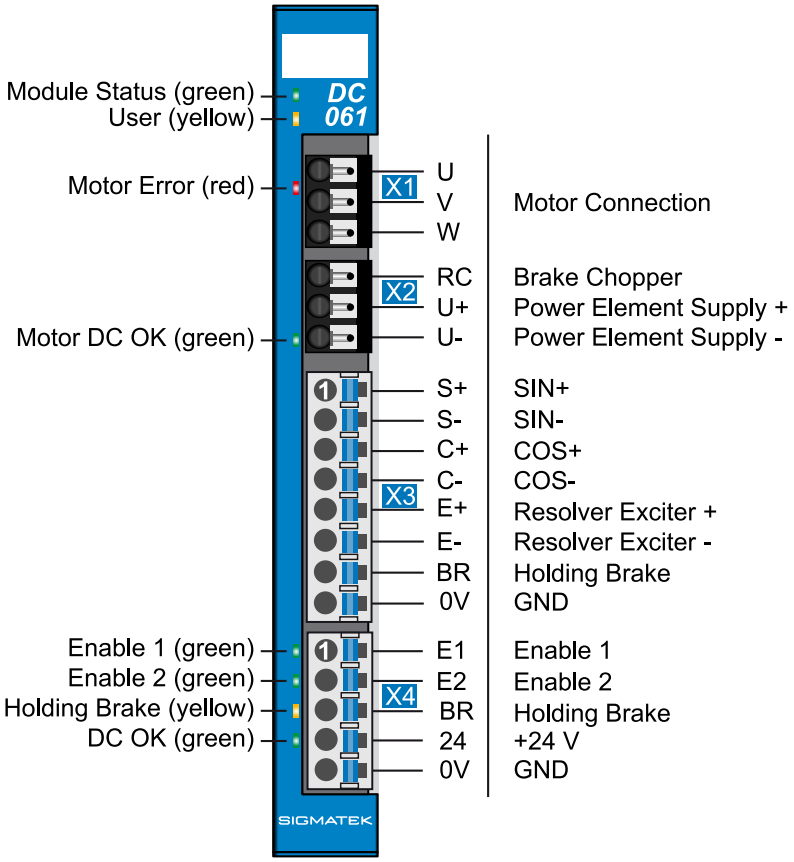

INFORMATION

Both holding brake outputs (BR) are internally connected in parallel. Therewith, the holding brake can be wired optionally to X3 (pin 7-pin 8) or X4 (pin 3-pin 5).

With the layout, an M-ROFF of 270 °C results. M-ROFF is the angle offset between the mechanical 0°-position of the encoder and the electrical 0°-position. SIGMATEK uses the angle as the 0°-position when the voltage space pointer is impressed at 0°, so that the current space pointer points to 270°.

The DC 061-1(X) was developed for Baumüller motors. With Baumüller motors, the encoder counting direction is inverted (SIN/COS reversed) with a standard pin assignment. SIGMATEK motors therefore have a different pin assignment (see chapter Wiring SIGMATEK Motors). This must also be taken into account for third-party motors!

8.3 Status LEDs

Module status	green	ON	module active
		OFF	no supply available
		BLINKING (5 Hz)	no communication
User	yellow	ON	adjustable by application (e.g. the module LED can be set to blinking through the visualization so that the module is easily found in the control cabinet)
		OFF	
		BLINKING (2 Hz)	
		BLINKING (4 Hz)	
Motor error	red	BLINKING	motor output stage error
		OFF	normal operation
Motor DC OK	green	ON	power applied and motor active
		OFF	no motor supply voltage
		BLINKING	power applied, but motor inactive
Enable 1	green	ON	enable 1 high
		OFF	enable 1 low
Enable 2	green	ON	enable 2 high
		OFF	enable 2 low
Holding brake	yellow	ON	output active (brake released)
		OFF	output inactive
DC OK	green	ON	+24 V supply ok
		OFF	+24 V missing or voltage too low
		BLINKING	+24 V DC voltage supply too high

8.4 Applicable Connectors

X1, X2: Weidmüller socket connectors with spring terminals (included in delivery)
X3, X4: Phoenix connector plugs with spring terminals (included in delivery)

The spring terminals are suited for the connection of ultrasonically compacted (ultrasonically welded) stranded wire.

Connection capacity Phoenix connectors:

Stripping length/sleeve length	10 mm
Mating direction	parallel to conductor axis or to circuit board
Conductor cross section rigid	0.2-1.5 mm²
Conductor cross section flexible	0.2-1.5 mm²
Conductor cross section, ultrasonically compacted	0.2-1.5 mm²
Conductor cross section AWG/kcmil	24-16
Conductor cross section flexible with ferrule without plastic sleeve	0.25-1.5 mm²
Conductor cross section flexible with ferrule with plastic sleeve	0.25-0.75 mm² (reason for reducing d2 of the ferrule)
Sleeve length for wire end ferrule without plastic sleeve	0.25 mm², 0.34 mm² -> length: 7 mm
	0.5 mm²; 0.75 mm²; 1 mm²; -> length: 8 mm ... 10 mm
	cross section: 1.5 mm²; -> length: 10 mm
Sleeve length for wire end ferrule with plastic sleeve	0.25 mm²; 0.34 mm²; 0.5 mm²; -> length: 8 mm ... 10 mm
	cross section: 0.75 mm²; -> length: 10 mm
Recommended crimping tool for wire end ferrules	Phoenix 1212034 CRIMPFOX 6

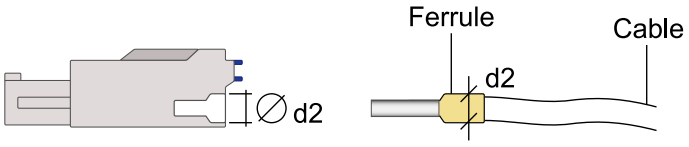

d2 = max. 2.8 mm

Weidmüller connector capacity:

Stripping length/sleeve length	10 mm
Mating direction	parallel to the conductor axis or circuit board
Conductor cross section rigid H05(07) V-U	0.14-1.5 mm^2
Conductor cross section flexible H05(07) V-K	0.14-1.5 mm^2
Conductor cross section, ultrasonically compacted	0.14-1.5 mm^2
Conductor cross section AWG/kcmil	26-16
Conductor cross section flexible with ferrule without plastic sleeve (DIN 46228-1)	0.25-1.5 mm^2
Conductor cross section flexible, with ferrule with plastic sleeve (DIN 46228-4)	0.25-1 mm^2 (reason for reduction d2 of the ferrule)

d2 = max. 3,5 mm

CAUTION

The S-DIAS module **CANNOT** be connected/disconnected while voltage is applied!

8.5 Label Field

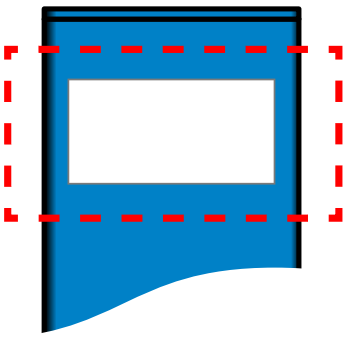

The labeling field is printed directly on the module.

9 Wiring

9.1 Wiring Example

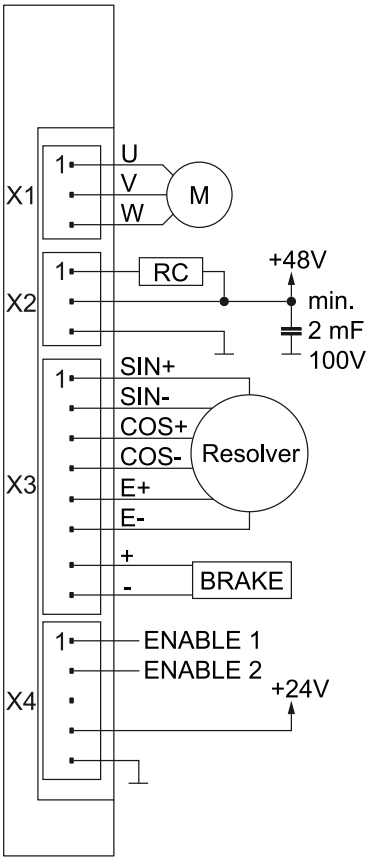

9.2 Note

The following installation guidelines should be observed:

- The DIN rail must have an adequate mass connection.
- A shielded cable must be used for wiring the resolver. For a resolver - encoder, the use of a shielded and twisted cable is recommended. The shield must be placed as close as possible before the module.
- The shielding must be connected to a shielding bus.
- For the motor wiring, a shielded cable is required. The shield must be placed as close as possible to the module.

INFORMATION

The ground bus should be connected to the control cabinet when possible!

The maximum length of the encoder and motor cables is 30 m.

CAUTION

The S-DIAS module **CANNOT** be connected/disconnected while voltage is applied!

9.3 Wiring SIGMATEK Motors

with SIGMATEK resolver and motor cable

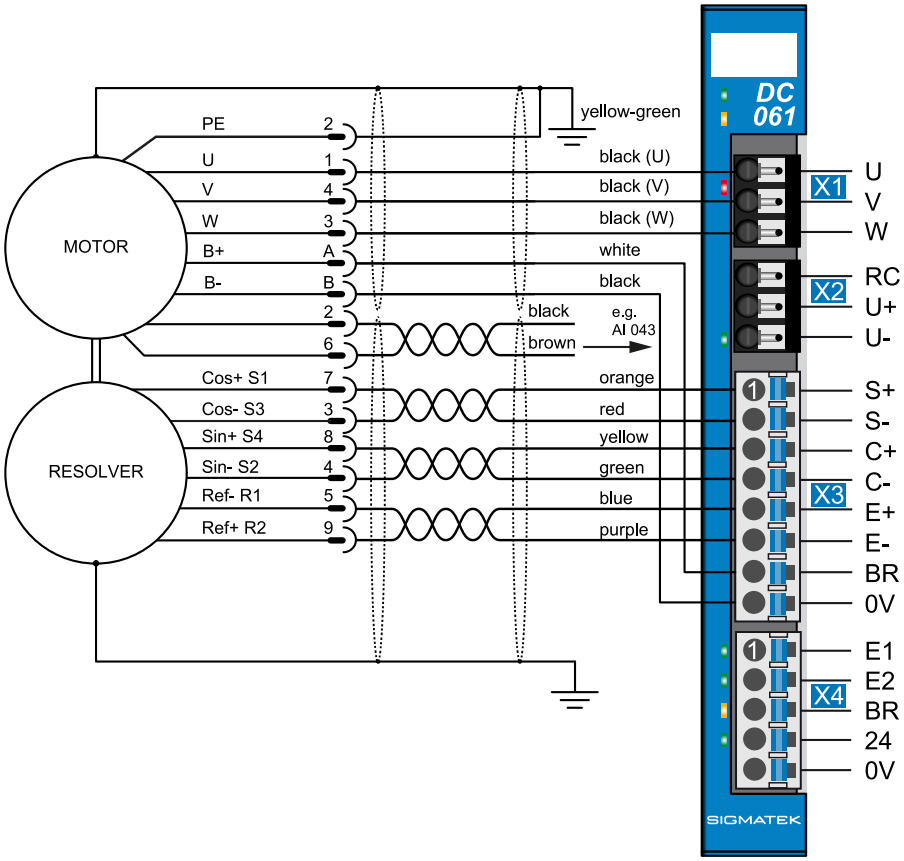

9.4 Servo Motor and Encoder Cables

Highly flexible servo motor and encoder cables for use in energy supply chains. The oil-resistant, abrasion- and cut-resistant polyurethane jacket allows use especially in industrial environments.

Advantages:

UL and CSA approved, halogen-free, flame-resistant and cold-resistant. The cables are available in fixed prefabricated lengths.

Temperature range	
flexible: -5 °C bis +70 °C	fixed: -30 °C bis +70 °C

INFORMATION

Use wires rated for at least 75 °C.

Minimum bending radius	
Servo motor cable	
Fixed installation:	7.5 x D / Flexible use: 10 x D
Resolver cable	
Fixed installation:	4 x D / Flexible use: 7.5 x D

Overview cables SIGMATEK motors	
M23 specifications (0)	
Power cable + brake	M061E-10-1-xxx-0-00
Power cable	M061E-10-0-xxx-0-00
Resolver cable	F-RO-061-xxx-0-00
YTEC specifications (1)	
Power cable + brake	M061E-10-1-xxx-1-00
Power cable	M061E-10-0-xxx-1-00
Resolver cable	F-RO-061-xxx-1-00
Molex specifications (3)	
Power cable + brake	M061E-10-1-xxx-3-00
Power cable	M061E-10-0-xxx-3-00
Resolver cable	F-RO-061-xxx-3-00

9.4.1 Motor Cable AKM with M23 Round Connectors

With Holding Brake	Length
M061E-10-1-015-0-0	1.5 m
M061E-10-1-030-0-0	3.0 m
M061E-10-1-050-0-0	5.0 m
M061E-10-1-100-0-0	10.0 m

Motor cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

Plug module side PIN	Signal	Cable color	Plug motor side PIN
X1 - U	U	black - U	1
X1 - V	V	black - V	2
X1 - W	W	black - W	3
X3 - 7	BR	white	A
X3 - 8	0	black	B
-	-	-	C
-	-	-	D
Flat connector	SH	Shield	Plug housing
	PE	yellow-green	Shield

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

Without Holding Brake	Length
M061E-10-0-015-0-0	1.5 m
M061E-10-0-030-0-0	3.0 m
M061E-10-0-050-0-0	5.0 m
M061E-10-0-100-0-0	10.0 m

Motor cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

Plug module side PIN	Signal	Cable color	Plug motor side PIN
X1 - U	U	black - U	1
X1 - V	V	black - V	2
X1 - W	W	black - W	3
-	-	-	A
-	-	-	B
-	-	-	C
-	-	-	D
Flat connector	SH PE	Shield yellow-green	Plug housing Shield

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

9.4.2 Motor Cable AKM with Y-Tec Connector

With Holding Brake	Length
M061E-10-1-015-1-0	1.5 m
M061E-10-1-030-1-0	3.0 m
M061E-10-1-050-1-0	5.0 m
M061E-10-1-100-1-0	10.0 m

Motor cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

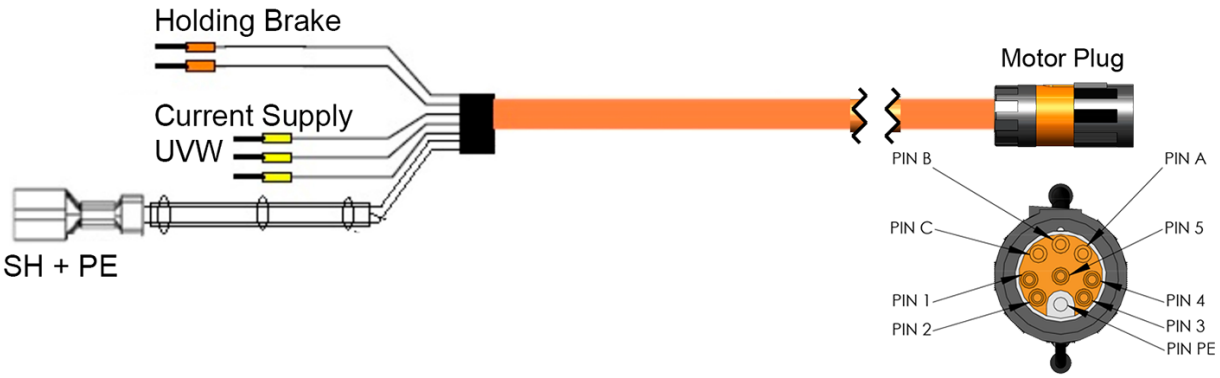

Plug module side PIN	Signal	Cable color	Plug motor side PIN
X3 - 7	BR	white	1
X3 - 8	0	black	2
-	-	-	3
-	-	-	4
-	-	-	5
Grounding wire	PE	yellow-green	PE
X1 - U	U	black - U	A
X1 - V	V	black - V	C
X1 - W	W	black - W	B
Flat connector	SH	Shield	Plug housing
	PE	yellow-green	Shield

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

Without Holding Brake	Length
M061E-10-0-015-1-0	1.5 m
M061E-10-0-030-1-0	3.0 m
M061E-10-0-050-1-0	5.0 m
M061E-10-0-100-1-0	10.0 m

Motor cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

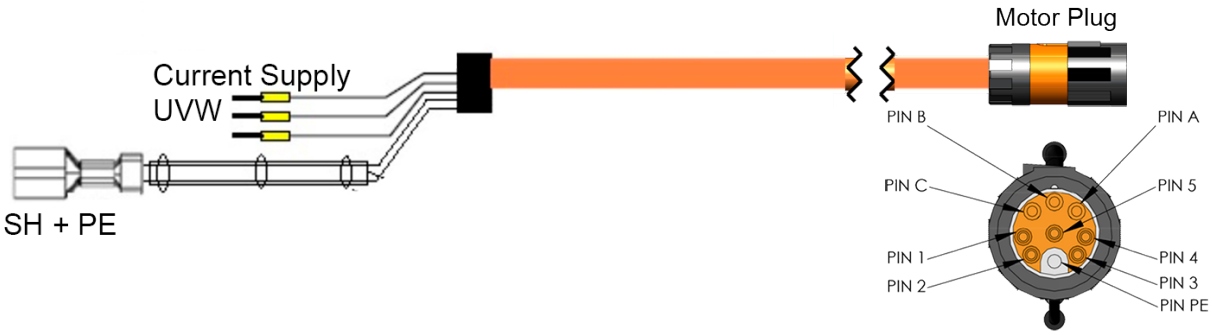

Plug module side PIN	Signal	Cable color	Plug motor side PIN
-	-	-	1
-	-	-	2
-	-	-	3
-	-	-	4
-	-	-	5
Grounding wire	PE	yellow-green	PE
X1 - U	U	black - U	A
X1 - V	V	black - V	C
X1 - W	W	black - W	B
Flat connector	SH	Shield	Plug housing
	PE	yellow-green	Shield

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

9.4.3 Motor Cable AKM with Molex Connectors

With Holding Brake	Length
M061E-10-1-015-3-0	1.5 m
M061E-10-1-030-3-0	3.0 m
M061E-10-1-050-3-0	5.0 m
M061E-10-1-100-3-0	10.0 m

Motor cable, shielded, suitable for drag chains, with plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

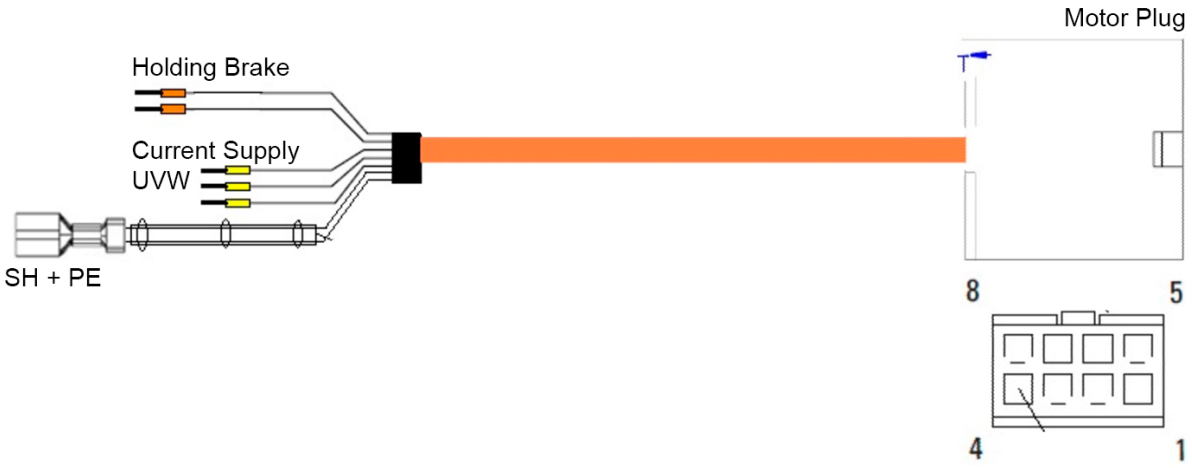

Plug module side PIN	Signal	Cable color	Plug motor side PIN
X1 - U	U	black - U	1
X1 - V	V	black - V	2
X1 - W	W	black - W	3
Flat connector	PE	yellow-green	4
	SH	Shield	5
X3 - 7	BR	white	6
X3 - 8	0	black	7
-	-	-	8

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

Without Holding Brake	Length
M061E-10-0-015-3-0	1.5 m
M061E-10-0-030-3-0	3.0 m
M061E-10-0-050-3-0	5.0 m
M061E-10-0-100-3-0	10.0 m

Motor cable, shielded, suitable for drag chains, with plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield and PE.

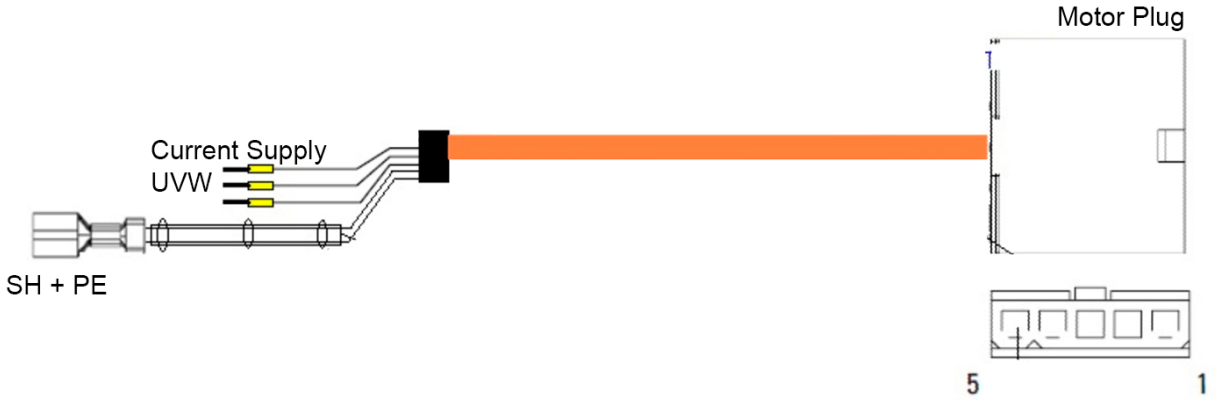

Plug module side PIN	Signal	Cable color	Plug motor side PIN
X1 - U	U	black - U	1
X1 - V	V	black - V	2
X1 - W	W	black - W	3
Flat connector	PE	yellow-green	4
	SH	Shield	5

INFORMATION

The Shielding/PE connections of the motor cable must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables. With increased interference, it may be necessary to also connect the motor cable on the motor side.
If the Molex connector could experience strain during use, it must be equipped with proper strain relief directly before and after the connector.

9.4.4 Encoder Cable with M23 Round Connectors

Name	Encoder type	Length	Outer diameter
F-RO-061-015-0-00	Resolver	1.5 m	6.4 mm
F-RO-061-030-0-00	Resolver	3 m	6.4 mm
F-RO-061-050-0-00	Resolver	5 m	6.4 mm
F-RO-061-100-0-00	Resolver	10 m	6.4 mm

Encoder cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield.

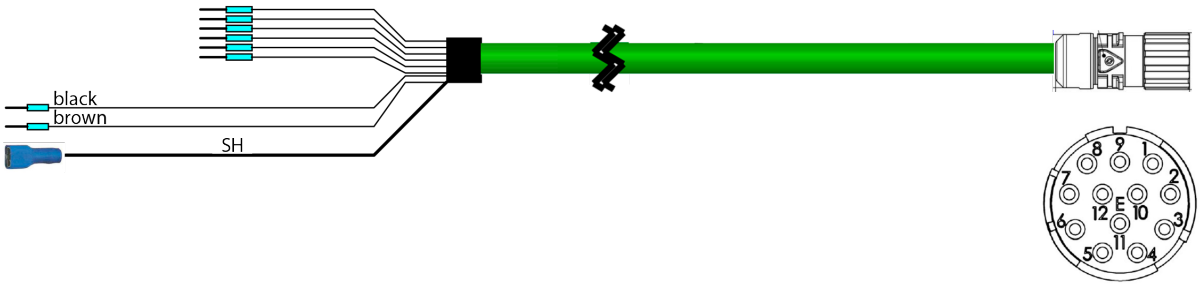

Plug module side PIN	Signal Module	Signal Motor	Cable color	Plug motor side PIN
X3 - 1	SIN+	COS+	orange	7
X3 - 2	SIN-	COS-	red	3
X3 - 3	COS+	SIN+	yellow	8
X3 - 4	COS-	SIN-	green	4
X3 - 5	E+	E-	blue	5
X3 - 6	E-	E+	purple	9
e.g. AI 043		PTC motor temperature	brown	6
e.g. AI 043		PTC motor temperature	black	2
Flat connector		SH	Shield	Plug housing

INFORMATION

The Shielding/PE connections of the encoder cable shielding must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

9.4.5 Encoder Cable with Y-Tec Connectors

Name	Encoder type	Length	Outer diameter
F-RO-061-015-1-00	Resolver	1.5 m	6.4 mm
F-RO-061-030-1-00	Resolver	3 m	6.4 mm
F-RO-061-050-1-00	Resolver	5 m	6.4 mm
F-RO-061-100-1-00	Resolver	10 m	6.4 mm

Encoder cable, shielded, suitable for drag chains, with round plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield.

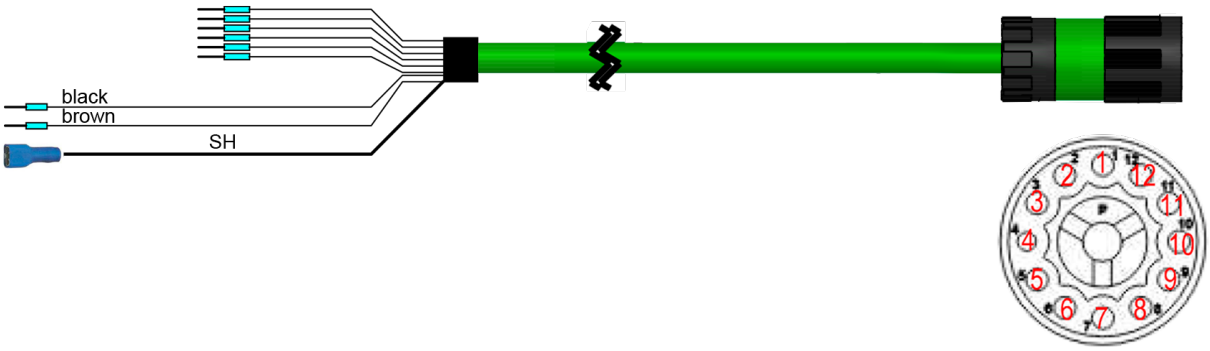

Plug module side PIN	Signal Module	Signal Motor	Cable color	Plug motor side PIN
X3 - 1	SIN+	COS+	orange	7
X3 - 2	SIN-	COS-	red	3
X3 - 3	COS+	SIN+	yellow	8
X3 - 4	COS-	SIN-	green	4
X3 - 5	E+	E-	blue	5
X3 - 6	E-	E+	purple	9
e.g. AI 043		PTC motor temperature	brown	6
e.g. AI 043		PTC motor temperature	black	2
Flat connector		SH	Shield	Plug housing

INFORMATION

The Shielding/PE connections of the encoder cable shielding must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables.

9.4.6 Encoder Cable with Molex Connectors

Name	Encoder type	Length	Outer diameter
F-RO-061-015-3-00	Resolver	1.5 m	6.4 mm
F-RO-061-030-3-00	Resolver	3 m	6.4 mm
F-RO-061-050-3-00	Resolver	5 m	6.4 mm
F-RO-061-100-3-00	Resolver	10 m	6.4 mm

Encoder cable, shielded, suitable for drag chains, with plug on motor side and wire end sleeves on module side and 6.3 mm flat connector for the shield.

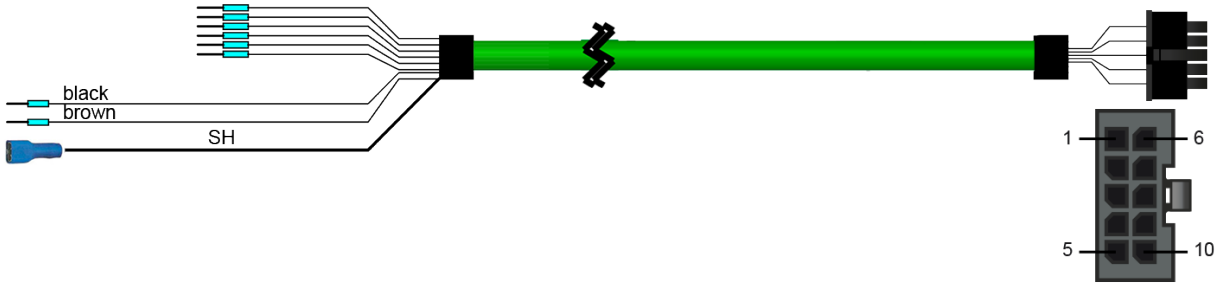

Plug module side PIN	Signal Module	Signal Motor	Cable color	Plug motor side PIN
X3 - 1	SIN+	COS+	orange	7
X3 - 2	SIN-	COS-	red	3
X3 - 3	COS+	SIN+	yellow	8
X3 - 4	COS-	SIN-	green	4
X3 - 5	E+	E-	blue	5
X3 - 6	E-	E+	purple	9
e.g. AI 043		PTC motor temperature	brown	6
e.g. AI 043		PTC motor temperature	black	2
Flat connector		SH	Shield	Plug housing

INFORMATION

The Shielding/PE connections of the encoder cable shielding must be grounded on the module side via the 6.3 mm flat connector provided on the respective cables. With increased interference, it may be necessary to also connect encoder cable on the motor side. If the Molex connector could experience strain during use, it must be equipped with proper strain relief directly before and after the connector.

10 Motor Overload Protection

The device has no integrated motor overload protection. External or remote overload protection in accordance with National Electrical Code and any additional local codes must be provided in the field. Motor overtemperature sensing is not provided by the drive.

11 Additional Safety Information

The Safety function “STO” is an integrated part of the DC motor output stage. It meets all necessary requirements for safe operation in SIL 3 according to EN IEC 62061 and in compliance with PL e. Cat. 4 in accordance with EN ISO 13849-1.

CAUTION

The instructions contained in this document must be followed.

- The DC 061-1(-X) can only be powered by supplies that meet the requirements for SELV or PELV in compliance with EN 60204.
  For error-free operation, proper transport and storage are essential. See chapter 14 Transport/Storage.
- Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.
- Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict guidelines and standards of safety technology.

For your own safety and that of others, the safety modules should be used for their designated purpose only. Correct EMC installation is also included in the designated use.

ATTENTION

Les instructions contenues dans ce document doivent être suivies.

- Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels. Voir le chapitre 14 Transport/Storage pour plus d’informations.
- L’installation, le montage, la programmation, la mise en service initiale, l’exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.
- Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d’un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l’équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité.

Pour votre propre sécurité et celle des autres, les modules de sécurité ne doivent être utilisés qu’à des fins prévues. Une installation CEM correcte est également incluse dans l’utilisation prevue.

CAUTION

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this manual or the speciation's defined in the technical data (see chapter 6 Technical Data).

The main power supply for the servo amplifier must be disconnected using the main switch for the following instances:

- Cleaning, maintenance or repairs
- Extended still-stand periods

CAUTION

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
- utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques (voir chapitre6 Technical Data).

L'alimentation principale du variateur doit être débranchée à l'aide de l'interrupteur principal dans les cas suivants:

- Nettoyage, entretien ou réparation
- périodes d'immobilisation prolongées

DANGER

Failure to follow the above safety measures can lead to severe injuries.

- Only trained personnel are authorized to install the "safe restart lock" STO (Safe Torque off) and set the parameters.
- All control devices (switches, relays, PLC, etc.) and the control cabinet must meet the requirements for EN ISO 13849.
  This includes:
  - Door switches, etc. with at least IP54 protection.
  - Control cabinet with at least IP54 protection.
- Appropriate cables must be used, and proper cable termination on the module side must be ensured (see the chapter “8.4 Applicable Connectors” => Connection capacity).
- All cables that affect safety (e.g. control cables for the ENABLE 1 and ENABLE 2 inputs) must be laid in a cable duct outside of the control cabinet: Short or crossed circuits in the signal lines must be avoided! See EN ISO 13849.

DANGER

Le non-respect des mesures de sécurité ci-dessus peut entraîner des blessures graves.

- Seul un personnel qualifié est autorisé à installer le "blocage de redémarrage sûr" STO (Safe Torque off) et à régler les parameters.
- Tous les appareils de commande (interrupteurs, relais, API, etc.) et l'armoire de commande doivent satisfaire aux exigences de la norme EN ISO 13849.
  Il s'agit des éléments suivants :
  - interrupteurs de porte, etc. avec une protection d'au moins IP54
  - armoire de commande avec une protection d'au moins IP54.
- Il convient d'utiliser des câbles adaptés et de veiller à ce que les extrémités des câbles soient correctement raccordées côté module (voir le chapitre 8.4 Applicable Connectors" => Connection capacity).
- Tous les câbles affectant la sécurité (par ex. les câbles de commande pour les entrées ENABLE 1 et ENABLE 2) doivent être posés dans un conduit de câbles de raccordement à l'extérieur de l'armoire électrique. Eviter les courts-circuits ou les courts-circuits croisés dans les lignes de signalisation! Voir EN ISO 13849.

DANGER

If external forces influence axes that are used with the STO safety function (e.g. hanging load), additional measures must be taken (such as an electromagnetic double-surface spring brake, instead of a permanent magnet brake).

Si des forces externes influencent les axes utilisés avec la fonction de sécurité STO (par ex. charge suspendue), des mesures supplémentaires doivent être prises (par ex. un frein à ressort électromagnétique à double surface au lieu d'un frein à aimant permanent).

WARNING

Hot surface warning!
Physical contact poses a burn hazard!
With unfavorable installation and operating conditions, the surface of the S-DIAS drive module can reach temperatures up to 84 °C and remain hot for some time after operation.

Avertissement de surface chaude !
Le contact physique présente un risque de brûlure !
En cas de conditions d'installation et de fonctionnement défavorables, la surface du module d'entraînement S-DIAS peut atteindre des tempé-ratures allant jusqu'à 84 °C et rester chaude pendant un certain temps après utilisation.

11.1 STO

The DC 061-1(-X) supports the safety functions STO (Safe Torque Off) and meets the requirements for Category 4 Performance Level "e" according to EN ISO 13849-1 and SIL 3 according to EN IEC 62061.

For his purpose, the servo amplifier has two safe inputs ENABLE 1 and ENABLE 2.

The stop brake control is not a component of the safety function. If a safe shutdown of the stop brake is required, the +24 V-BR brake supply must also be shut down externally.

11.2 Function

The safety functions in the DC 061-1(-X) are controlled over two digital inputs.

The following table shows the status that the ENABLE 1 and ENABLE 2 inputs must assume to enable normal operation or trigger the safety function.

Input Status		Description
ENABLE 1	**ENABLE 2**	
Open	Open	**Safe status of the drive system**
Open	Low	
Low	Open	
Low	Low	
Low	High	
High	Low	
High	High	**Drive system ready**

If the ENABLE 1 and ENABLE 2 are changed from any status to the "Drive Ready" status, the servo amplifier is not immediately enabled. In order to set the system to the status “Drive system ready”, a change from “Low-Low” to “High-High” has to be executed. The reason for this is that, for example, sticky contacts of switching devices are detected.

12 Wiring Examples

In the following sub chapters, wiring examples are provided. It must be ensured that all constructive measures etc. are complied with and applied in order to fulfill the requirements of the category used.

12.1 Performance Level e, Category 4 or SIL 3 - Safety PLC

To meet the requirements of category 4, performance Level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, two error-proof output of a Safety PLC must be used. Cross-circuit detection between the two lines via the output tests of the STO 081 is hereby possible.

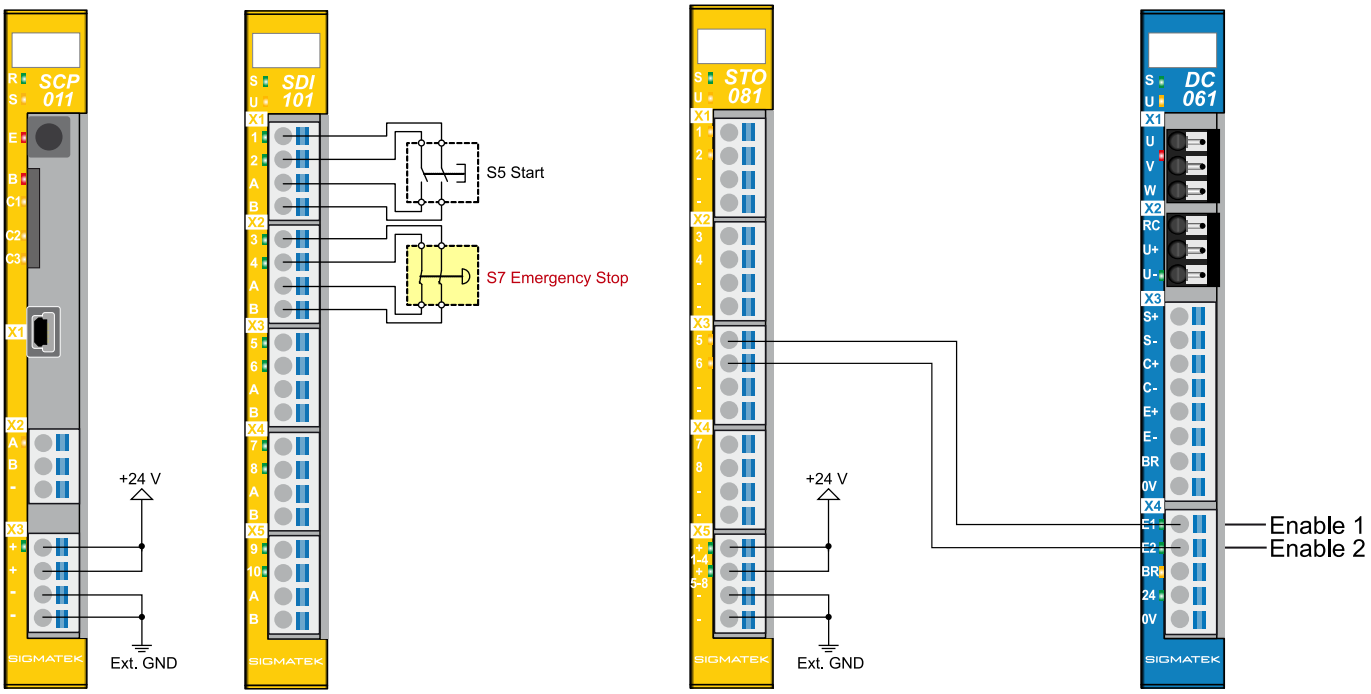

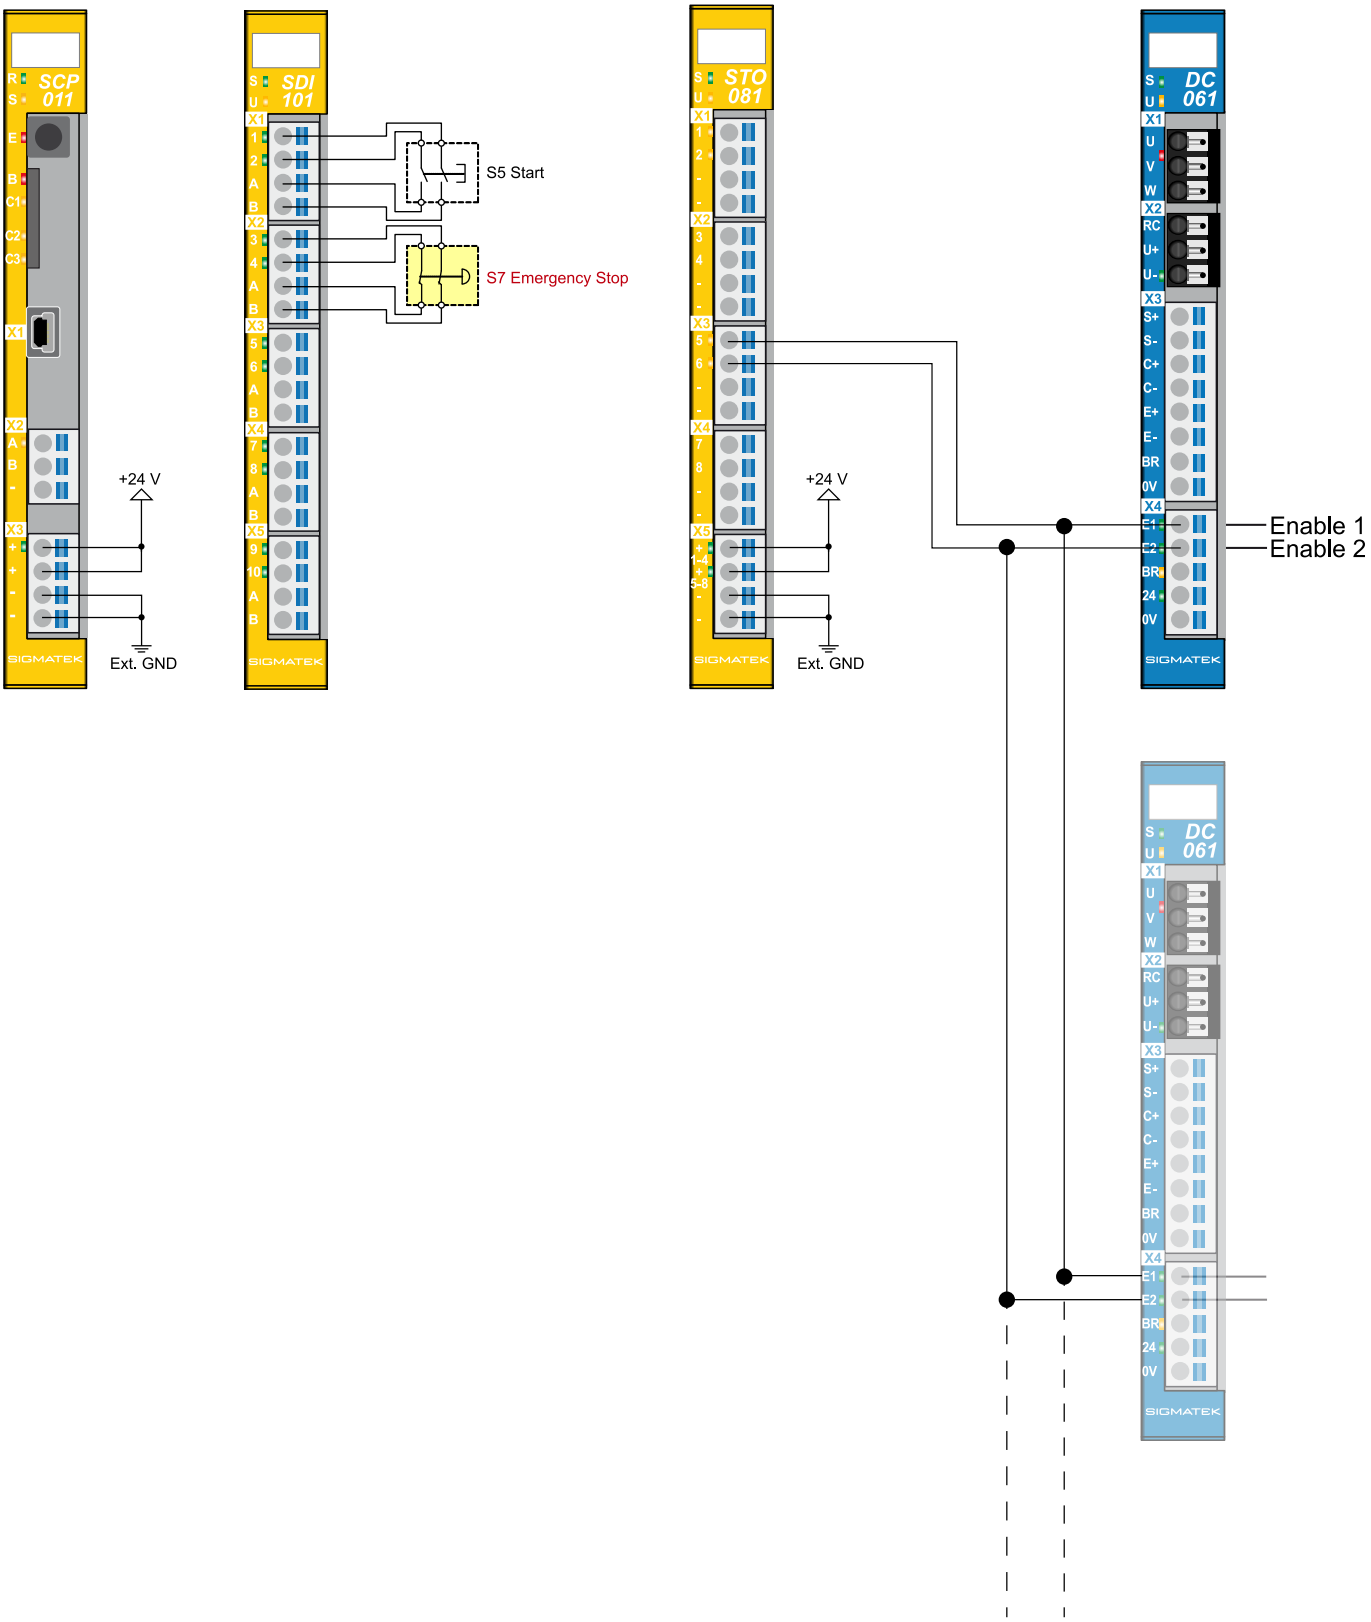
SCP 011
SDI 101
STO 081
DC 061
DC 061
S5 Start
S7 Emergency Stop
+24 V
Ext. GND
+24 V
Ext. GND
Enable 1
Enable 2

12.2 Performance Level e, Category 3 or SIL 3 - Safety PLC

To meet the requirements of safety category 3, performance level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, an error-proof output of a safety PLC must be used. The reason of category 3 here, is that cross-circuit detection between the two lines is not possible. To achieve the stated performance level, a fault exclusion for the wiring is also necessary for this connection. In addition, the wiring must be within the control cabinet.

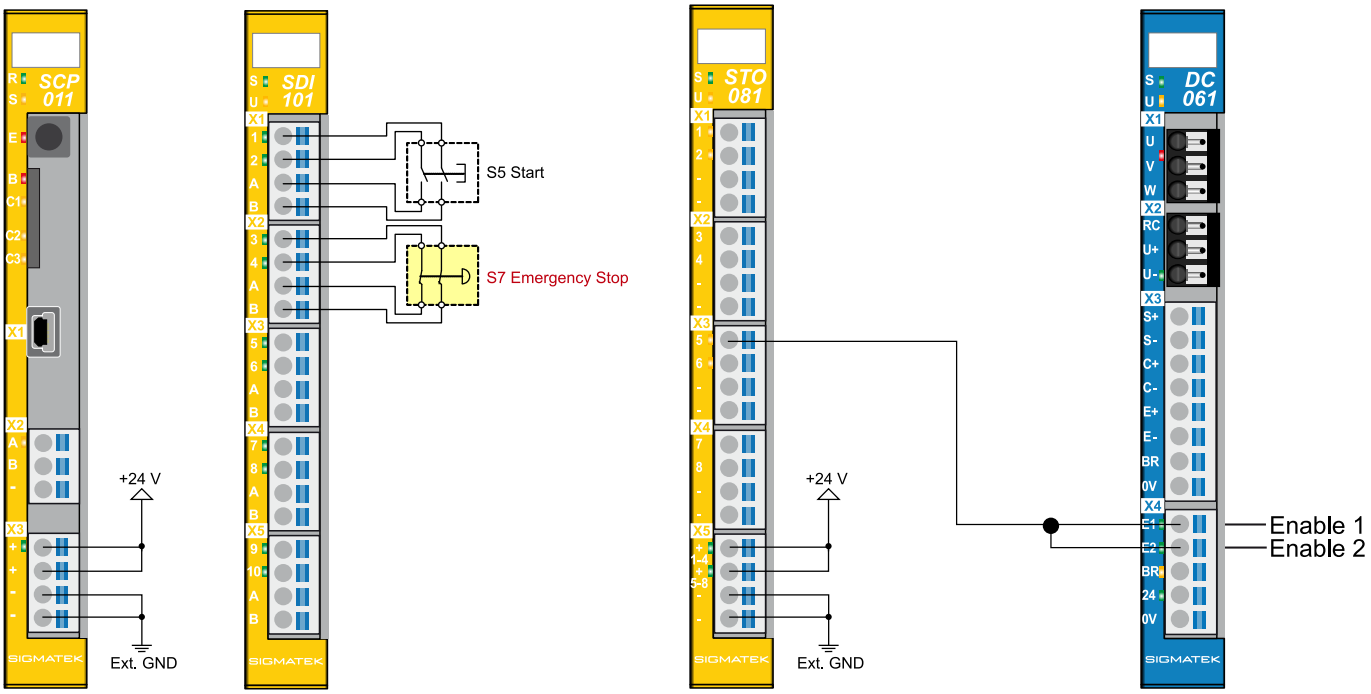

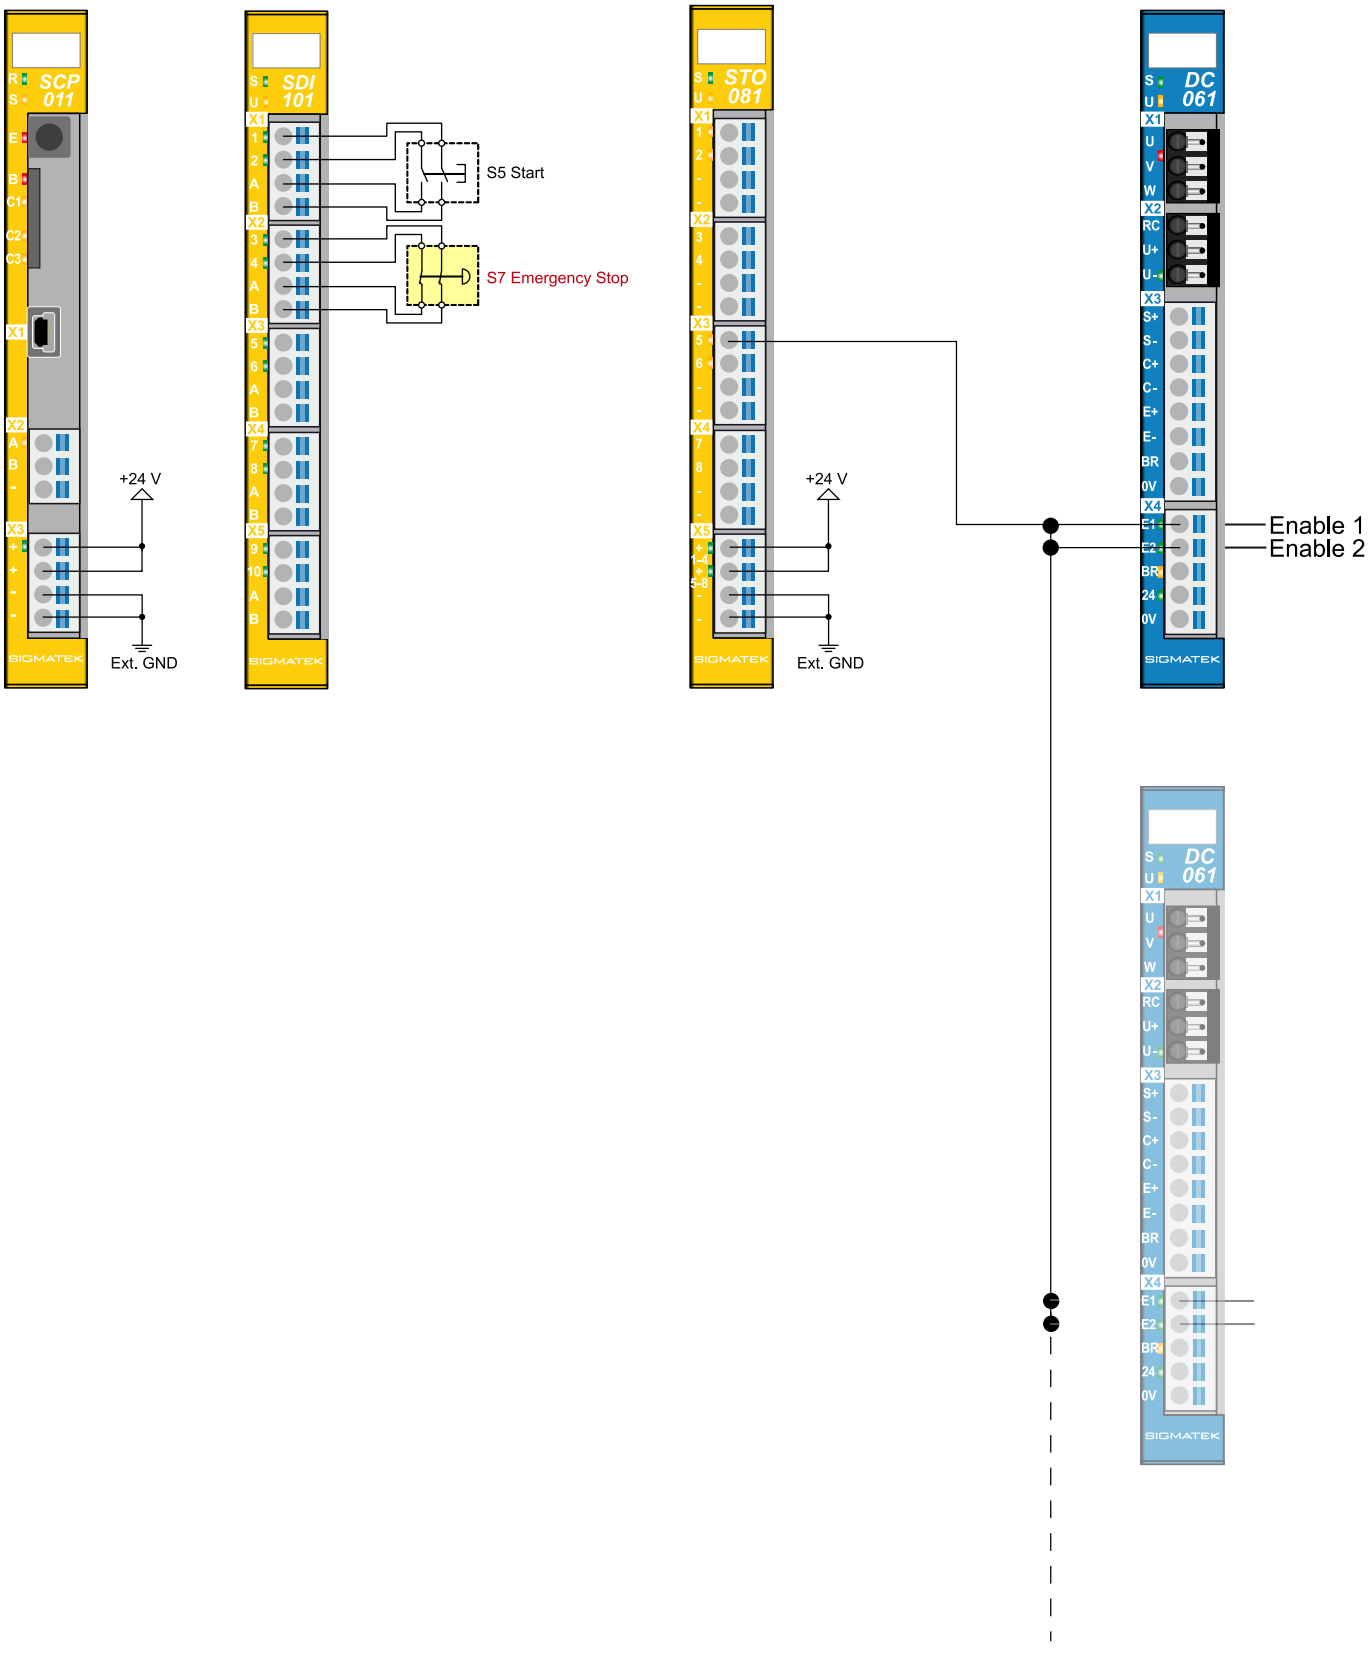
SCP 011
SDI 101
STO 081
DC 061
S5 Start
S7 Emergency Stop
+24 V
Ext. GND
+24 V
Ext. GND
Enable 1
Enable 2
DC 061

12.3 Performance Level e, Category 4 or SIL 3 - Conventional

To meet the requirements of safety category 4, performance level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, the placement of the lines must comply with EN ISO 13849-2, table D.4 (separate placement, prohibiting of error via short circuits between wires) as cross-circuit detection is not possible here.

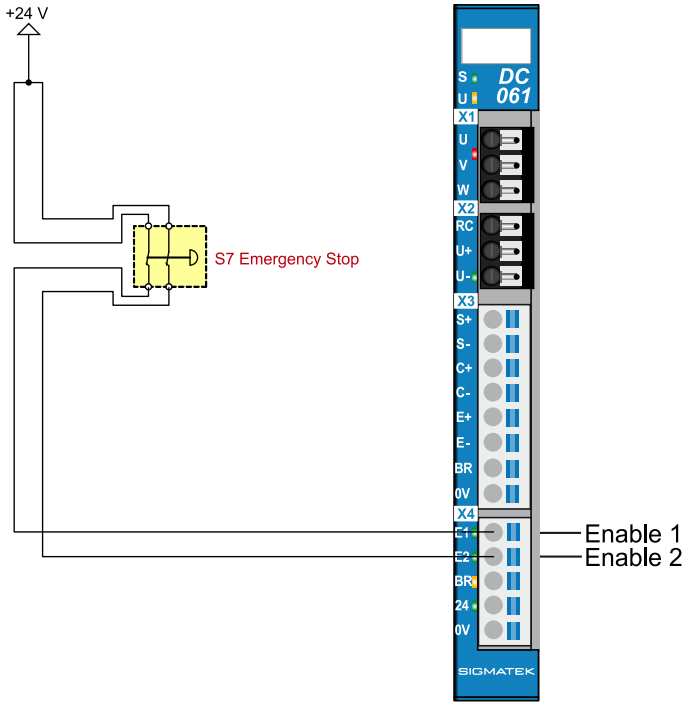

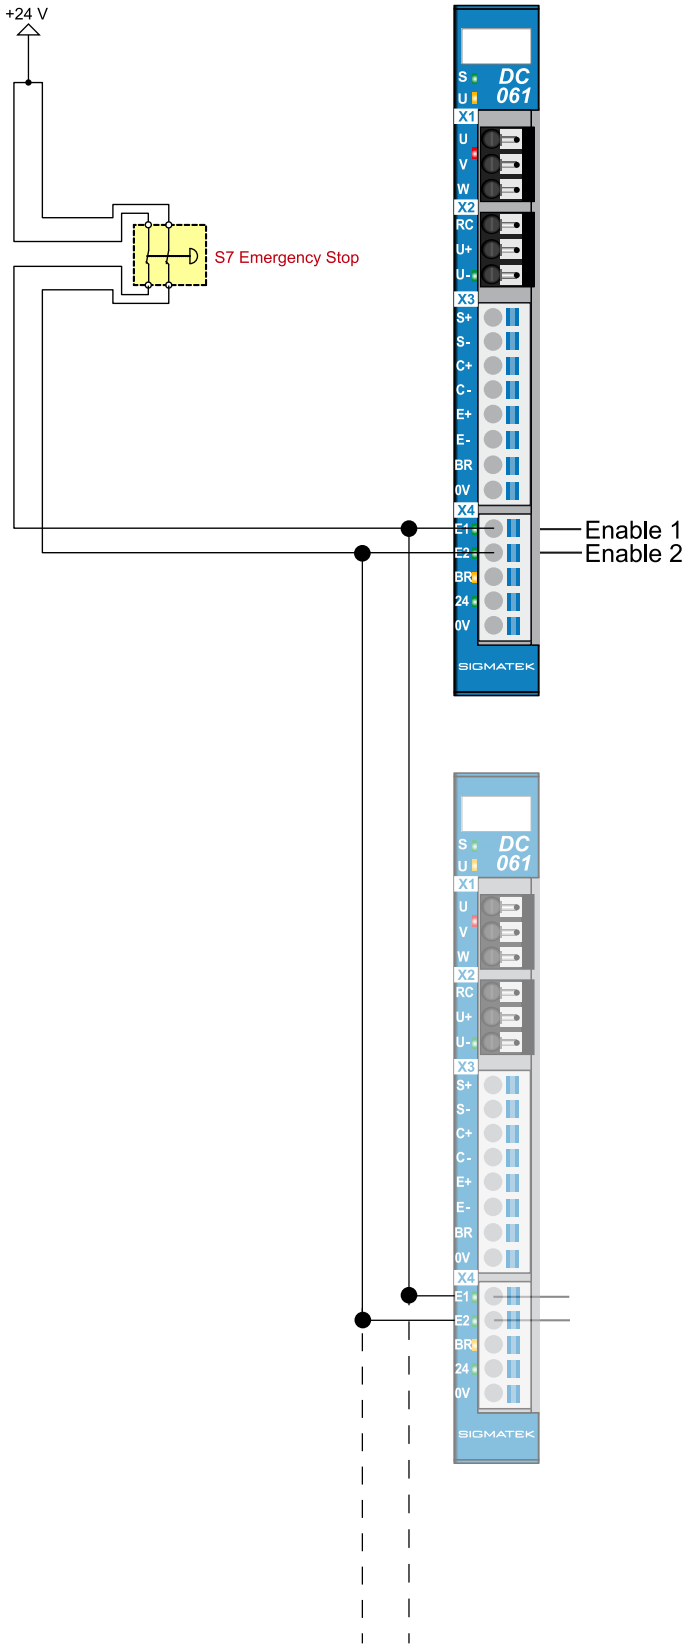
+24 V
S7 Emergency Stop
DC 061
X1
U
V
W
X2
RC
U+
U-
X3
S+
S-
C+
C-
E+
E-
BR
0V
X4
E1
E2
BR
24
0V
SIGMATEK
Enable 1
Enable 2

12.4 Performance Level e, Category 2 or SIL 2 - Conventional

This involves 1-channel wiring, whereby the Enable inputs are tested separately. Here, no cross-circuit detection is possible.

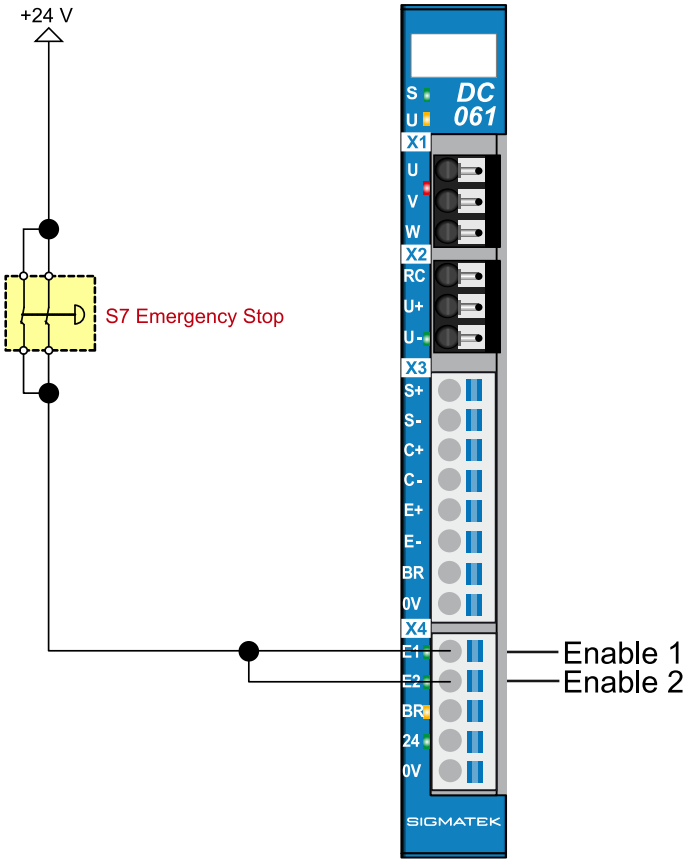

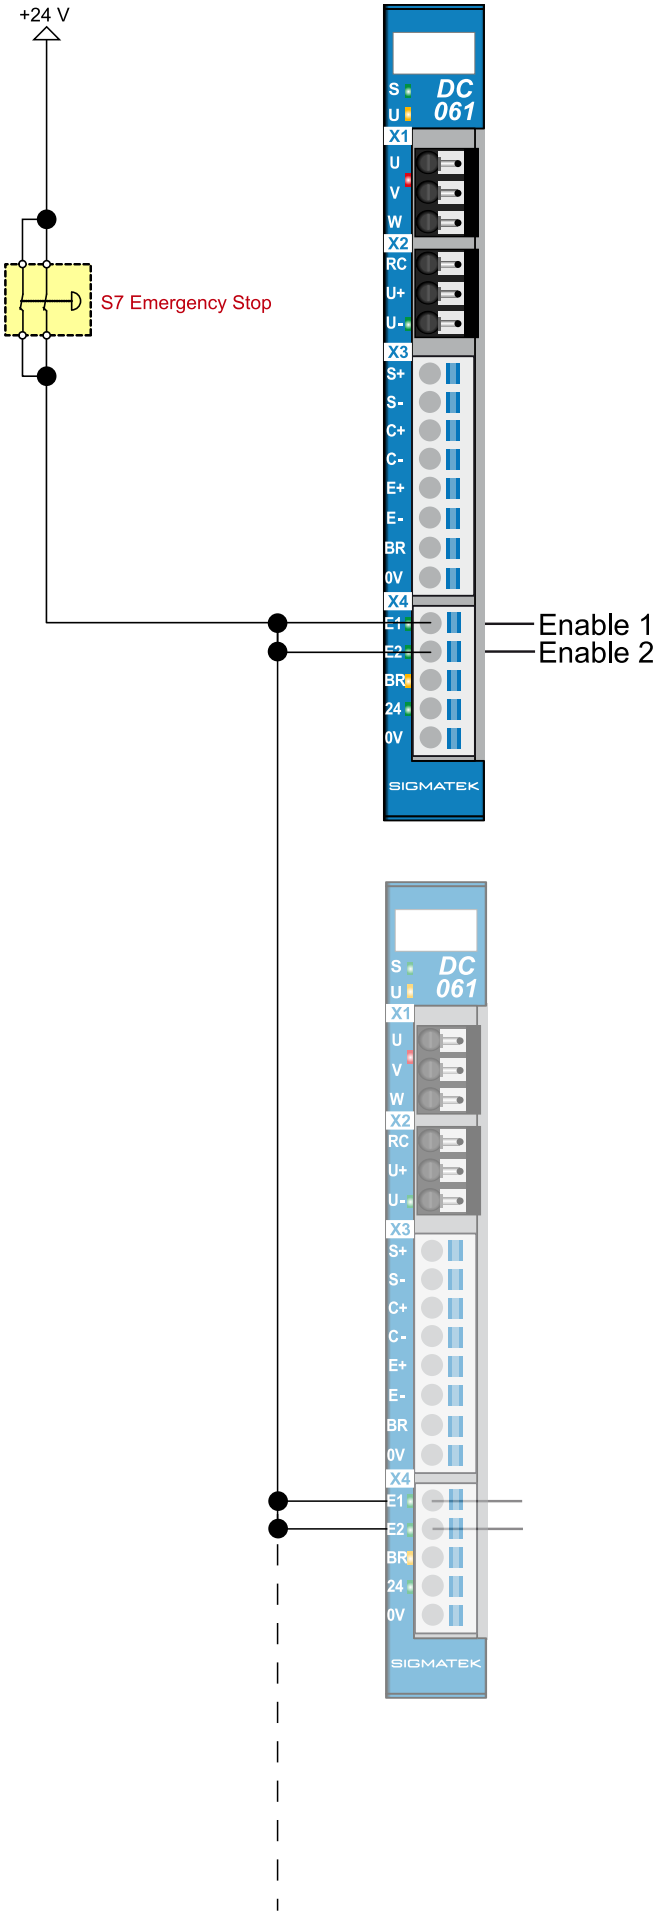
+24 V
S7 Emergency Stop
DC 061
X1
U
V
W
X2
RC
U+
U-
X3
S+
S-
C+
C-
E+
E-
BR
0V
X4
E1
E2
BR
24
0V
SIGMATEK
Enable 1
Enable 2

13 Assembly/Installation

13.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 1.3 Contents of Delivery.

INFORMATION

On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.

Damaged components can disrupt or damage the system.

13.2 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules, a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rai is made via the grounding lug on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation to ensure proper function up to the maximum operating temperature.

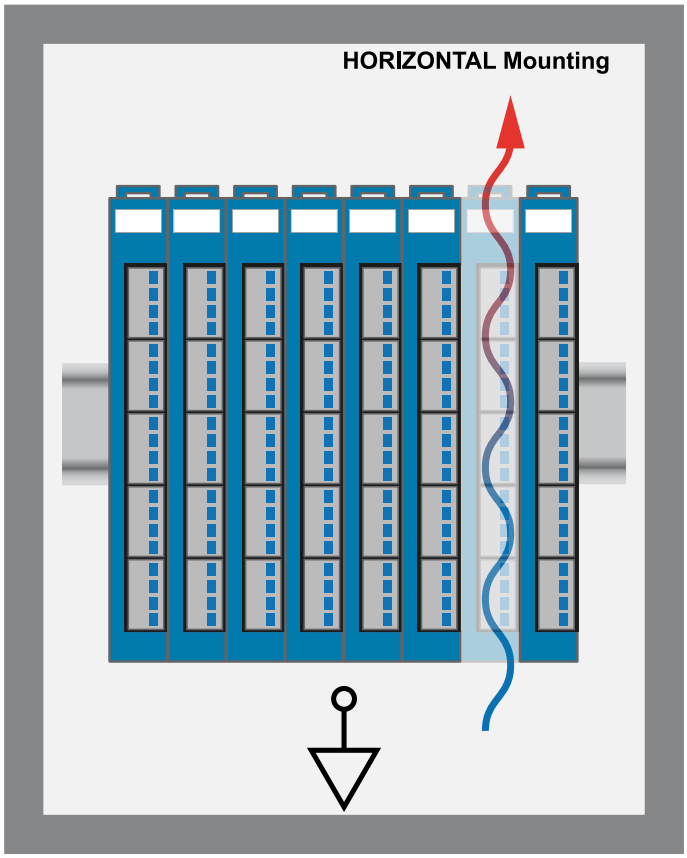

Recommended minimum distances between the S-DIAS modules and the surrounding components or control cabinet wall:

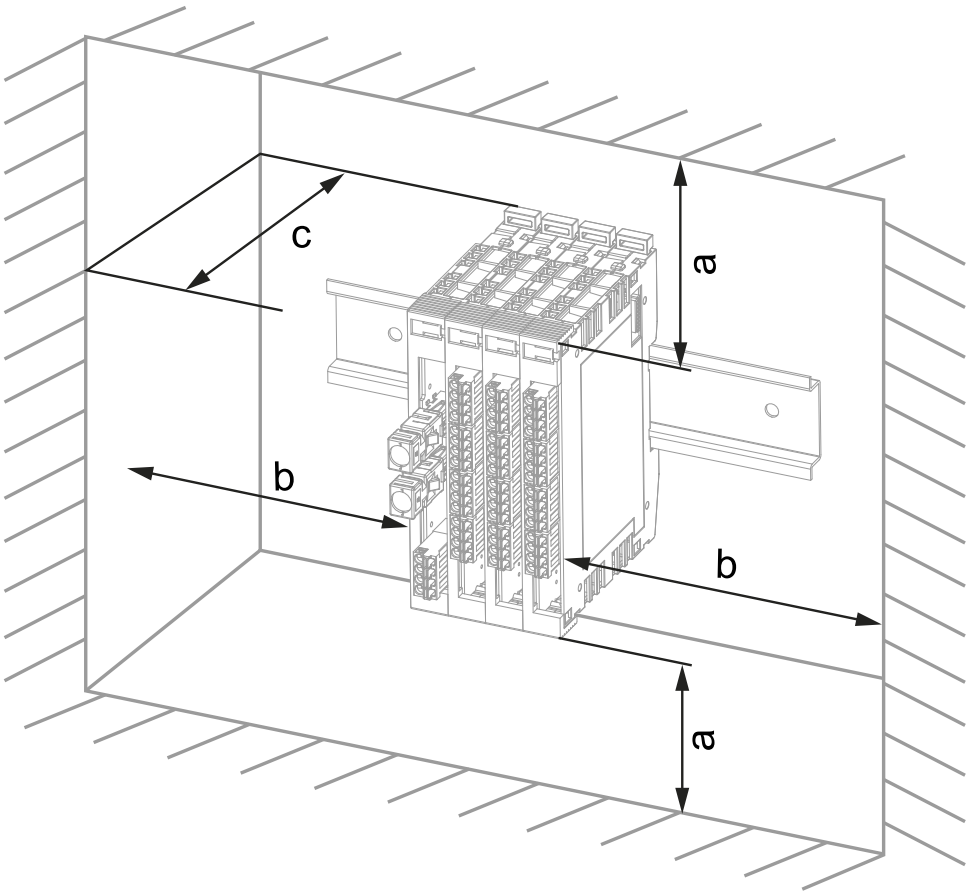

a	b	c
30 mm (1.18″)	**30 mm** (1.18″)	**100 mm** (3.94″)

a, b, c … distances in mm (inches)

14 Transport/Storage

This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

15 Storage

When not in use, store the device according to the storage conditions. See chapter 14 Transport/Storage.

INFORMATION

During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

16 Maintenance

During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

16.1 Service

This product was constructed for low-maintenance operation.

16.2 Repair

In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document.
For transport conditions, see chapter 14 Transport/Storage.

17 Disposal

INFORMATION

Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.

18 Supported Cycle Times

18.1 Cycle Times below 1 ms (in µs)

50	100	125	200	250	500
					x

x = supported

18.2 Cycle Times equal to or higher than 1 ms (in ms)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x = supported

17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x = supported

Changes Chart

Change date	Affected page(s)	Chapter	Note
06.02.2017	17	6.6 Electrical Requirements	Added warning
19.05.2017	27	9.1 Wiring Example	Diagram replaced
17.08.2017	20	6.8 Environmental Conditions	Added operating conditions
17.08.2017	25	8.4 Applicable Connectors	Added info regarding ultrasonically welded strands
18.10.2017	26	8.5 Label Field	Added chapter
	53	13 Assembly/Installation	Graphic replaced
08.11.2017	16	4.2 Wiring AKM Motors	Chapter added
15.12.2017	17	6.6 Electrical Requirements	Note Servo Motor Braking added
31.01.2018	25	8.4 Applicable Connectors	Connections Weidmüller added
04.04.2018	16	6.3 Regen Brake Specifications	“Lowest possible resistance” added
18.06.2018	17	6.6 Electrical Requirements	Notes updated
13.08.2018	17	4.2.1 Wiring AKM Motors with Standard Round Connectors	Chapter added
	18	4.2.2 Wiring AKM Motors with Molex Connectors	Chapter added
29.08.2018	17	4.2 Wiring AKM Motors	Graphics corrected
02.04.2019	13	4.4 Safety-Relevant Parameters	Correction of the safety-relevant parameters
	20	6.8 Environmental Conditions	Corrections environmental conditions
	all		Corrections due to CE
17.07.2019	17	6.5 Holding Brake Specifications	Maximum switch-off energy added
23.08.2019	31	9.4.1 Motor Cable AKM with M23 Round Connectors	Y-Tec added
14.11.2019	59	18 Supported Cycle Times	Chapter added
25.11.2019	20	6.8 Environmental Conditions	Functional security added
	23	5.2 Wiring AKM Motors	Graphics corrected
	13	4.4 Safety-Relevant Parameters	Updated
	41	11 Additional Safety Information	SS1 removed
16.12.2019	22	8 Connector Layout	Kollmorgen - Info Box added

Change date	Affected page(s)	Chapter	Note
20.01.2020	15	6.1 Motor Driver Specifications	Operating voltage changed
	15	6.2 Resolver Specifications	Output frequency changed
	17	6.6 Electrical Requirements	Supply voltage changed
	24	5.2 Wiring AKM Motors	Graphics corrected
	30	9.4 Servo Motor and Encoder Cables	Info added
	40	10 Motor Overload Protection	Motor overtemperature added
29.01.2020	30	9.4 Servo Motor and Encoder Cables	Change at Minimum bending radius
03.06.2020	22	8 Connector Layout	Cable description extended/pin assignment for encoder cable extended
08.09.2020	42	15 Hardware Class DC 061-1(-X)	Chapter added
04.11.2020	53	13 Assembly/Installation	Expansion functional ground connection
28.01.2021	15	6.1 Motor Driver Specifications	PWM frequency added
12.03.2021	25	8.4 Applicable Connectors	Stripping length corrected
23.04.2021	17	6.4 Enable Inputs Specifications	Output test signal Control added
04.05.2021	20	6.7 Miscellaneous	Article number -X added
17.09.2021	17	6.6 Electrical Requirements	Note for cable lengths added
05.12.2023	5	1 Introduction	DC 061-1(-X) added
05.12.2023	11	3 IT Security	Chapter added
	20	6.7 Miscellaneous	Mission time and Reaction time added
	20	6.8 Environmental Conditions	Noise emissions added
	23	8.2 Connector Layout Baumüller	Baumüller - M-ROFF explained in more detail
	59	18 Supported Cycle Times	Description added
		15 Hardware Class DC 061-1(-X)	Chapter deleted
01.02.2024	13	4.3.2 EU Declaration of Conformity	Donwload instructions adapted
01.02.2024	13	4.4 Safety-Relevant Parameters	The safety indicators (PFH, $MTTF_D$) were adjusted slightly with the recertification.
21.02.2024			Product name adjusted
21.02.2024			Hyperlinks adjusted

Change date	Affected page(s)	Chapter	Note
15.04.2024	29	9.3 Wiring SIGMATEK Motors	Wiring for motor and resolver changed
	37	9.4.4 Encoder Cable with M23 Round Connectors	Encoder Cable with M23 Round Connectors
	38	9.4.5 Encoder Cable with Y-Tec Connectors	Encoder Cable with Y-Tec Connectors
	39	9.4.6 Encoder Cable with Molex Connectors	Encoder Cable with Molex Connectors
15.05.2026	41	11 Additional Safety Information	Info cable changed
23.10.2026	41	11 Additional Safety Information	Chapter Function Test deleted