

SV 142

S-DIAS Splitter VARAN

Technical Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2019
SIGMATEK GmbH & Co KG

Translation from German

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

S-DIAS Splitter VARAN

SV 142

with 1 VARAN In 4 VARAN Out

With its four VARAN Out ports, the VARAN SV 142 S-DIAS splitter module allows a VARAN bus system to be configured in a tree structure.

The SV 142 has the same form as S-DIAS, so that it can be mounted on a DIN rail with S-DIAS modules.

The VARAN Out ports have a +24 V supply for the VARAN bus, which can be switched via the software. With this supply, special VARAN peripheral devices can be connected to the SV 142 and supplied with +24 V without an additional power cable.

The VARAN Out port has automatic Ethernet detection. If one of the ports is connected to an Ethernet participant, it is automatically made an Ethernet port.

As soon as a VARAN Out port has changed to Ethernet, this function is blocked for all other VARAN Out ports.

Incoming Ethernet packets are, similar to using a HUB, distributed to all other Ethernet ports in the VARAN bus system and the VARAN Manager (and therewith the CPU as well) with VtE.

To connect a simulation computer in real time, the SV 142 has an optional real-time Ethernet port.



Contents

1	Introduction	5
1.1	Target Group/Purpose of this Manual	5
1.2	Important Reference Documentation	5
1.3	Contents of Delivery	5
2	Basic Safety Guidelines	6
2.1	Symbols Used	6
2.2	Disclaimer	7
4	Technical Data	10
4.1	Performance Data	10
4.2	Electrical Requirements	10
4.3	Miscellaneous	11
4.4	Environmental Conditions	11
5	Mechanical Dimensions	12
6	ESD Protection	13
7	Connector Layout	14
7.1	Front View.....	14
7.1.1	Status LEDs.....	15
7.1.2	Connectors	15
7.1.3	VARAN Wiring Guidelines	16
7.2	Top View	17

7.3	Applicable Connectors.....	17
7.4	Applicable Connector Cables.....	19
7.5	Label Field	20
8	Strain Relief	21
9	Real-time Ethernet.....	22
10	Recommended Shielding for VARAN	23
10.1	Wiring from the Control Cabinet to an External VARAN Component.....	24
10.2	Wiring Outside of the Control Cabinet	25
10.3	Shielding for Wiring Within the Control Cabinet	26
10.4	Connecting Noise Generating Components	27
10.5	Shielding Between Two Control Cabinets	28
11	Transport/Storage	29
12	Mounting	30
12.1	Thermal Requirements.....	30
12.2	S-DIAS Assembly.....	31
13	Maintenance.....	32
13.1	Service	32
13.2	Repair.....	32
14	Disposal	33

15	Hardware Class SV142	34
15.1	General.....	35
15.2	VARAN Ports.....	37
15.3	Global Methods.....	38
15.4	Required VARAN Data Objects	39
15.5	Example	40
15.6	Setting Examples.....	43
15.7	Transparent Mode.....	44
15.7.1	No transparent module	46
15.7.2	VSV Transparent.....	46
15.7.3	CIV Transparent	47

1 Introduction

1.1 Target Group/Purpose of this Manual

This manual contains all information required for operating the SV 142.

This manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

- Design specification VARAN

These documents can be downloaded from our website or obtained through SIGMATEK Support.

1.3 Contents of Delivery

1x SV 142
1x opposing connector

This document can be downloaded from our website.
Additional documents may be included with delivery.

2 Basic Safety Guidelines

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes:

DANGER



Identifies an immediate danger with high risk, which **will** lead to immediate death or serious injury if not avoided.

WARNING



Identifies a possible danger with a mid-level risk, which **can** lead to death or (serious) injury if not avoided.

CAUTION



Identifies a low risk danger, which can lead to injury or property damage if not avoided.



Provides user tips, informs of special features and identifies especially important information in the text.



Danger for ESD-sensitive components

2.2 Disclaimer



The contents of this document were prepared with the greatest care. However, deviations cannot be ruled out. This document is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current document can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following documentation is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding data sheets, operating instructions and this system handbook before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through non-compliance with these instructions or applicable regulations.

The general and special safety instructions described in the following sections, as well as technical regulations, must therefore be observed.

2.3 General Safety Guidelines



According to EU Guidelines, the operating instructions are a component of a product.

This manual must therefore be accessible in the vicinity of the machine since it contains important instructions.

This technical documentation should be included in the sale, rental or transfer of the product, or its online availability indicated.

Maintain this manual in readable condition and keep it accessible for reference.

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION



Handle the device with care and do not drop or let fall.

Prevent foreign bodies and fluids from entering the device.

The device must not be opened, otherwise it could be damaged!

3 Residual Risks

3.1 Guidelines

The panel was constructed in compliance with European Union guidelines.

3.1.1 EU Declaration of Conformity



CE Declaration of Conformity

The SV 142 conforms to the following European guidelines:

- **2014/35/EU** Low-voltage guideline
- **2014/30/EU** “Electromagnetic Compatibility” (EMC guideline)
- **2011/65/EU** “Restricted use of certain hazardous substances in electrical and electronic equipment” (RoHS Guideline)

The EU Conformity Declarations are provided on the SIGMATEK website. See Products/Downloads or use the search function and the keyword “EU Declaration of Conformity”.

4 Technical Data

4.1 Performance Data

Interfaces	<p>1x VARAN In (Tyco Mini I/O)</p> <p>4x VARAN Out (Tyco Mini I/O), +24 V switchable over VARAN, 500 mA per port (therefrom, optional 1x Ethernet (Vte) or real-time Ethernet)</p> <p>(maximum cable length: 100 m)</p>
------------	---

4.2 Electrical Requirements

Supply voltage	<p>+18-30 V DC UL: Class 2 or LVLC⁽¹⁾</p>
Current consumption of +24 V power supply	<p>typically 0.25 A internal electronics supply VARAN Out port load (maximum 2 A)</p>

⁽¹⁾ Limited Voltage/Limited Current



⁽¹⁾ The device must be connected to a secondary galvanically separated supply with a rated voltage of 24 V DC. In compliance with UL 249, max. 4 A, the fuse must be connected in the area between the supply source and the end device.


4.3 Miscellaneous

Article number	20-023-142
Hardware version	1.x
Standard	UL 508 (E247993)
Approvals	CE

4.4 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +50 °C	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating, > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
EMC resistance	in accordance with EN 61000-6-2 (industrial area)	
EMC noise generation	in accordance with EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g
Protection type	EN 60529	IP20

5 Mechanical Dimensions

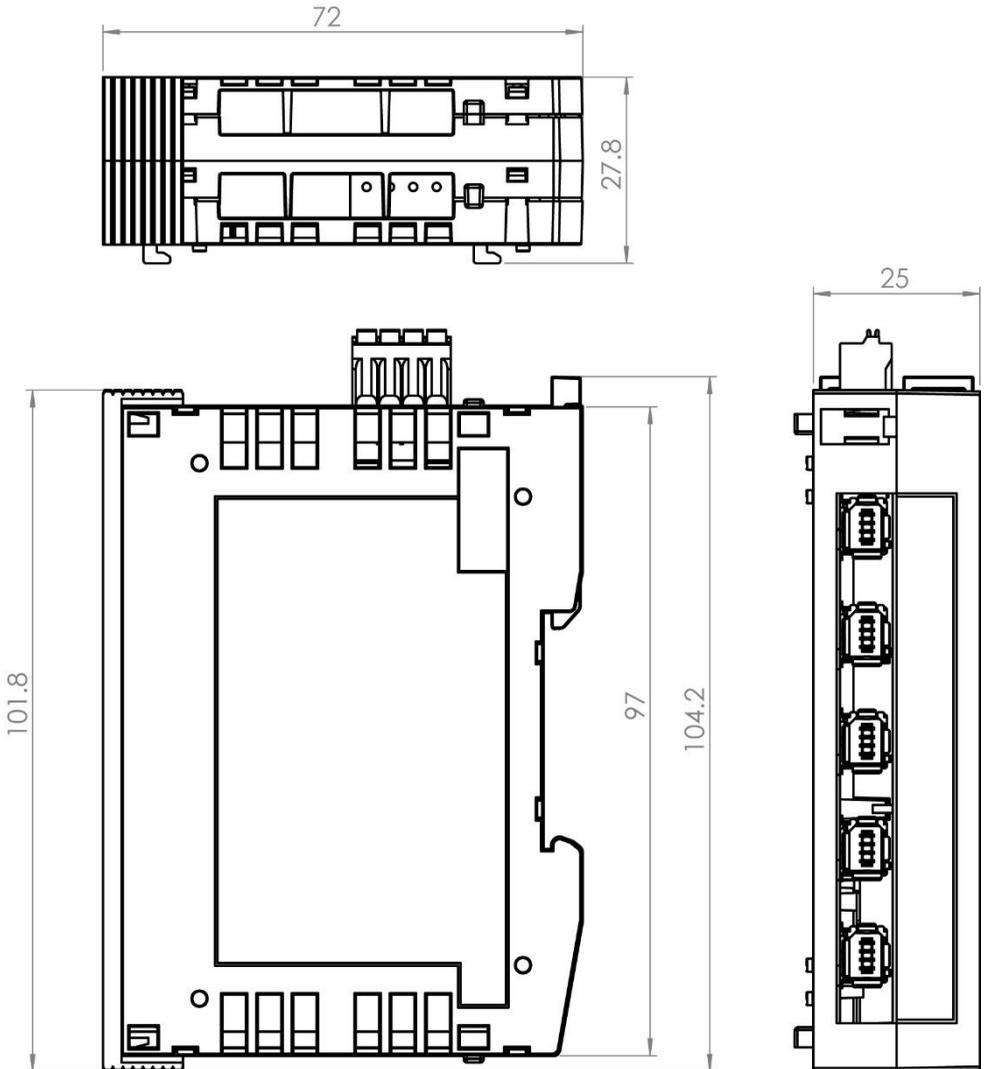


6 ESD Protection



Before any device is connected to or disconnected from the SV 142, the potential with ground should be equalized (by touching the control cabinet or ground terminal). Electrostatic loads (through clothing and shoes) can thereby be dissipated.

7 Connector Layout

7.1 Front View

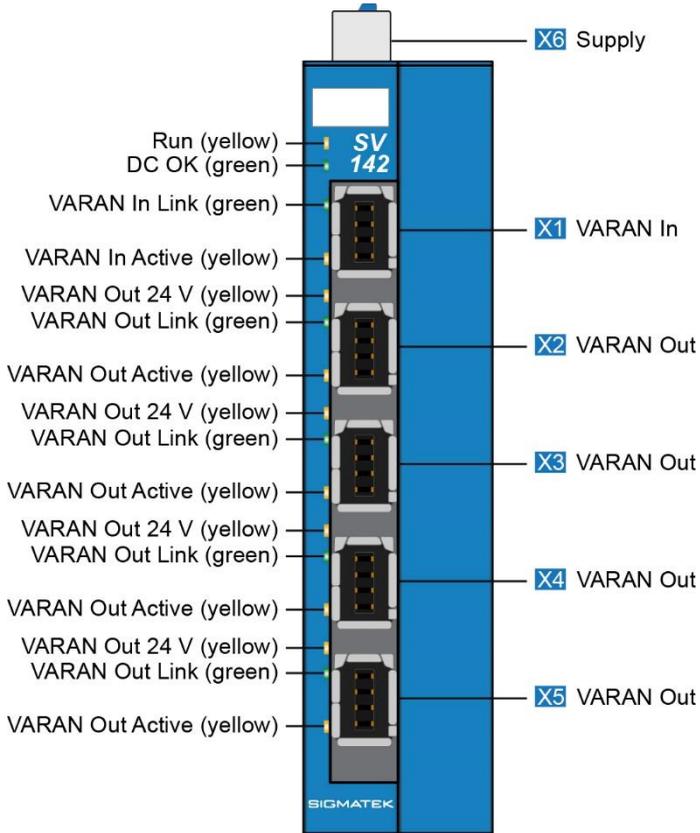


7.1.1 Status LEDs

Run	yellow	LIGHTS	VARAN PLL locked
DC OK	green	LIGHTS	module is supplied with a voltage > 18 V
VARAN In Link	green	LIGHTS	connection between both PHYs made
		BLINKS	VARAN In of the primary client has no link
VARAN In Active	yellow	LIGHTS	data is exchanged over the VARAN bus
VARAN Out Link	green	LIGHTS	connection between both PHYs made
		BLINKS	there is no connection between VARAN In and the primary client
VARAN Out Active	yellow	LIGHTS	data is exchanged over the VARAN bus
VARAN Out 24 V	yellow	LIGHTS	24 V supply to VARAN Out port is on

7.1.2 Connectors


7.1.2.1 X1: VARAN In (Industrial Mini I/O)

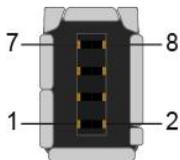

Pin	Function
1	Tx+/Rx+
2	Tx-/Rx-
3	Rx+/Tx+
4	n.c.
5	n.c.
6	Rx-/Tx-
7	n.c.
8	n.c.

n.c. = do not use

7.1.2.2 X2-X5: VARAN Out (Industrial Mini I/O)

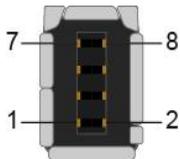

Pin	Function
1	Tx+/Rx+
2	Tx-/Rx-
3	Rx+/Tx+
4	+24 V out
5	+24 V out
6	Rx-/Tx-
7	GND
8	GND

n.c. = do not use



24 V / 500 mA per VARAN-Out port (switchable)

More information on the VARAN bus can be found in the VARAN bus specifications!

7.1.3 VARAN Wiring Guidelines

Since the components are supplied with power through VARAN, the maximum cable length (without new 24 V supply is highly dependent on the cross section of the VARAN cable and the number of connected modules.



The voltage can be supplied (switchable via the software) to the following modules over the RJ45 connector of the VARAN Out port.


This does NOT comply with the VARAN specification.

The supply voltage of the VARAN Out port to the SV 142 can only then be turned on when the respective port is connected to a VARAN module that is suited of a 24 V supply (e.g.: PVDM 08x, PVAI 011, VEB 02x,...).

CAUTION!

VARAN modules, which are not suitable for the supply over VARAN, can be damaged when connected to modules with an active power supply.

7.2 Top View

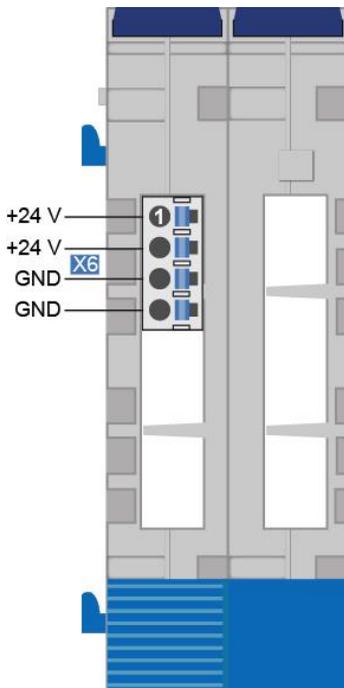

The connections of the +24 V supply (X6: Pin 1 and Pin 2) or the GND supply (X6: Pin 3 and Pin 4) are internally bridged. To supply the module, only one +24 V pin (pin 1 or pin 2) and one GND pin (pin 3 or pin 4) must be connected. The bridged connections may be used to loop the +24 V supply and the GND supply. However, it must be ensured that the total current of 4 A per connection is not exceeded by the looping on!

7.3 Applicable Connectors

Connectors:


X1-X5: Industrial Mini I/O Plug Type 1 Lock Extend Version (not included in delivery)

X6: Connectors with spring terminals (included in delivery)

The spring terminals are suitable for the connection of ultrasonically compressed (ultrasonically welded) strands.

Connections:

Stripping length/sleeve length:	10 mm
Mating direction:	parallel to the conductor axis or circuit board
Conductor cross section rigid:	0.2-1.5 mm ²
Conductor cross section flexible:	0.2-1.5 mm ²
Conductor cross-section strands ultrasonically compacted:	0.2-1.5 mm ²
Conductor cross section AWG/kcmil:	24-16
Conductor cross section flexible with ferrule without plastic sleeve:	0.25-1.5 mm ²
Conductor cross section flexible with ferrule with plastic sleeve:	0.25-0.75 mm ² (reason for reduction d2 of the ferrule)

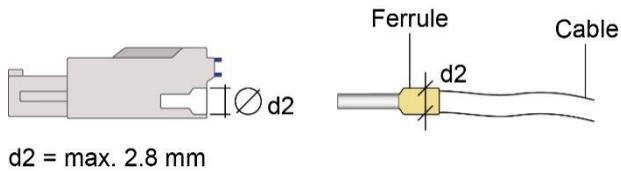

7.4 Applicable Connector Cables


VARAN

Cable type	Length	Article number
RJ45 on industrial Mini I/O Type 1, drag chain capable	0.5 m	16-911-005
	1 m	16-911-010
	1.5 m	16-911-015
	2 m	16-911-020
	3 m	16-911-030
	5 m	16-911-050
	10 m	16-911-100
	20 m	16-911-200
	50 m	16-911-500
Industrial Mini I/O Type 1 on industrial Mini I/O Type 1, drag chain capable	0.5 m	16-912-005
	1 m	16-912-010
	1.5 m	16-912-015
	2 m	16-912-020
	3 m	16-912-030
	5 m	16-912-050
	10 m	16-912-100
	20 m	16-912-200




With the cable types listed, only the wires for VARAN are without 24 V/GND supply.

7.5 Label Field

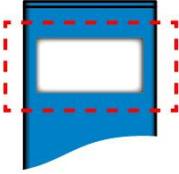

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Article number Weidmüller	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Article number Weidmüller	1324380000

8 Strain Relief

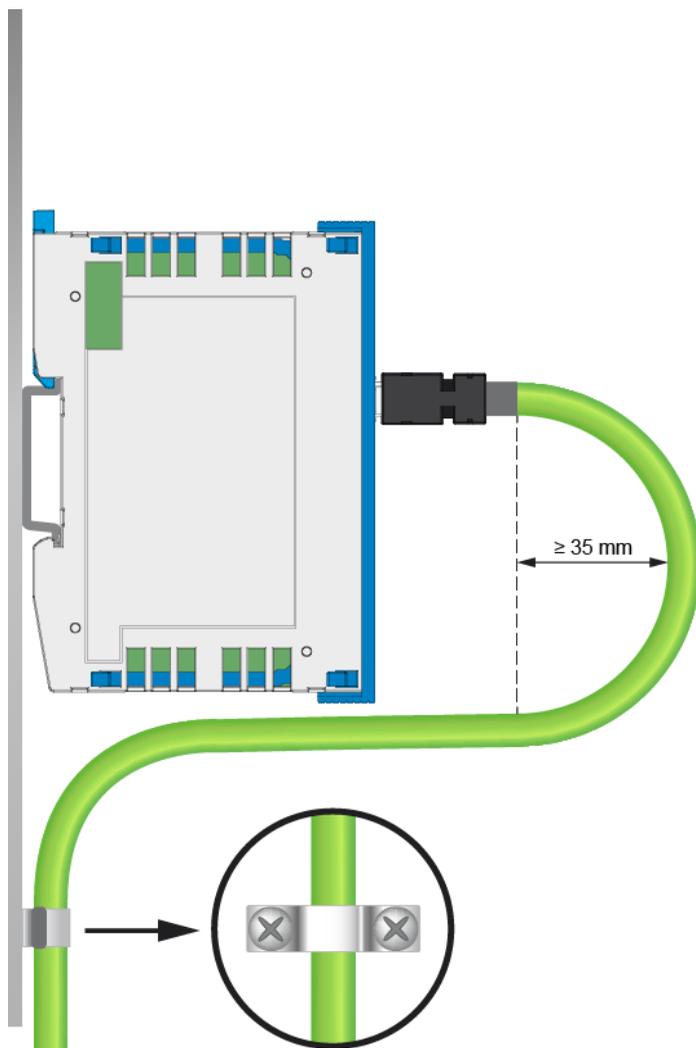


The cable must be mounted close to the module (e.g. using a clamp)! No mechanical stress can be applied to the connection!

9 Real-time Ethernet

To connect a simulation computer in real time, the SV 142 has an optional real-time Ethernet port.

The applicable real-time Ethernet port is defined through the HW class (VARAN Out Port 1-4).

The simulation computer is connected directly to the port defined in the HW class. With an active application, the real-time simulation data can now be exchanged between the simulation computer and the CPU via the VARAN bus. To avoid disruptions by the network participants, the simulation computer and VSV 142 must be connected directly.

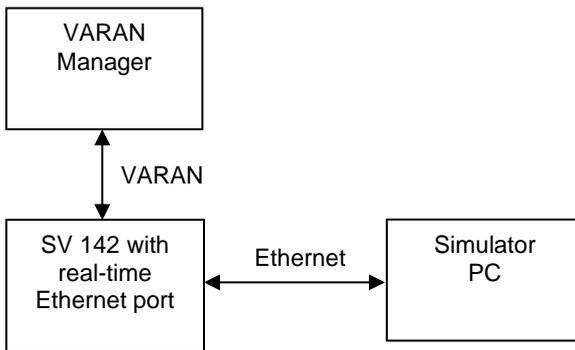

As soon as the real-time Ethernet port is activated by the HW class, the normal Ethernet port (VtE) is no longer available in the SV 142.

10 Recommended Shielding for VARAN

The VARAN real-time Ethernet bus system exhibits a very robust quality in harsh industrial environments. Using IEEE 802.3 standard Ethernet physics, the potentials between an Ethernet line and sending/receiving components are separated. In the event of an error, the VARAN Manager resends messages to a bus participant immediately. The shielding described below is mainly recommended.

For applications in which the bus is operated outside the control cabinet, the correct shielding is required. This is especially important, if due to physical requirements, the bus cables must be placed next to sources of strong electromagnetic noise. It is recommended to avoid placing VARAN bus lines parallel to power cables whenever possible.

SIGMATEK recommends the use of CAT5e industrial Ethernet bus cables.

An S-FTP cable should be used for the shielding.


An S-FTP bus is a symmetric, multi-wire cable with unshielded pairs. For the entire shielding, a combination of foil and braiding is used. A non-laminated variant is recommended.



The VARAN cable must be secured at a maximum distance of 20 cm from the connector to protect against vibration!


10.1 Wiring from the Control Cabinet to an External VARAN Component

If the Ethernet lines are connected from a VARAN component to a VARAN node located outside the control cabinet, the shielding should be placed at the entry point of the control cabinet housing. All noise can then be deflected from the electronic components before reaching the module.

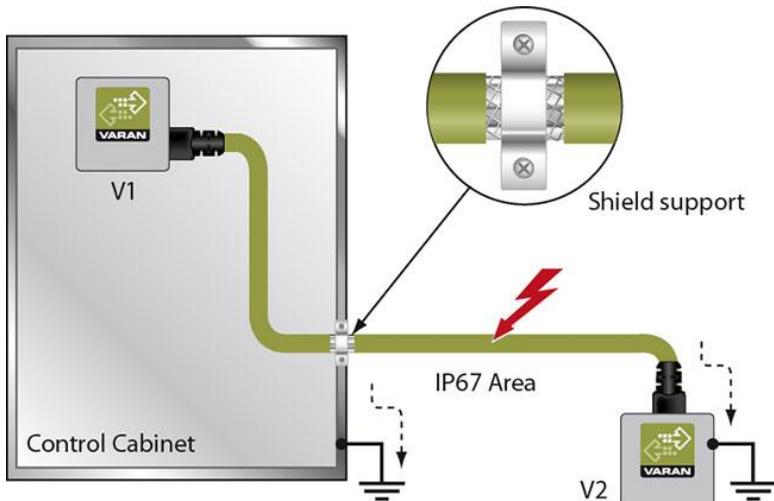


10.2 Wiring Outside of the Control Cabinet

If a VARAN bus line must be connected outside of the control cabinet only, no additional shield support is required. A requirement therefore, is that only IP67 modules and connectors can be used outside the control cabinet. These components are very robust and noise resistant. The shielding for all sockets in IP67 modules are electrically connected internally or over the housing, whereby voltage spikes are not dissipated through the electronics.

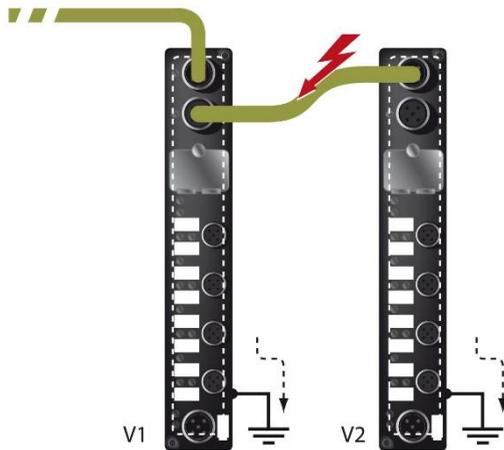


10.3 Shielding for Wiring Within the Control Cabinet

Sources of strong electromagnetic noise located within the control cabinet (drives, Transformers, etc.) can induce interference in a VARAN bus line. Spike voltages are deflected over the metallic housing of a RJ45 connector. Noise is conducted through the control cabinet housing without further action from the electronic components. To eliminate sources of noise during data exchange, it is recommended that the shielding for all electronic components be connected within the control cabinet.

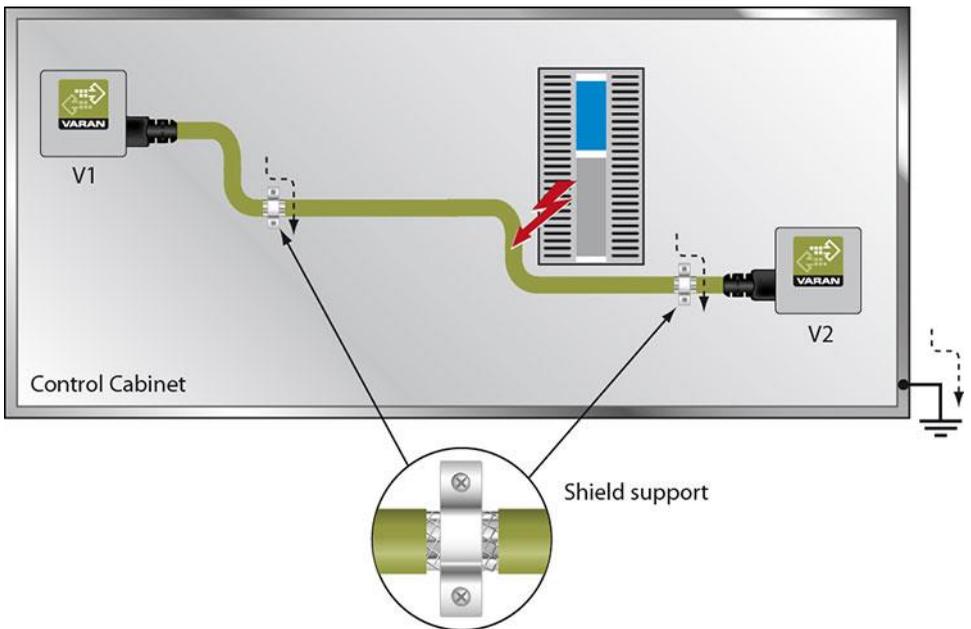


10.4 Connecting Noise Generating Components

With the connection of power components that generate strong electromagnetic interference, it is also critical to ensure correct shielding. The shielding should be placed before a power element (or group of power elements).

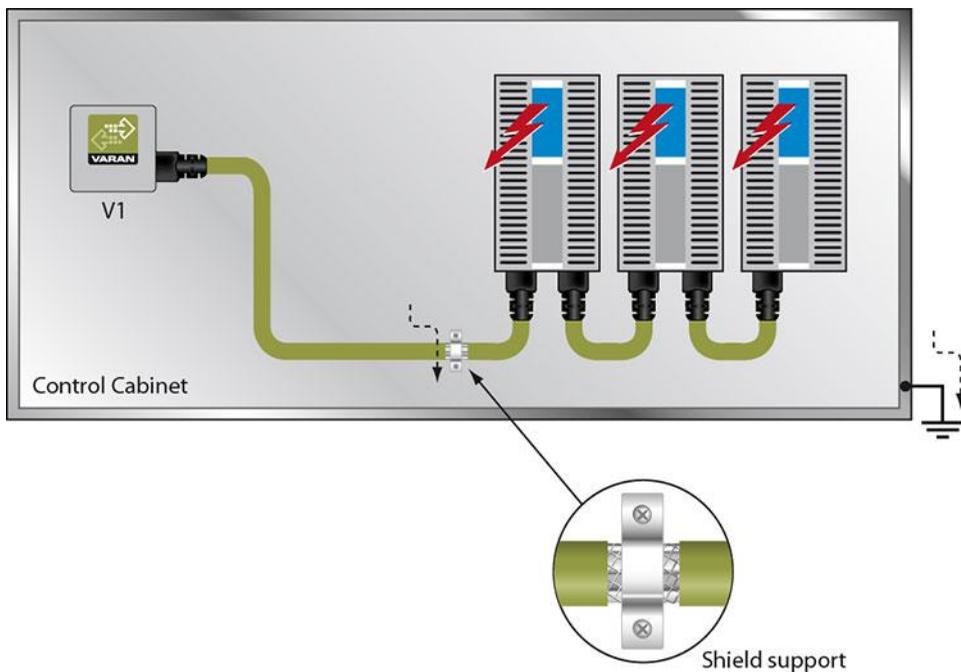

10.5 Shielding Between Two Control Cabinets

If two control cabinets must be connected over a VARAN bus, it is recommended that the shielding be located at the entry points of both cabinets. Noise can be thereby prevented from reaching the electronics within the control cabinet.

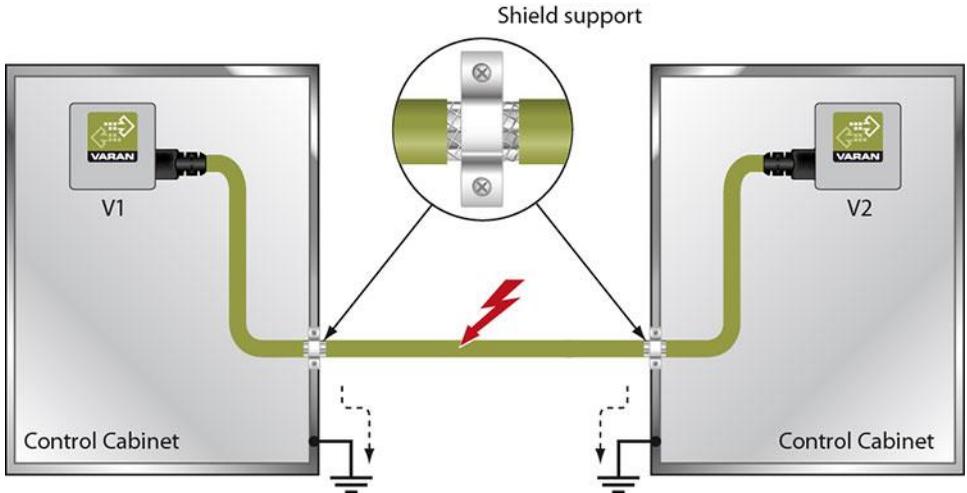

11 Transport/Storage



This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

CAUTION




During transport, temperature and humidity fluctuations may occur. Ensure that no moisture condenses in or on the device.


12 Mounting

12.1 Thermal Requirements

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules, a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding clamp on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation, so that proper function up to the maximum operating temperature is ensured.

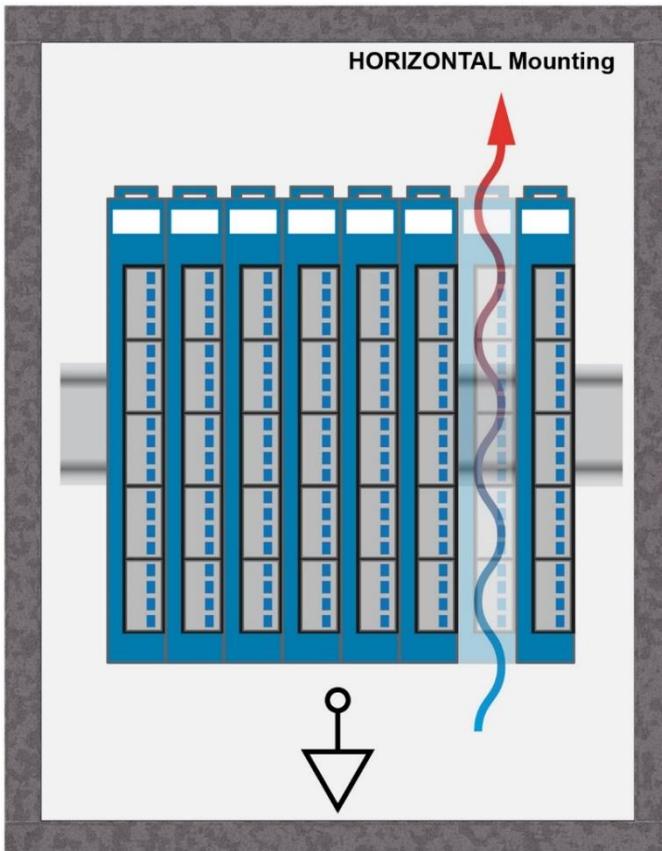

Recommended minimum distances of the S-DIAS modules to the surrounding components or control cabinet wall:

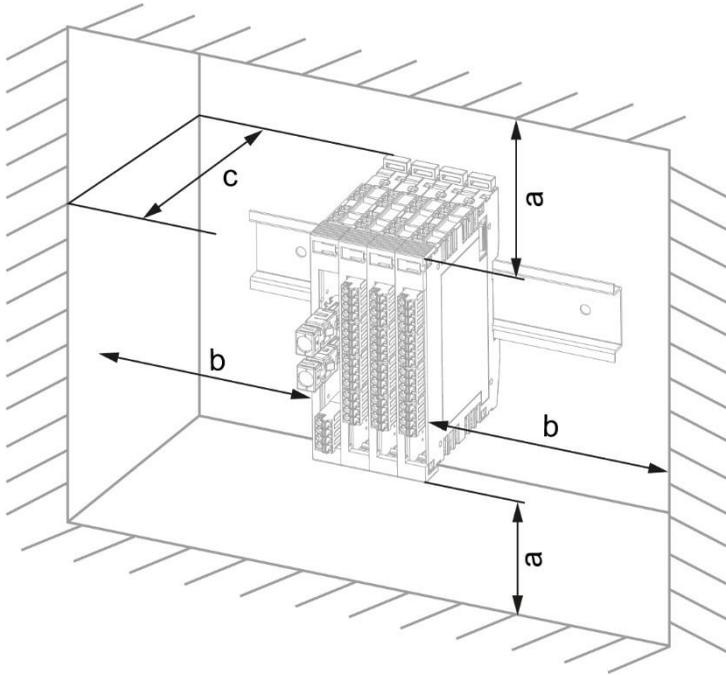

a	b	c
30 mm (1.18")	30 mm (1.18")	100 mm (3.94")

a, b, c ... distances in mm (inches)

12.2 S-DIAS Assembly

The SV 142 has no S-DIAS functions and does not extend the S-DIAS bus.



The SV 142 must be mounted at the beginning or end of an S-DIAS module block, so the S-DIAS bus of the module block is not interrupted.

13 Maintenance

WARNING



During maintenance as well as servicing, observe the safety instructions from chapter 2.

13.1 Service

This product was constructed for low-maintenance operation.

13.2 Repair



When sent for repair, the panel should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

In the event of a defect/repair, send the panel with a detailed error description to the address listed at the beginning of this document.

14 Disposal



When disposing of the panel, the national electronic scrap regulation must be observed.

The panel cannot be discarded with domestic waste.



15 Hardware Class SV142

Hardware Class SV142 For the 4-Port VARAN splitter module SV 142

```

VARAN:01, SV142 (SV1421)
  S State (State) <-[]->
  S Online (Online) <-[]->
  S Release (Release) <-[]->
  S Device Address (DeviceAddress) <-[]->
  S Vendor ID (VendorID) <-[]->
  S Device ID (DeviceID) <-[]->
  S Serial Number (SerialNo) <-[]->
  S Retry Counter (RetryCounter) <-[]->
  S Validate Serial Number (ValidateSerNo) <-[]->
  O Supply for Varan Out 0 (SupplyVaranOut_0) <-[]->
  O Supply for Varan Out 1 (SupplyVaranOut_1) <-[]->
  O Supply for Varan Out 2 (SupplyVaranOut_2) <-[]->
  O Supply for Varan Out 3 (SupplyVaranOut_3) <-[]->
  S Realtime IP Link (RealtimeIP_Link) <-[]->
  S Sync Offset (SyncOffset) <-[]->
  S Device MAC-Address (DeviceMACAddress) <-[]->
  VARAN:01, Empty
  VARAN:02, Empty
  VARAN:03, Empty
  VARAN:04, Empty

```

This hardware class is used to control the VARAN splitter module SV 142. More information regarding the hardware can be found in the hardware documentation.

With this hardware class also the splitter module SV 141 can be controlled.

15.1 General

State	State	This server shows the actual status of the hardware class. For a detailed description, see Status of VARAN Hardware Classes							
	Online	This server is set as soon as the hardware class is processed properly (when the data are valid, drives synchronized...) The server is reset when an error occurs or when disconnected.							
	Release	The actual FPGA version of the connected hardware module is shown in this server.							
	DeviceAddress	The actual device address of the connected hardware module is shown in this server							
	VendorID	The vendor Vendor ID of the hardware module is shown in this server.							
	DeviceID	This server shows the device ID of the hardware module.							
	SerialNo	The serial number of the hardware module is shown in this server.							
	RetryCounter	On this server, all retries of active VARAN data objects that affect this module are displayed. If, for example, packets are repeated on the VARAN bus due to faults, this counter increases. If the system runs without transmission error on the VARAN bus, this value remains unchanged. If the module is disconnected from the VARAN bus, retries need not necessarily occur. This depends on whether communication was active for the module (active data objects).							
	ValidateSerNo	If serial number validation is enabled (SerNoValidation = 1), the serial number of the connected module is confirmed by writing 1 to this server. The server also shows the status of the serial number validation:							
		<table border="1"> <tr> <td>-2</td> <td>validate serial number not active</td> </tr> <tr> <td>-1</td> <td>no serial number defined for this position</td> </tr> <tr> <td>0</td> <td>serial number of the connected module does not match the stored number</td> </tr> <tr> <td>1</td> <td>serial number matches the stored number</td> </tr> </table>	-2	validate serial number not active	-1	no serial number defined for this position	0	serial number of the connected module does not match the stored number	1
-2	validate serial number not active								
-1	no serial number defined for this position								
0	serial number of the connected module does not match the stored number								
1	serial number matches the stored number								
ProtocolVersion		The VARAN protocol version of the hardware module is displayed on this server. Format xx.y.z e.g. 16#0130 means v01.3.0 If this server is 16#0, then reading the VARAN protocol version is not supported by the operating system interface.							
VaranIn Required	Property	This client must be connected to a VARAN port; a „VaranOut_ [x]“ server.							
	Property	This client is active by default, which means that the VARAN hardware module at this position is mandatory for the system and can under no circumstances be missing, disconnected or return an error. Otherwise, the entire hardware deactivated. If the hardware module is missing, and error is returned. This triggers a "VaranError", which the application can suppress with help from the "UserAction" client. In any case, the hardware is deactivated. If this client is initialized with 0, this hardware module is not mandatory at the position. This means that it can be removed at any time. However, which components identified as "not required" should be selected with regard to the safety of the system.							
UserAction	Property	This client is optional and must not be connected. For more information refer to General Documentation to the VARAN Library.							

SerNoValidation	Property	<p>This client activates the validation of the serial number of a module</p> <p>0 serial number of the module is not checked</p> <p>1 serial number of the module must be confirmed (validated)</p> <p>The serial number is confirmed for a connected module by writing to the "ValidateSerNo" server.</p>
Transparent	Property	<p>With this client, the module can be switched transparently. The transparent mode is described in the chapter "Transparent Mode".</p> <p>0 The transparent mode is inactive</p> <p>1 The transparent mode is active The module is not used in the "VARAN tree".</p>
RealtimeIP_Mode	Property	<p>0 No RealtimeIP function</p> <p>1 Data transfer over Sync + Offset (Server SyncOffset)</p> <p>2 Transfer with last byte written</p> <p>as initialization value</p>
RealtimeIP_PortNr	Property	<p>Defines which VaranOut is used as the RealtimeIP port;</p> <p>-1 Function deactivated</p> <p>0-4 Selection of the used port</p> <p>as initialization value</p>
DontCheckRxDestMAC	Property	<p>0 Only packets with the MAC address of the VSV are accepted</p> <p>1 All incoming packets are accepted</p> <p>as initialization value</p>

15.2 VARAN Ports

SupplyVaranOut_[0..4]	Output	With these servers, the power supply for the individual ports can be activated/deactivated by initializing a server with 0 or 1, or entering 0 or 1 in the server during the runtime.
RealtimeIP_Link	State	Shows whether a device is connected to the RealtimeIP interface 1 Real-time Ethernet is connected 0 Real-time Ethernet is not connected
SyncOffset	Property	Indicates at which time point in the VARAN cycle that real-time data is sent
DeviceMACAddress	State	The String server shows VSV MAC address specified in the SPI Flash.
VaranOut_[0..4]	Output	The VARAN hardware classes are connected to the "VaranIn" client with this server. Only one client can be connected to each port.


15.4 Required VARAN Data Objects

The following data objects are only required when the RealtimeIP interface is activated:

Data element	s_DO_VSV_FrameSend
Type	Memory Write / LongDO
Length	Maximum send length + 18 bytes; rounded to a multiple of 128 bytes
Description	This data object is used to transfer send data

Data element	s_DO_VSV_FrameReceive
Type	Memory Read / LongDO
Length	Maximum send length + 18 bytes; rounded to a multiple of 128 bytes
Description	This data object is used to retrieve the receive data

15.5 Example

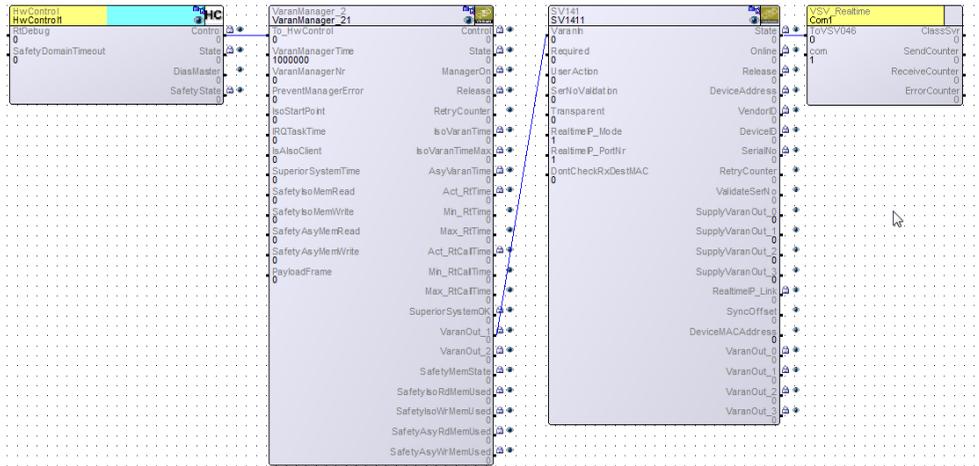

The following source code provides an example of the "VSV_Realtime" class

```

TYPE
#pragma pack(push, 1)
    t_Protocol : STRUCT
        us_PayloadLength : USINT;
        a_Payload : ARRAY [0..253] OF USINT;
    END_STRUCT;
#pragma pack(pop)
END_TYPE

FUNCTION VIRTUAL GLOBAL VSV_Realtime::Init
VAR
    DestinationMacAddress : VSV046::t_MacAddr;
    pMacAddress : ^VSV046::t_MacAddr;
END_VAR
IF us_firstscan = 1 THEN
//*****
//** set destination mac address (according to module!) **
//*****
CASE com OF
1:
    DestinationMacAddress[0] := 16#00;
    DestinationMacAddress[1] := 16#50;
    DestinationMacAddress[2] := 16#F4;
    DestinationMacAddress[3] := 16#1F;
    DestinationMacAddress[4] := 16#01;
    DestinationMacAddress[5] := 16#13;
    pMacAddress := #DestinationMacAddress;
2:
    DestinationMacAddress[0] := 16#00;
    DestinationMacAddress[1] := 16#50;
    DestinationMacAddress[2] := 16#F4;

```

```

DestinationMacAddress[3] := 16#1F;
DestinationMacAddress[4] := 16#01;
DestinationMacAddress[5] := 16#14;
pMacAddress := #DestinationMacAddress;
ELSE
  pMacAddress := NIL;
END_CASE;
/*****
/** the ethernet-frame will contain the "protocol" **
/**
ToVSV046.ConfigSendData( ui_MaxLength      := SIZEOF( t_Protocol )
                        , ui_ProtocolType   := 16#0000
                        , p_DestinationMacAddress := pMacAddress );
/*****
/** for now we do not use the mac-address filter **
/**
ToVSV046.ConfigReceiveData( p_ReceiveFunktion := #DataReceived()
                            , p_this          := THIS
                            , p_FilterMacAddress := NIL );

/*****
/** we use a 4-byte payload (counter) **
/**
SendDataBuf.Data $ t_Protocol.us_PayloadLength := 4;
END_IF;
us_firstscan += 1;
END_FUNCTION

FUNCTION GLOBAL VSV_Realtime::DataReceived
VAR_INPUT
  p_Data      : ^VSV046::t_ETHFrame;
  length      : UINT;
END_VAR
IF p_Data THEN
  IF length <= sizeof(VSV046::t_ETHFrame) THEN
    /*****
    /** copy header **
    /**
    ReceiveDataBuf.Header := p_Data^.Header;
    /*****
    /** copy data **
    /**
    _memcpy( ptr1 := #ReceiveDataBuf.Data, ptr2 := #p_Data^.Data, cntnr := length);
    /*****
    /** put counter from payload to server **
    /**
    ReceiveCounter := ( ReceiveDataBuf.Data $ t_Protocol.a_Payload[0] ) $ DINT;
  ELSE
    ErrorCounter += 1; // package too long
  END_IF;
ELSE
  ErrorCounter += 1; // no valid data-pointer
  END_IF;
END_FUNCTION

FUNCTION VIRTUAL GLOBAL VSV_Realtime::RtWork
VAR_INPUT
  EAX : UDINT;
END_VAR
VAR_OUTPUT
```

```
state (EAX)      : UDINT;
END_VAR

IF ToVSV046.RealtimeIP_Link THEN
  /*******
  /**** copy data to send-buffer          **
  /*******
  IF ToVSV046.SetSendData( p_Data      := #SendDataBuf.Data[0]
                          , ui_length := SIZEOF(t_Protocol) ) = READY THEN
    /*******
    /**** increment server and counter in payload          **
    /*******
    SendCounter += 1;
    (SendDataBuf.Data $ t_Protocol.a_Payload[0] ) $ DINT := SendCounter;
  END_IF;
END_IF;
state := READY;
END_FUNCTION
```

15.6 Setting Examples

1. Only packets with the SPI Flash MAC address are received; the destination MAC address from sent packets should be taken from the packets first received

Required settings:

- No specified receive filter (methods ConfigReceiveData, Parameter p_FilterMacAddress = NIL)
- Receive filter active (client DontCheckRxDestMAC = 0)
- No specified destination MAC address (method ConfigSendData, Parameter p_DestinationMacAddress = NIL)

2. Packets with any MAC address are received; the destination MAC address from sent packets should be taken from the packets first received

Required settings:

- A receive filter is given (methods ConfigReceiveData, Parameter p_FilterMacAddress <> NIL)
- Receive filter active (client DontCheckRxDestMAC = 0)
- No specified destination MAC address (method ConfigSendData, Parameter p_DestinationMacAddress = NIL)

3. All packets are received; the destination MAC address from sent packets should be taken from the packets first received

Required settings:

- Receive filter inactive (client DontCheckRxDestMAC = 1)
- No specified destination MAC address (method ConfigSendData, Parameter p_DestinationMacAddress = NIL)

4. Only packets with the SPI Flash MAC address are received; the destination MAC address from sent packets should be set to any value

Required settings:

- No specified receive filter (methods ConfigReceiveData, Parameter p_FilterMacAddress = NIL)
- Receive filter active (client DontCheckRxDestMAC = 0)
- Destination MAC address given (method ConfigSendData, Parameter p_DestinationMacAddress <> NIL)

5. Only packets a Flash MAC address are received; the destination MAC address from sent packets should be set to any value

Required settings:

- A receive filter is given (methods ConfigReceiveData, Parameter p_FilterMacAddress <> NIL)
- Receive filter active (client DontCheckRxDestMAC = 0)
- Destination MAC address given (method ConfigSendData, Parameter p_DestinationMacAddress <> NIL)

6. All packets are received; the destination MAC address from sent packets should be set to any value

Required settings:


- No specified receive filter (methods ConfigReceiveData, Parameter p_FilterMacAddress = NIL)
- Receive filter inactive (client DontCheckRxDestMAC = 1)
- Destination MAC address given (method ConfigSendData, Parameter p_DestinationMacAddress <> NIL)

15.7 Transparent Mode

The transparent mode is set so that a project with different stages of the hardware can be maintained with just one software version.

Example: With the full range of functions, a system consists of 10 modules that are connected by the VARAN bus. There is a project, which contains all system functions. If not all modules are required and therefore not integrated into the system, the hardware class objects or the respective modules are switched to transparent in the project. This means the project does not have to be changed with the reduced hardware stage. It is sufficient to switch the respective objects to transparent.

All VARAN hardware classes have a "Transparent" client. Through this client, the read method of the server connected to the client is called. In the read method for example, a configuration file can be read in which whether the transparent mode should be active or inactive is defined. The status is sent as a return value.

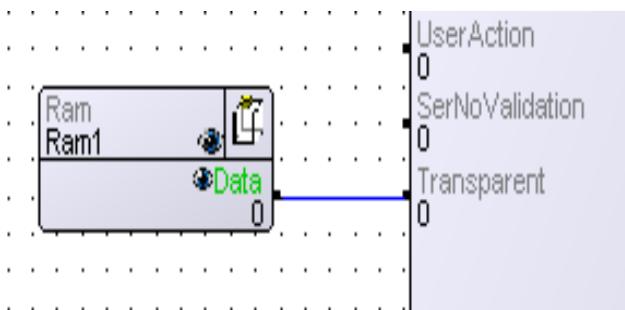


If a hardware class object is set to transparent, The VARAN bus structure moves up and the module is removed from the configuration. A distinction is now made between modules with 1 output and modules with several outputs.

If a module is removed (the corresponding object set to transparent) that has only one output, the following module (if available) must be directly connected to the preceding module (See item CIV Transparent).

If a module (e.g. VSV) with several outputs is removed, only the module at the first output (if available) has to be connected to the preceding module. The other modules at the remaining outputs are removed and the corresponding hardware class objects are set to transparent (See item VSV Transparent).


15.7.1 No transparent module

The following image shows the output assignment in which no class is set to transparent. The modules are connected to one another by the VARAN bus.

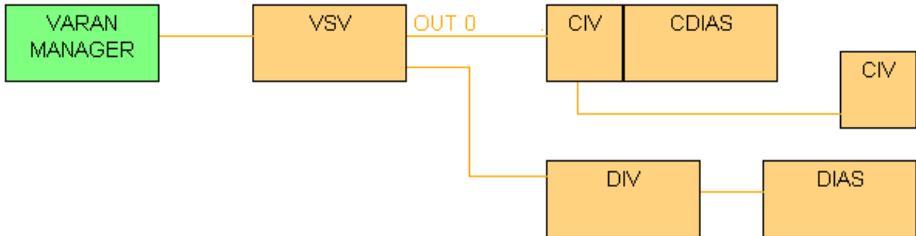


15.7.2 VSV Transparent

The "Transparent" client of the VSV hardware class object was initialized with 1. This means that the object is set to transparent. The VSV hardware must therefore be removed from the configuration and the VARAN Manager is connected directly to the CIV module through the software. All modules that are not connected to the first output of the VSV are set to transparent and not initialized, since with the VSV, only one thread can be moved.

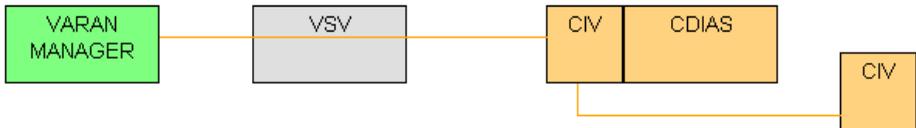

15.7.3 CIV Transparent

The "Transparent" client of the CIV hardware object was initialized with 1. This means that the object is set to transparent. The CIV hardware must therefore be removed from the configuration and the VSV module is connected directly to the following CIV module.

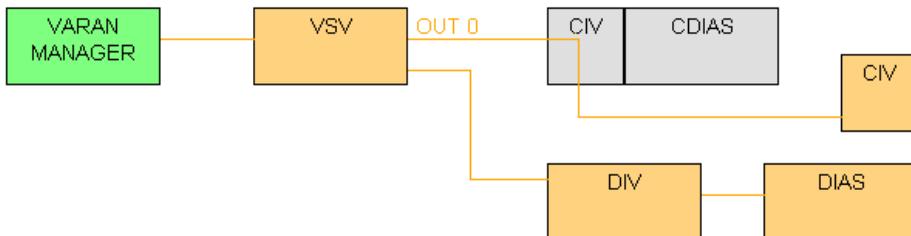

Documentation Changes

Change date	Affected page(s)	Chapter	Note
02.07.2020	10	4.3 Miscellaneous	UL in preparation changed to UL 508 (E247993)
01.09.2020	16	7.2 Top View	Text block inserted
08.09.2020	34	15 Hardware Class SV142	Chapter added
04.11.2020	30	12 Mounting	Expansion functional ground connection