

PC 400

Control Cabinet PC

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2015
SIGMATEK GmbH & Co KG

Translation from German

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.

Control Cabinet PC

PC 400

The PC 400 is a control cabinet PC with an Intel Celeron G1820 processor that is completely PC-compatible and operates with a standard PC BIOS.

Using the HMI-Link Expansion, HMI-Link terminals can be connected to the PC 400. This allows USB and display signals to be transmitted up to 100 m.



Contents

1	Technical Data	4
1.1	Performance Data	4
1.2	Electrical Requirements	4
1.3	Environmental Conditions	5
1.4	Miscellaneous	5
2	Mechanical Dimensions	6
2.1	Horizontal	6
2.2	Vertical	7
3	Connector Layout	8
3.1	Applicable Connectors	14
4	Status Displays	15
4.1	PC Status Display	15
4.2	HMI Link Status Display	15
5	SSD (Solid State Disk) Exchange	16
6	Exchanging the BIOS Battery	18
7	Mounting Instructions	20
7.1	Mounting Material	20
7.2	Minimum Clearance to the Next Components	20
8	Wiring Guidelines	21

8.1	Ground	21
8.2	Shielding	22
8.3	ESD Protection	22

1 Technical Data

1.1 Performance Data

Processor	INTEL Celeron G1820
Hard drive	32-Gbyte Solid State Disk
Main memory (DDR-RAM)	4-Gbyte DDR3 RAM (SODIMM)
Graphics	Intel HD Graphics
Interfaces	2x Ethernet 10/100/1000 Mbit 6x USB 2.0 2x USB 3.0 1x RS232 1x Audio (Line In, Line Out, microphone) 1x PS/2 mouse 1x PS/2 keyboard 1x DVI interface 1x Display port 1x HMI-Link (maximum length: 100 m)
Real-time clock	yes

1.2 Electrical Requirements

Supply voltage	+18-30 V DC (Class 2 or SELV and Limited Energy) (connection: 4-pin Phoenix)
IDLE consumption without HMI Link	30 W
IDLE consumption with HMI Link	32 W
Max. consumption with HMI Link	50 W
Start current	2.5 A peak – 15 ms

Caution: The +24 V supply voltage is buffered for 5 ms!

Mise en garde! La tension d'alimentation 24 V est tamponnée pour 5 ms!

1.3 Environmental Conditions

Storage temperature	-20 ... +60 °C	
Environmental temperature	0 ... +50 °C	
Humidity	10-90 %, non-condensing	
EMC tolerance	EN 61000-6-2 (industrial area): EMV resistance EN 61000-6-4: noise emission	
Vibration tolerance	EN 60068-2-6	2-9 Hz: amplitude 3.5 mm 9-200 Hz: 1 g (10 m/s ²)
Shock resistance	EN 60068-2-27	15 g (150 m/s ²), duration 11 ms, 18 Shocks
Protection Type	EN 60529: protected through the housing	IP20

1.4 Miscellaneous


Article number	01-310-411
Hardware version	2.x
Software version	1.x
Dimensions	80 x 223.7 x 193 mm (W x H x D)
Standard	UL 61010-1, UL 61010-2-201 (E247993)

In the HMI Link extenders with SW version 1.x, HMI Link display units/operating panels with SW version 1.x must be used.



Sur HMI-Link avec des extenseur versions SW 1.x, HMI-Link unités d'affichage/panneaux de commande avec la version SW 1.x doivent être utilisées.

2 Mechanical Dimensions


2.1 Horizontal

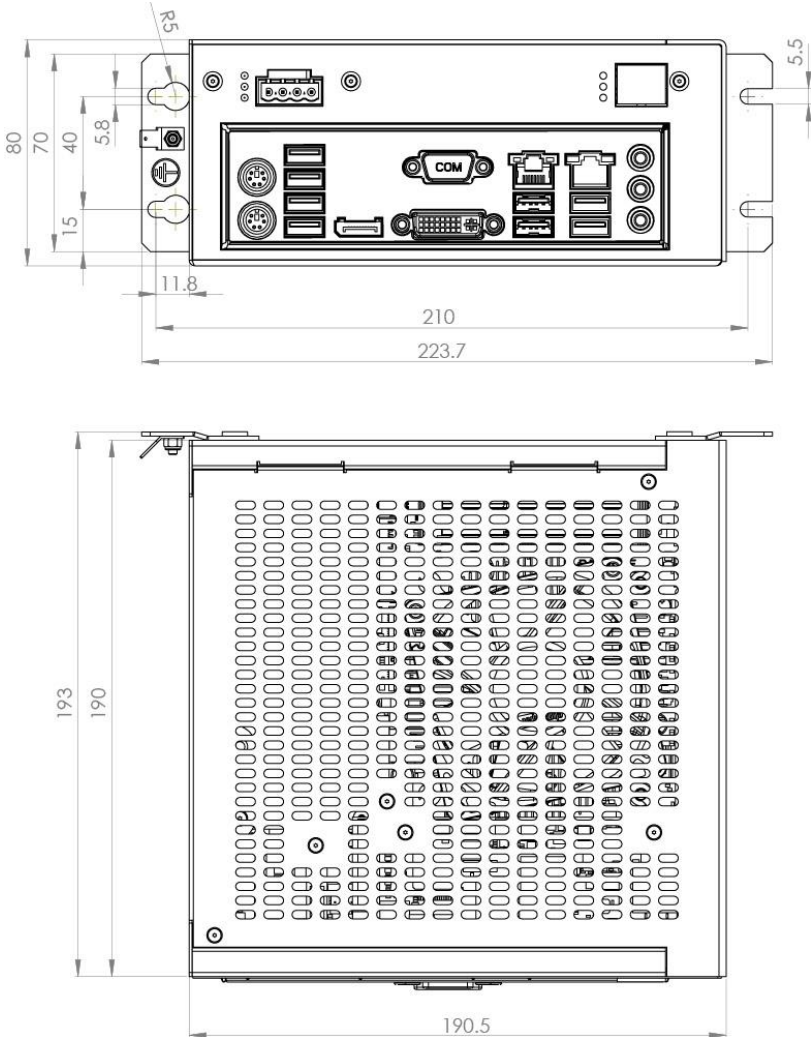

2.2 Vertical

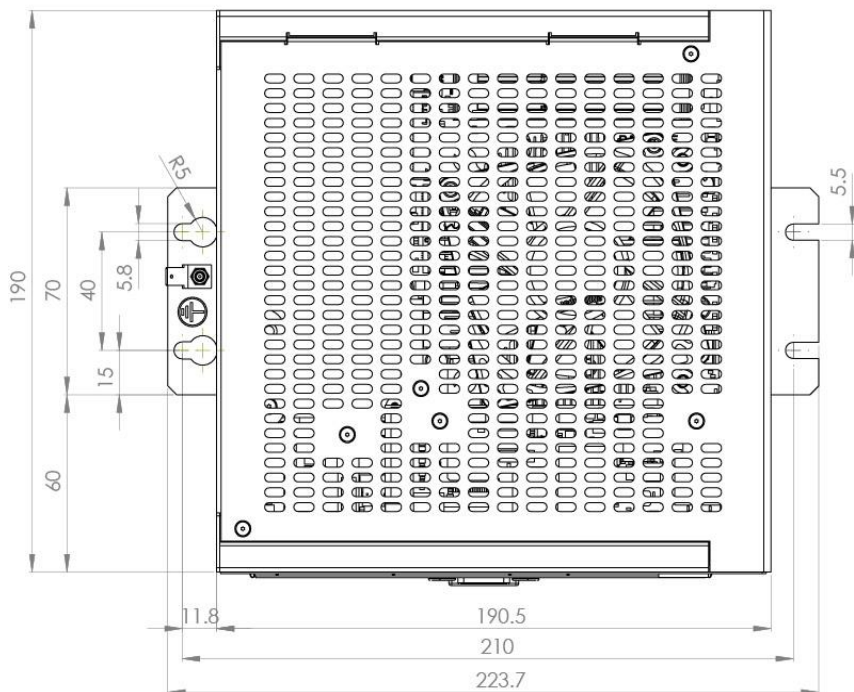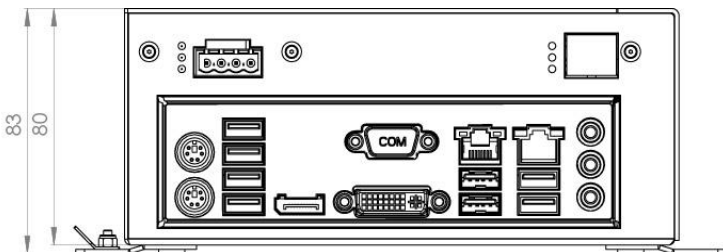

3 Connector Layout

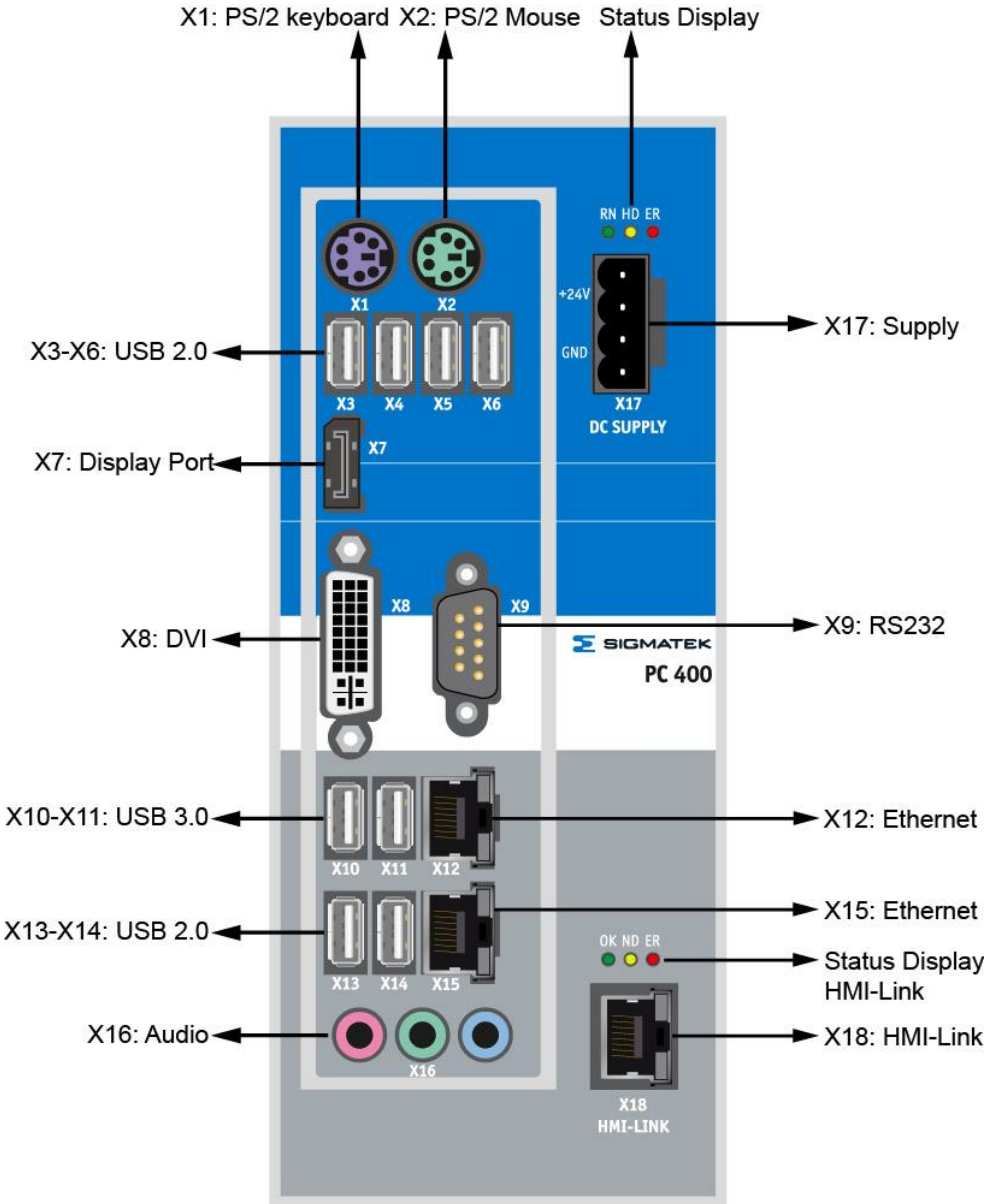

X1: PS2 keyboard



Pin	Function
1	KEYBOARD DATA
2	MOUSE DATA
3	GND
4	+5 V
5	KEYBOARD CLOCK
6	MOUSE CLOCK


X2: PS2 mouse



Pin	Function
1	MOUSE DATA
2, 6	n.c.
3	GND
4	+5 V
5	MOUSE CLOCK


n.c. = do not use

X3-X6: USB 2.0 (Type A)

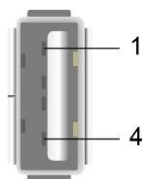


Pin	Function
1	+5 V
2	D0-
3	D0+
4	GND

X7: Display port:

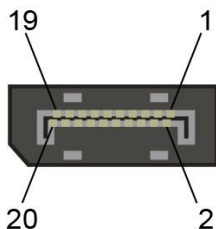


Pin	Function
1	Lane 0 (p)
2	GND
3	Lane 0 (n)
4	Lane 1 (p)
5	GND
6	Lane 1 (n)
7	Lane 2 (p)
8	GND
9	Lane 2 (n)
10	Lane 3 (p)
11	GND
12	Lane 3 (n)
13	Config1
14	Config2
15	AUX CH (p)
16	GND
17	AUX CH (n)
18	Hot Plug
19	Return
20	DP_VCC_3V3

X8: DVI (24-pin DVI)

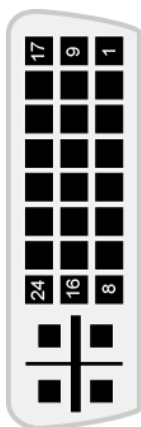


Pin	Function	Pin	Function
1	DVI2	13	DVI3+
2	DVI2+	14	+5 V
3	GND	15	GND
4	DVI4-	16	Hot Plug Detect
5	DVI4+	17	DVI0-
6	DDC-CLOCK	18	DVI0+
7	DDC-DATA	19	GND
8	V-Sync	20	DVI5-
9	DVI1	21	DVI5+
10	DVI1+	22	GND
11	GND	23	DVI-CLOCK+
12	DVI3	24	DVI-CLOCK-
C1	Red	C4	H-Sync
C2	Green	C5	GND
C3	Blue		

X9: RS232 (9-PIN DSUB PLUG)

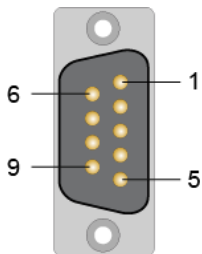


Pin	Function
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

X10-X11: USB 3.0 (Type A)

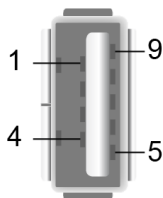


Pin	Function
1	+5 V
2	D0-
3	D0+
4	GND
5	USB3 Rx-
6	USB3 Rx+
7	GND
8	USB3 Tx-
9	USB3 Tx+

X12: Ethernet 10/100/1000

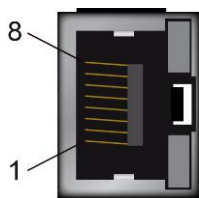


Pin	Function
1	DA+
2	DA-
3	DB+
4	DC+
5	DC
6	DB-
7	DD+
8	DD-

X13-X14: USB 2.0 (Type A)

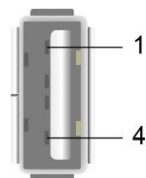

Pin	Function
1	+5 V
2	D0-
3	D0+
4	GND

X15: Ethernet 10/100/1000

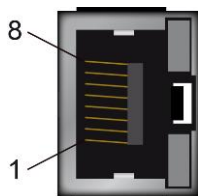


Pin	Function
1	DA+
2	DA-
3	DB+
4	DC+
5	DC
6	DB-
7	DD+
8	DD-

X16: Audio



Socket	Function
Pink	Microphone
Green	Line Out
Blue	Line In

Line IN, Line OUT



Pin	Function
L	Stereo left
R	Stereo right
GND	GND

Microphone




Pin	Function
SIG	Microphone IN
GND	GND


X17: Power supply (4-pin Phoenix)



Pin	Function
1	+24 V DC supply
2	+24 V DC supply
3	GND
4	GND

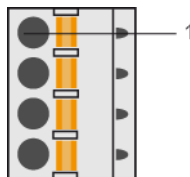

X18: HMI Link (RJ45)

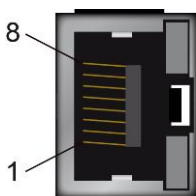

Pin	Function
1	DA+
2	DA-
3	DB+
4	DC+
5	DC
6	DB-
7	DD+
8	DD-

Before the PC is switched on, the terminal resp. the manual control unit has to be supplied and the HMI cable has to be connected, because otherwise a correct initialization of the terminal resp. the manual control unit cannot be guaranteed.

If a terminal resp. a manual control unit connected to the PC with a HMI-Link cable is exchanged with a device with a different resolution during operation, the PC has to be restarted, so that the new device with the different resolution is correctly identified and initialized.

Avant l'allumage du PC, le terminal ou l'unité de commande manuelle doit être alimenté et le câble HMI doit être connecté, car sinon une correcte initialisation du terminal ou de l'unité de commande manuelle ne peut pas être garantie.

Si le terminal ou l'unité de commande manuelle connectée au PC avec un câble HMI-Link est échangé pendant le fonctionnement pour un dispositif avec une résolution différente, le PC doit être redémarré. Ainsi, le nouveau dispositif avec la résolution différente est correctement identifié et initialisé.

3.1 Applicable Connectors

USB: Type A

PS/2: 6-pin PS/2 connector

DVI 24-pin DVI connector

Display port: 20-pin display port connector

RS232: 9-pin D-Sub socket

Ethernet: 8-pin RJ45 CAT5e / CAT6


Audio: jack connector

Power supply: 4-pin Phoenix Contact FKC 2.5/ 4-ST-5.08

HMI-Link 8-pin RJ45 CAT5e / CAT6

4 Status Displays

4.1 PC Status Display

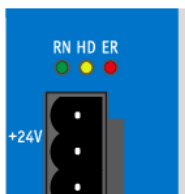

Power	Green	power supply
HD	Yellow	access to the SSD
Error	Red	alarm signal (e.g. exceeding the maximum temperature)

4.2 HMI Link Status Display



OK	Green	connection and video signal OL
ND	Yellow	connection OK, video signal error
ER	Red	connection and video signal error

5 SSD (Solid State Disk) Exchange

Disconnect the PC 400 from the supply.

To exchange the SSD, the locking screw must be removed with a TX 8 screwdriver.



Carefully lift the plug-in.



Carefully open the hard drive plug-in upwards. Disconnect the two connector cables. Loosen the 4 locking screws using a TX 10 screw driver and remove the hard drive from the hard drive plug in. Connect the new hard drive and screw down the hard drive plug-in using a thread lock fluid (Loctite 270 or similar) on the screws.

Caution: Place spacer sleeves in between!



4 TX 10 locking screws



**A solid state disk cannot be exchanged while voltage is applied!
(Disconnect 24 V DC supply!)**

**Un disque à semi-conducteurs ne peut pas être échangé sous la tension!
(Débranchez l'alimentation 24 V DC!)**

6 Exchanging the BIOS Battery

The exchangeable buffer battery ensures that the clock time is preserved in the absence of a supply voltage. A lithium battery is installed at the manufacturer.

The battery has enough capacity to preserve data in the absence of a supply voltage for up to 5 years.

Battery order number: **01-690-055**


	Company	DATA
Lithium battery	RENATA	3.0 V / 235 mAh

Use batteries from RENATA with the number CR2032 only!
WARNING! Incorrect use of the batteries could result in fire or explosion! Do not recharge, disassemble or throw batteries in fire!

N'utilisez que des piles RENATA CR2032!
ATTENTION! La pile peut exploser en cas d'un usage non-conforme. Ne pas recharger, démonter ou jeter au feu.

The BIOS battery cannot be exchanged while voltage is applied!
(Disconnect 24 V DC supply!)

La pile BIOS ne peut pas être échangée sous la tension!
(Débranchez l'alimentation 24 V DC!)

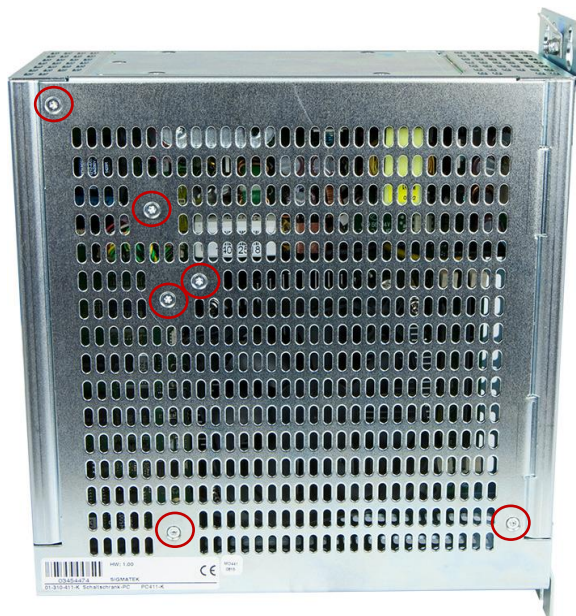

To exchange the BIOS battery, the 9 screws must be loosened with a TX 8 screw driver and the cover removed.



With a screw driver, carefully push the metal battery holder back. The battery can now be removed and replaced. Replace the cover and using a locking fluid (Loctite 270 or similar), tighten the locking screws.

The clock time must then be reset.

7 Mounting Instructions

The PC 400 has 4 mounting holes to allow mounting onto the back wall of the control cabinet. This is the preferred mounting position, since the cool air can flow from the bottom to the top of the module and ensure optimal cooling.


- When changing the position of the mount, the 4 cylinder screws with hexagon socket and extremely low head (Bossard BN1206 M5 with a maximum length of 6 mm) must be used. The tightening torque is 1.6 Nm.

7.1 Mounting Material

- Disks EN ISO 7089-5-200HV
- Lock washer DIN 7980, galvanized spring steel, size 5
- Screws M5x10-8.8 (10 mm minimum length)
- Torque 6 Nm

A different mounting position is not recommended, since the specified ambient temperature cannot be guaranteed. In addition, a clearance of 10 cm between the nearest components (control cabinet wall) must be ensured.

7.2 Minimum Clearance to the Next Components

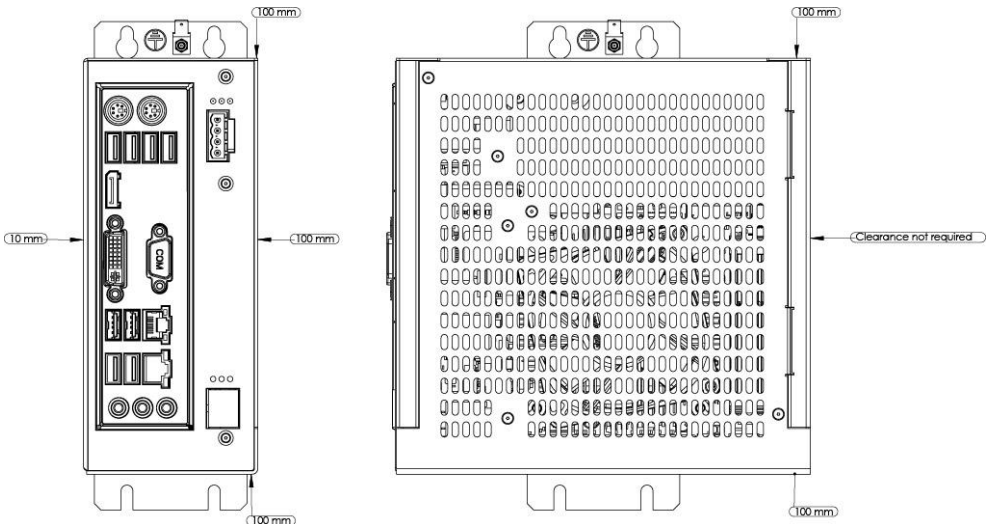


8 Wiring Guidelines

8.1 Ground

The PC 400 must be connected either to ground through the mounting on the control cabinet or over the ground terminal provided. It is important to create a low-ohm ground connection, only then can error-free operation be guaranteed. The earth connection should have a maximum cross section and the largest (electrical) surface possible.

Any noise signals that reach the PC 400 over external cables must be dissipated through the ground connection. High frequency noise can also be dissipated with a large electrical surface (skin effect).

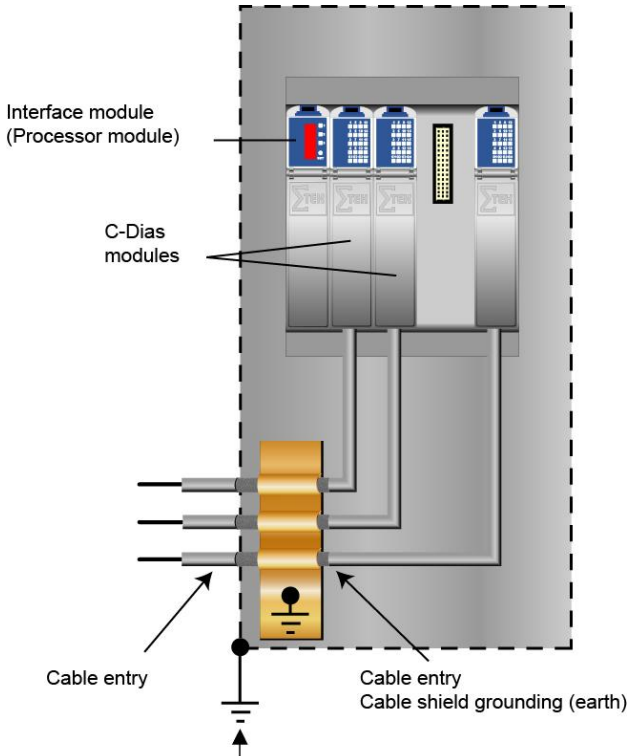

8.2 Shielding

The wiring for the COM1, display port, Ethernet, VGA, and DVI must be shielded. The low-ohm shielding is either connected at the entry to the control cabinet or directly before the PC 400 over a large, low-ohm surface (cable grommets, grounding clamps)!

Noise signals can therefore be prevented from reaching the electronics and affecting the function.

8.3 ESD Protection

Typically, the PS/2 devices (keyboard, mouse) are not equipped with shielded cables. The same applies to the USB keyboard and mouse. These devices are disrupted by ESD and in some instances, no longer function.

Before any device is connected to or disconnected from the PC 400, the potential should be equalized (by touching control cabinet or ground terminal). This will allow the dissipation of electrostatic loads (caused by clothing/shoes).

Documentation Changes

Change date	Affected page(s)	Chapter	Note
18.05.2015	5	1.4 Miscellaneous	Added Software version
15.06.2015	5	1.4 Miscellaneous	Added SW version mnemonic
14.09.2015	13	3 Connector Layout	Note HMI-Link added
02.11.2015	4 5	1.2 Electrical Requirements 1.4 Miscellaneous	Norms added
19.01.2016	4	1.2 Electrical Requirements	Start current added
12.03.2018	19	7 Mounting Instructions	Addition mount

