

STO 081

S-DIAS Safety Digital Output Module

Instruction Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2013
SIGMATEK GmbH & Co KG

Translation of the Original Instruction

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.

S-DIAS Safety Digital Output Module **STO 081(-X)**

The S-DIAS Safety STO 081(-X) digital output module has the safety integrity level **SIL3** (EN IEC 62061) or **Performancelevel e** (PL e) (EN ISO 13849). The STO 081(-X) has:

- 8 secure outputs (EN 61131-2; EN IEC 62061 und EN ISO 13849)

The safe outputs are used for the safety-oriented output of eight actuator signals to, for example, control relays, valves, etc.

The safety-related STO 081(-X) is ideal for use in systems with optional modules and interface variables according to Safety System Handbook, see homepage¹.

To use the STO 081(-X) in an application, at least one Safety CPU module that regulates the synchronized communication with the safety modules using safe bus telegrams is also required. This also includes

- processing the safe application and
- the distribution of configuration data to remote Safety modules.

This instruction manual also applies to the product STO 081-X (main board and S-DIAS connectors coated in Purocoat (Certonal)), which is no longer explicitly mentioned in the following.



¹ Using the search function with the keyword "Safety System Handbook"

Contents

1	Introduction	5
1.1	Target Group/Purpose of this Operating Manual	5
1.2	Important Reference Documentation	5
1.3	Contents of Delivery	5
2	Basic Safety Guidelines	6
2.1	Symbols Used	6
2.2	Disclaimer	8
2.3	General Safety Directives	9
2.4	Designated Use	11
2.5	Software/Training	12
3	IT Security	13
4	Standards and Directives	14
4.1	Residual Risks	14
4.2	Safety of the Machine or Equipment	14
4.3	Directives	14
4.3.1	Functional Safety Standards	15
4.3.2	EU Conformity Declaration	15
4.4	Safety-Relevant Parameters	16
4.4.1	Mounting Position Horizontal 0-55 °C Ambient Temperature	16
4.4.2	Mounting Position Horizontal 0-60 °C Ambient Temperature	16
4.5	Compatibility	17

5	Type Plate	18
6	Technical Data	19
6.1	Output Specifications.....	19
6.1.1	Maximum Inductive Load L (mH) at Load Current I (A).....	20
6.1.2	Maximum Capacitive Load C (μ F) at Load Current I (A)	21
6.2	Output Circuit.....	22
6.3	Electrical Requirements.....	22
6.4	Miscellaneous	24
6.5	Environmental Conditions	24
7	Mechanical Dimensions.....	25
8	Connector Layout.....	26
8.1	Status LEDs.....	27
8.2	Applicable Connectors.....	27
8.3	Label Field	28
9	Wiring	29
9.1	Wiring Example	29
9.2	Note	30
10	Assembly/Installation	31
10.1	Check Contents of Delivery	31
10.2	Mounting.....	32
11	Transport/Storage	34

12	Storage	34
13	Maintenance	35
13.1	Service	35
13.2	Repair	35
14	Disposal	35

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

- Safety System Handbook

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x STO 081(-X)

2 Basic Safety Guidelines

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes:

DANGER



Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

WARNING



Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION



Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

⇒ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

INFORMATION**Information**

- ⇒ Provides important information on the product, handling or relevant sections of the documentation, which require attention.

2.2 Disclaimer

INFORMATION



The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.

INFORMATION



According to EU Directives, the operating manual is a component of a product.

This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions.

This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.

Prevent foreign bodies and fluids from entering the device.

The device must not be opened!

Manipulez l'appareil avec précaution et ne le laissez pas tomber.

Empêchez les corps étrangers et les liquides de pénétrer dans l'appareil.

L'appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé!

The module complies with EN 61131-2.

In combination with a facility, the system integrator must comply with EN 60204-1 standards.

For your own safety and that of others, compliance with the environmental conditions is essential.

Le module est conforme à la norme EN 61131-2.

En combinaison avec une équipement, l'intégrateur de système doit respecter la norme EN 60204-1.

Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essentiel.

2.4 Designated Use

The Safety functions implemented in the product are designed for use with safety applications in a SIGMATEK control and meet the required conditions for safe operation according to SIL 3, HFT 1 n compliance with EN IEC 62061 and according to PL e, Kat. 4 in compliance with EN ISO 13849-1.

CAUTION



The instructions contained in this operating manual must be followed.

For error-free operation, proper transport and storage are essential.

Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.

Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict directives and standards of safety technology (Functional Safety).

Les instructions contenues dans ce manuel technique doivent être suivies.

Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels.

L'installation, le montage, la programmation, la mise en service initiale, l'exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.

Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d'un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l'équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité (Sécurité fonctionnelle).

For your own safety and that of others, the product should be used for their designated purpose only.

Correct EMC installation is also included under designated use.

Pour votre propre sécurité et celle des autres, le produit ne doivent être utilisés qu'à des fins prévues.

Une installation CEM correcte est également incluse dans l'utilisation prévue.

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this operating manual or the specifications defined in the technical data.

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
 - utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques.
-

Before delivering the module, the machine manufacturer must ensure that it is in "delivery condition". See chapter Transport/Storage for more information.

Avant de livrer le module, le constructeur de la machine doit s'assurer qu'il est en "état de livraison". Voir le chapitre Transport/Storage pour plus d'informations.

2.5 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor, the Safety application is created using the SAFETYDesigner. Basic information on Safety (Functional Safety) can be found in the Safety System Handbook.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 IT Security

S-DIAS safety modules were developed for integration into a network protected against unauthorized access. For example, the following dangers can affect the network:

- Unauthorized access
- Data manipulation
- and many other IT security violations

It is the responsibility of the operator to protect the safe connection between S-DIAS modules against unauthorized access. The following measures, for example, are suitable for this:

- Firewalls
- Password-protected user accounts
- Data encryption
- and much more

4 Standards and Directives

4.1 Residual Risks



CAUTION

The following residual risks for the product must be included in the system integrator's risk assessment:

- Release of non-environmentally safe substances, emissions and unusual temperatures
- Possible effects of information technology devices

Les risques résiduels suivants pour le produit doivent être inclus dans l'évaluation des risques de l'intégrateur de système:

- Libération de substances non respectueuses de l'environnement, émissions et températures inhabituelles
- Effets possibles des dispositifs de technologie de l'information

4.2 Safety of the Machine or Equipment



INFORMATION

Observe all on-site rules and regulations for accident prevention and occupational safety.

4.3 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

4.3.1 Functional Safety Standards

EN IEC 62061 - Safety of machinery - Functional safety of safety-related control systems
EN ISO 13849-1 - Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2 - Safety of machinery - Safety-related parts of control systems - Part 2: Validation

4.3.2 EU Conformity Declaration



EU Declaration of Conformity

The product STO 081(-X) conforms to the following European directives:

- **2006/42/EG** Machine Directive
- **2014/30/EU** Electromagnetic Compatibility (EMC Directive)
- **2011/65/EU** "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product.

4.4 Safety-Relevant Parameters

4.4.1 Mounting Position Horizontal 0-55 °C Ambient Temperature

Output Module	Safety Parameters	Safety Levels
STO 081(-X) in combination with CPU module SCP 011/SCP 111		
up to HW version 2.20	PFH = 1.30E-09 (1/h) MTTF _D = 1718 years DC = 99 % SFF = 99 %	SIL 3 according to EN IEC 62061 PL e / Cat. 4 according to EN ISO 13849
starting with HW version 3.00	PFH = 1.80E-09 (1/h) MTTF _D = 1431 years DC = 99 % SFF = 99 %	SIL 3 according to EN IEC 62061 PL e / Kat. 4 according to EN ISO 13849

Structure: Two-channel redundant (diverse)

4.4.2 Mounting Position Horizontal 0-60 °C Ambient Temperature

Output Module	Safety Parameters	Safety Levels
STO 081(-X) in combination with CPU module SCP 011/SCP 111		
up to HW version 2.20	PFH = 1.60E-09 (1/h) MTTF _D = 1432 years DC = 99 % SFF = 99 %	SIL 3 according to EN IEC 62061 PL e / Cat. 4 according to EN ISO 13849
starting with HW version 3.00	PFH = 2.10E-09 (1/h) MTTF _D = 1175 years DC = 99 % SFF = 99 %	SIL 3 according to EN IEC 62061 PL e / Kat. 4 according to EN ISO 13849

Output Module	Safety Parameters	Safety Levels
STO 081(-X) in combination with CPU module SCP 211/SCP 111-S		
starting with HW version 3.00	PFH = 3.00E-09 (1/h) MTTFD = 795 years DC = 99 % SFF = 99 %	SIL 3 according to EN IEC 62061 PL e / Kat. 4 according to EN ISO 13849

Structure: Two-channel redundant (diverse)

4.5 Compatibility


INFORMATION



Compatibility

For compatibility of the S-DIAS Safety modules, see section "Compatibility of S-DIAS Safety Modules" in the system handbook.

5 Type Plate

	HW: X.XX
	SW: XX.XX.XXX
	Safety Version: SXX.XX.XX
Serial No.	SIGMATEK GMBH & CO KG Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN
Article Number	Product Name Short Name

Exemplary nameplate (symbol image)

	HW: 1.00
	SW: 01.00.000
	Safety Version: S01.00.00
12345678	SIGMATEK GMBH & CO KG Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN
12-246-133-3	Handbediengerät Wireless HGW 1033-3

HW: Hardware version

SW: Software version

6 Technical Data


6.1 Output Specifications

All safety outputs are short-circuit protected and specified in accordance with EN 61131-2. The outputs are compatible with input of type 1, 2 and 3.

Number	8		
Rated output voltage	+24 V DC		
Output voltage range	minimum +18 V	maximum +30 V ⁽¹⁾	
Maximum output current	2 A		
Maximum total current Per output group (4 outputs)	5 A		
Maximum total current (complete module)	10 A up to a max. of 45 °C ambient temperature	8 A up to a max. of 55 °C ambient temperature	6 A up to a max. of 60 °C ambient temperature
Brake voltage with switching-off inductive loads	typically 0.85 V		
Maximum switch-off energy of the outputs (inductive load)	maximum 0.4 Joule per channel maximum 1.2 Joule (entire module)		
Turn-on delay	< 200 µs		
Turn-off delay	< 1 ms		
Miscellaneous	short-circuit proof		
Cutoff test pulse width (t ₁)	minimum 0.1 ms	maximum 1.5 ms	
Cutoff test pulse interval bet. FET Test and HSS Test (t ₂)	minimum 112 ms	maximum 6450 ms	
Cutoff test pulse interval (t ₃)	60 s		

⁽¹⁾ With increased ambient temperature > 55 °C the maximum permissible supply voltage is reduced from 30 V to 28.8 V.

Cutoff Test Pulse Timing

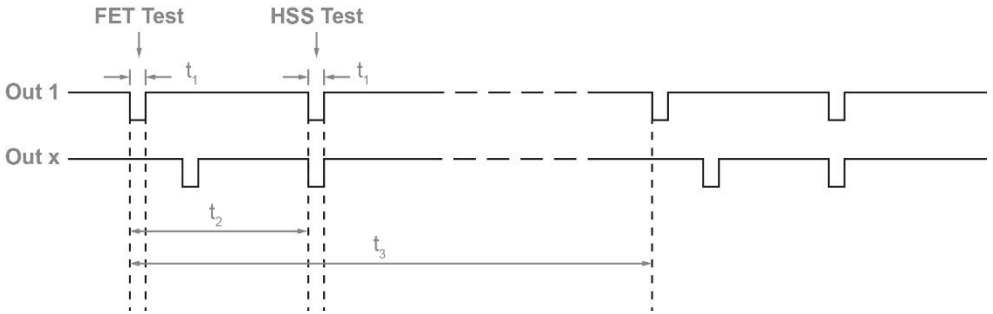


INFORMATION




A fuse for the supply voltage must be installed, which can sufficiently limit voltage and current.

6.1.1 Maximum Inductive Load L (mH) at Load Current I (A)

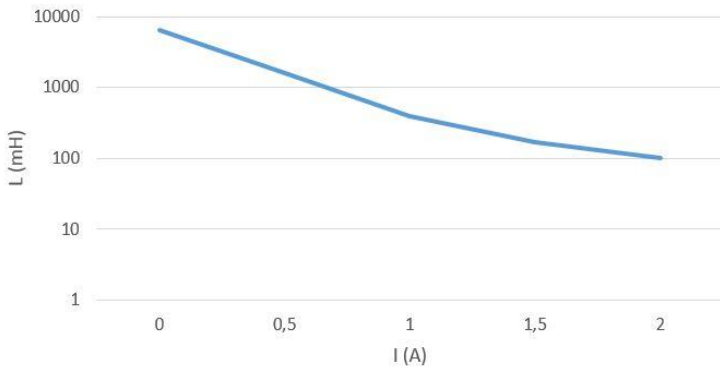


6.1.2 Maximum Capacitive Load C (μF) at Load Current I (A)

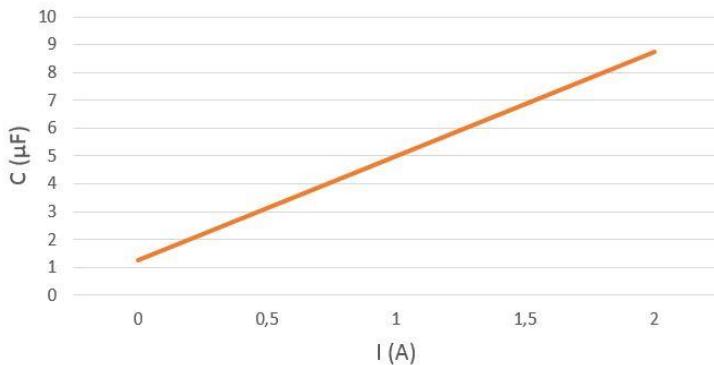

I (A)	L (mH)	C (μF)
0	6400	1,25
0,5	1600	3,13
1	400	5
2	100	8,75


6.2 Output Circuit

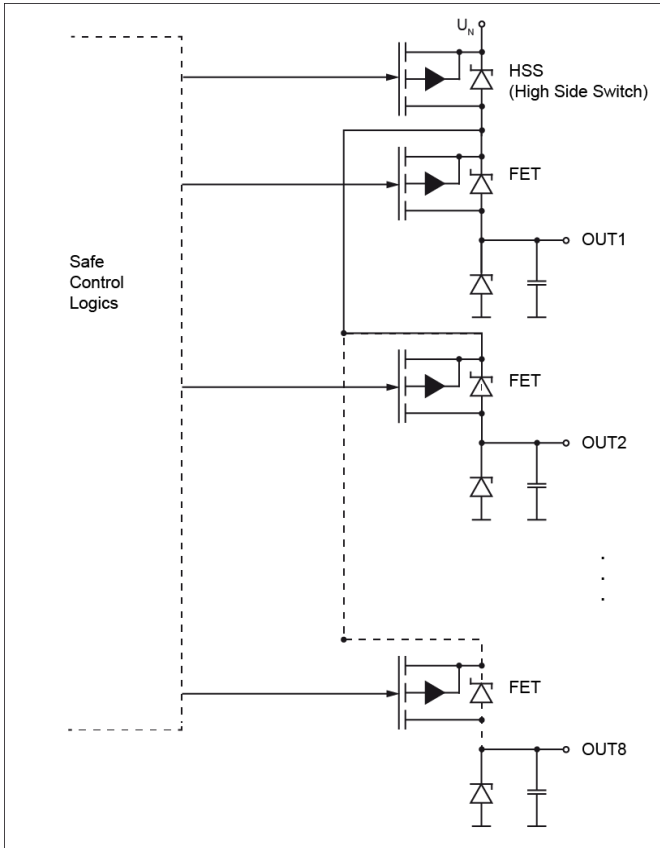

The figure shows the internal output circuit of the STO 081(-X).

6.3 Electrical Requirements

Voltage supply from Safety bus	+12 V	
Current consumption on the Safety bus (+12 V supply)	typically 42 mA	maximum 50 mA
Voltage supply from Safety bus	+24 V	
Current consumption on the Safety bus (+24 V supply)	typically 36 mA	maximum 40 mA

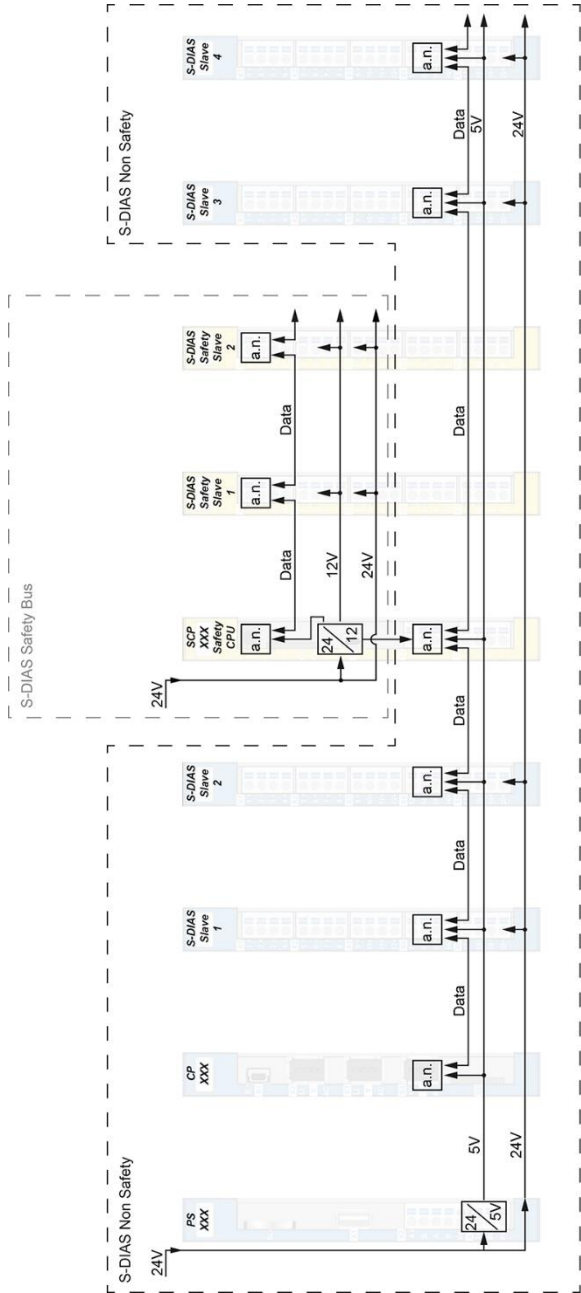

Wiring S-DIAS Safety in S-DIAS System

- each S-DIAS module is an active module (active node)
- Safety CPU is connected to the S-DIAS bus (incl. +5 V supply)
- Safety bus is independent and separated from the S-DIAS bus


6.4 Miscellaneous

Article number	20-892-081 20-892-081-X (polymer coated printed circuit board)
Standard	UL 508 (E247993)
Approbations	cUL _{us} , CE, TÜV Austria EG type-tested
Mission time	20 years


6.5 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +55 °C (UL) 0 ... +60 °C (CE)	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
Noise emissions	≤ 70 dB	
EMC resistance	in accordance with EN 61000-6-7 (Generic standards - Immunity requirements for equipment intended to perform functions in safety-related systems (functional safety) at industrial locations) in accordance with EN 61000-6-2 (industrial area) (increased requirements in accordance with EN IEC 62061)	
EMC noise generation	in accordance with EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g
Protection type	EN 60529	IP20

7 Mechanical Dimensions

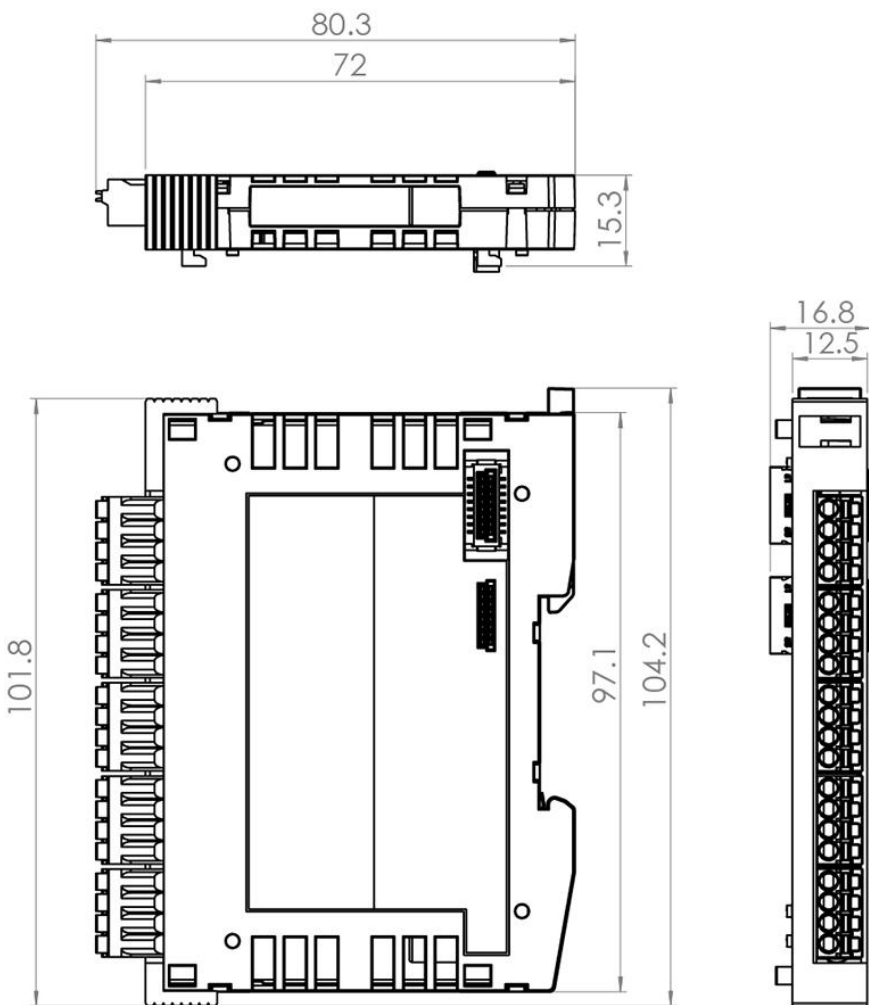

8 Connector Layout

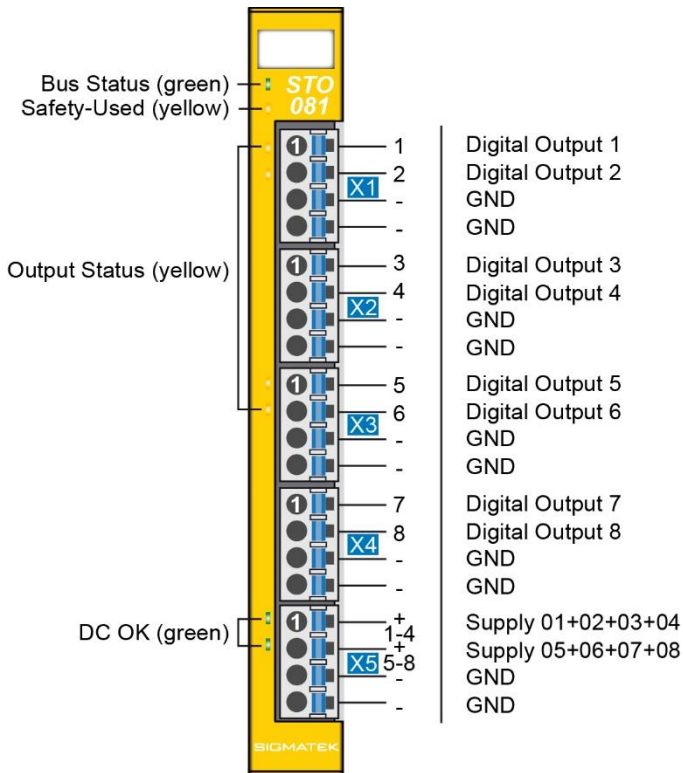

INFORMATION



Both +24 V supply connections (X5: pin 1 and pin 2) must be supplied to power the module.

The GND supply connections (X5: pin 3 and pin 4) are bridged internally and, depending on the total current (6 A per pin), must be supplied via at least one connection (for total currents up to 6 A) or via both connections (for total currents greater than 6 A). The bridged pins of the GND supply may also be used for further looping. However, it must be ensured that a total current of 6 A per connection is not exceeded.

8.1 Status LEDs

Bus Status	green	ON	bus communication OK
		OFF	no supply available
		BLINKING (5 Hz)	no communication
Safety-Used	yellow	ON	module is used and no error
		OFF	module is not used or not in operational mode
Output Status	yellow	ON	output ON
		OFF	output OFF
DC OK	green	ON	the respective output group is powered

8.2 Applicable Connectors

Connectors:

X1-X5: Connectors with spring terminals (included in delivery)


The spring terminals are suitable connecting ultrasonically compacted (ultrasonically welded) strands.

Connections:

Stripping length/Sleeve length:	10 mm
Plug-in direction:	parallel to conductor axis or to PCB
Conductor cross section, rigid:	0.2-1.5 mm ²
Conductor cross section, flexible:	0.2-1.5 mm ²
Conductor cross section, ultrasonically compacted:	0.2-1.5 mm ²
Conductor cross section AWG/kcmil:	24-16
Conductor cross section flexible, with ferrule without plastic sleeve:	0.25-1.5 mm ²
Conductor cross section flexible, with ferrule with plastic sleeve:	0.25-0.75 mm ² (ground for reducing d2 of the ferrule)




8.3 Label Field

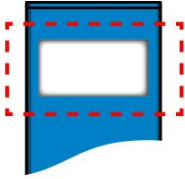

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Weidmüller article number	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Weidmüller article number	1324380000

9 Wiring

9.1 Wiring Example

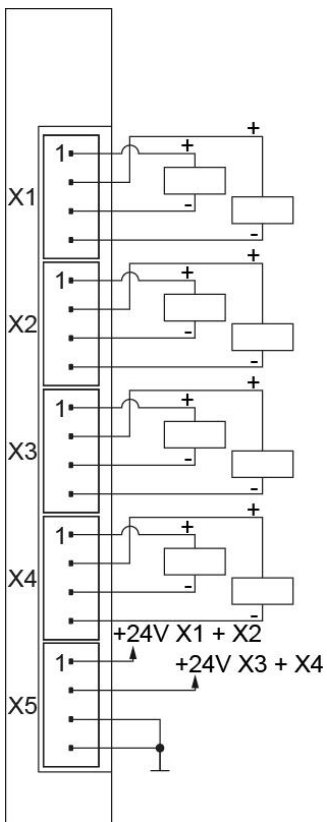

9.2 Note

The input filters, which suppress noise signals, allow operation in harsh environmental conditions. A careful wiring method is also recommended to ensure error-free function.

The following installation guidelines should be observed:

- Avoid parallel connections between input lines and load-bearing circuits.
- Protective circuits for all relays (RC networks or free-wheeling diodes)
- Correct wiring to ground

INFORMATION



The ground bus should be connected to the control cabinet when possible!

The wiring and assembly must be performed when no voltage is applied!

The S-DIAS module CANNOT be connected or disconnected while voltage is applied!

10 Assembly/Installation

10.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter Contents of Delivery.

INFORMATION




On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.


Damaged components can disrupt or damage the system.

10.2 Mounting

The S-DIAS modules are designed to be mounted in the control cabinet. To mount the modules, a DIN rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding clamp on the back of the S-DIAS modules. The modules must be mounted vertically with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is required to provide optimal cooling and air circulation so that functionality is ensured up to the maximum operating temperature.

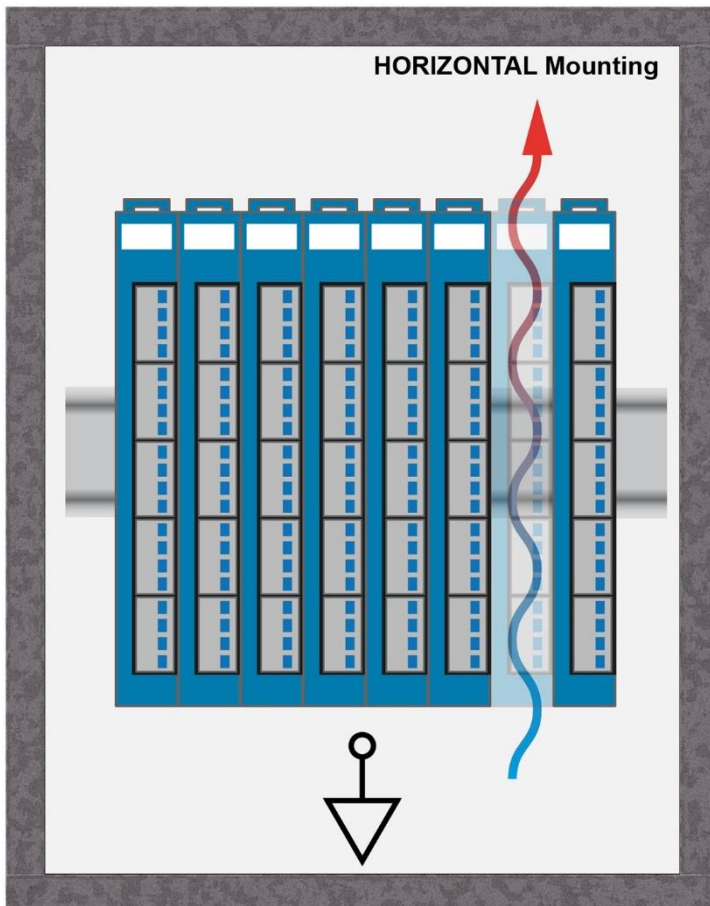

Recommended minimum distances of the S-DIAS modules to the surrounding components or control cabinet wall:

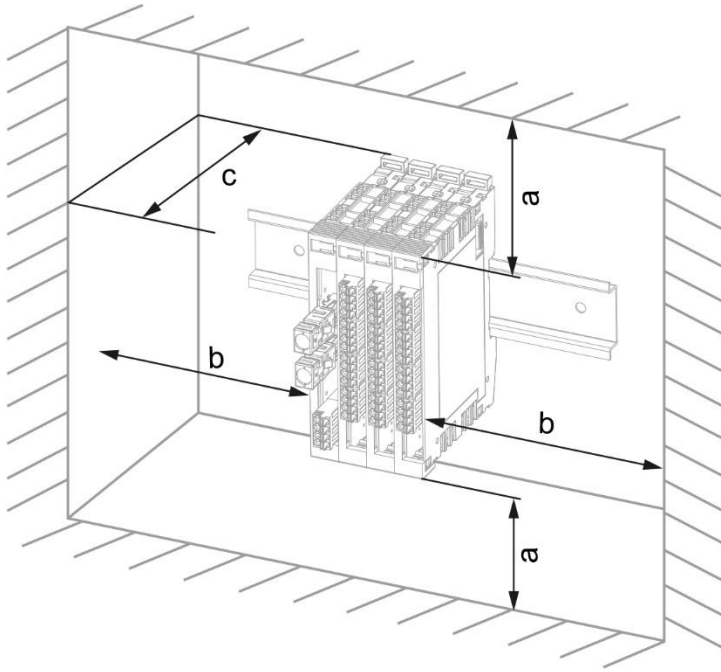

a	b	c
30 mm (1.18")	30 mm (1.18")	100 mm (3.94")

a, b, c ... distances in mm (inches)

11 Transport/Storage

INFORMATION



This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

12 Storage

INFORMATION



When not in use, store the operating panel according to the storage conditions. See chapter 12.

During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

13 Maintenance

INFORMATION



During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

13.1 Service

This product was constructed for low-maintenance operation.

13.2 Repair

INFORMATION



In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document.

For transport conditions, see chapter 11 Transport/Storage.

14 Disposal

INFORMATION



Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.



Documentation Changes

Change date	Affected page(s)	Chapter	Note
11.02.2014	13	5 Connector Layout	Changed image
	14	5.2 Applicable Connectors	Connection capacity added French notes added
03.03.2014	15	5 Connector Layout	Changed image
	16	5.1 Status LEDs	Changed/expanded Status LEDs table
01.04.2014	19	7 Mounting	Text updated
23.05.2014	10	2.3 Compatibility	Added chapter
18.07.2014	15	5 Connector Layout	Added wiring notice
08.09.2014	13	3.5 Miscellaneous	Added Standard
30.01.2015	18	6.2 Note	Added note concerning connecting the S-DIAS module while voltage is applied
23.03.2015	15	5 Connector Layout	Changed mnemotechnic verse
26.03.2015	16	5.2 Applicable Connectors	Added connections
07.05.2015			New writing: EN ISO 13849
18.05.2015	13	3.6 Environmental Conditions	Expanded vibration resistance
08.07.2015	11	3.1 Output Specifications	Added mnemotechnic verse
28.07.2015	10	2.1 Functional Safety Standards	Deleted footnote
04.08.2015			Info Cover Translation from German added
17.02.2016	11	3.1 Output Specifications	Switching-off inductive loads
28.04.2016	22	7 Mounting	Graphics distances
20.06.2016	10	2.2 Safety-Related Parameters 2.3 Compatibility	SCP 011/SCP 111 instead of SCP 011
15.05.2017	12	3.1.1 Maximum Inductive Load L (mH) at Load Current I (A) 3.1.2 Maximum Capacitive Load C (µF) at Load Current I (A)	Chapter added Chapter added

17.08.2017	15 18	3.5 Environmental Conditions 5.2 Applicable Connectors	Pollution Degree Sleeve length added Added info regarding ultrasonically welded strands
23.08.2017	11	3.1 Output Specifications	Table expanded, Cutoff Test Pulse Timing added
30.08.2017	11	3.1 Output Specifications	Cutoff Test Pulse Timing
18.10.2017	20 24	5.3 Label Field 7 Mounting	Added chapter Graphic replaced
20.09.2018		5 Connector Layout	Note added
02.04.2019	10 17 all	2.3 Safety-Relevant Parameters 3.5 Environmental Conditions	Correction of the safety-relevant parameters Corrections environmental conditions Corrections due to CE
14.11.2019		9 Supported Cycle Times	Chapter added
02.12.2019		2.3 Safety-Relevant Parameters	Values updated
28.02.2020	25	9 Supported Cycle Times	Text adapted
28.05.2020	25	9 Supported Cycle Times	Chapter removed
02.09.2020	1 8 12 17	 2.3 General Requirements 4.1 Output Specifications 4.5 Environmental Conditions	Text correction Text correction of Designated Use For Maximum total current (complete module) the text "in horizontal mounting position" removed + for the footnote the text "horizontal mounting position and" removed At Environmental temperature 0 ... +55 °C removed
08.09.2020	27	10 Hardware Class STO081	Chapter added
04.11.2020	24	8 Mounting	Expansion functional ground connection
05.03.2021		4.5 Environmental Conditions	Standards added
04.05.2021	17	4.4 Miscellaneous	Article number -X added
22.12.2021	9	3.3. Safety-Relevant Parameters	Parameters added for HW version 3.00
07.02.2022	12	3.3.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	Parameters SCP 211/SCP 111-S added

22.03.2022	11	3.3.1 Mounting Position Horizontal 0-55 °C Ambient Temperature	Safety-relevant parameters changed
	12	3.3.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	
12.09.2022	18	4.4 Miscellaneous	Hardware version removed
20.04.2023	20	6 Connector Layout	Info box corrected
05.12.2023	23	5.4 Miscellaneous	Mission time added
	23	5.5 Environmental Conditions	Noise emissions added
	25	7 Connector Layout	Note changed
		10 Hardware Class STO081	Chapter removed
01.02.2024	14	3.3.2 EU Conformity Declaration	Note on download adjusted
	15	3.4 Safety-Relevant Parameters	The safety indicators (PFH, MTTF _D) were adjusted slightly with the recertification.
21.02.2024	13	3 IT Security	Chapter added
			Short name (-X) adjusted
08.04.2024	29	9.1 Wiring Example	Graphics corrected