

HBG 0811

Handheld Operating Panel

Instruction Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2015
SIGMATEK GmbH & Co KG

Translation of Original Instructions

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated, or distributed in any form (print, photocopy, microfilm, or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

8.4" Handheld Operating Panel

HBG 0811

The HBG 0811 is a handheld operating device for visualizing processes. Process diagnostics, operation and monitoring of processes are thereby simplified.

A touch screen serves as the input medium for process data and parameters.

The output is shown on an 8.4" SVGA TFT color display.



Table of Contents

1 Essential Components 5

2 Introduction 6

 2.1 Target Group/Purpose of this Manual 6

 2.2 Important Reference Documentation 6

 2.3 Contents of Delivery 6

3 Basic Safety Guidelines 7

 3.1 Symbols Used 7

 3.2 Disclaimer 8

 3.3 General Safety Guidelines 9

 3.4 Designated Use 11

 3.5 Software/Training 12

4 Norms and Guidelines13

 4.1 Residual Risks 13

 4.2 Safety of the Machine or Equipment 13

 4.3 Regular Technical Inspection of the Safety-Related Switches
 13

 4.4 Guidelines..... 13

 4.4.1 Functional Safety Standards..... 14

 4.4.2 EU Declaration of Conformity 14

 4.5 Safety-relevant Parameters 15

5 Type Label15

6	Technical Data	16
6.1	Performance Data	16
6.2	Electrical Requirements	17
6.3	Display	17
6.4	Terminal	18
6.5	Terminal Requirements	18
6.6	Miscellaneous	18
6.7	Environmental Conditions	19
7	Mechanical Dimensions	20
7.1	Wall Mount	21
8	Interfaces	22
8.1	Rear Connectors	22
8.2	Key Switch	24
8.3	Confirmation Switch	24
8.4	Emergency Stop	25
9	Assembly/Installation	26
9.1	Check Contents of Delivery	26
10	Wiring	27
10.1	ESD Protection	27
10.2	USB Interface Connections	27
10.3	Recommended Cable Shielding	27
10.4	Connection from the Control Cabinet to the HBG	28

11

Transport/Storage.....

29

12

Storage

29

13

Maintenance

30

13.1

Cleaning and Disinfecting the Touch Screen

30

13.2

Service

31

13.3

Repair

31

14

Disposal.....

32

1 Essential Components

- 8.4" SVGA TFT color display with backlighting
- 8.4" Touchscreen
- Confirmation button (mounted on the rear side), 2-channel configuration
- Key switch (mounted top center), 2-channel, wired in series with the confirmation button
- Emergency stop button (mounted top-center), two-channel wiring.
- USB socket with cover
- M16 connector with special cable for HMI-Link (swivels 90°)

2 Introduction

2.1 Target Group/Purpose of this Manual

This operating manual contains all information required to operate this product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and information on training, and the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

2.2 Important Reference Documentation

- Safety System Handbook
- Connection Cables for Operating Devices

This and additional documents can be downloaded from our website or obtained through SIGMATEK Support.

2.3 Contents of Delivery

1x HBG 0811

3 Basic Safety Guidelines

3.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes:

DANGER



Danger indicates that death or serious injury **will** occur, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, entraînera des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

WARNING



Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

⇒ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, entraînera des blessures graves, voire mortelles.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION



Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

⇒ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, peut entraîner des blessures assez graves ou légères.

⇒ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



Information

Provides important information on the product, handling or relevant sections of the documentation, which require particular attention.



Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

3.2 Disclaimer



The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly and device configuration. The machine operator is responsible for safe handling and proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documentation and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through non-compliance with these instructions or applicable regulations.

3.3 General Safety Guidelines

The safety guidelines in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.



According to EU Guidelines, the operating instructions are a component of a product.

This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions.

This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Maintain this operating manual in readable condition and keep it accessible for reference.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine guidelines 2006/42/EG before introducing a machine to the market.

Before commissioning this product, check that conformance with the provisions of the 2006/42/EG guidelines is correct. As long as the machine with which the product should be used does not comply with the guideline, operating this product is prohibited.

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.

Prevent foreign bodies and fluids from entering the device.

The device must not be opened, otherwise it could be damaged!

If the device does not function as properly or is damaged in a way that could pose a hazard, it must no longer be used!

Regularly check the housing for mechanical damage.

The handheld operating device can only be used in the visible area for the application to control, the system integrator must perform a risk analysis.

The module complies with EN 61131-2.

In combination with a machine, the machine builder must comply with EN 60204-1 standards.

For your safety and that of others, compliance with environmental conditions is essential.

The control cabinet must be connected to ground correctly.

To perform maintenance or repairs, disconnect the system from the power supply.

3.4 Designated Use

The Safety functions implemented in the product are designed for use with safety applications in a PLC control and meet the required conditions for safe operation in compliance with SIL 3, HFT 1 according to EN IEC 62061 and in compliance with PL e. Cat. 4 in accordance with EN ISO 13849-1.

CAUTION



The instructions contained in this operating manual must be followed.

For error-free operation, proper transport and storage are essential.

Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.

Qualified personnel in this context are people, who have completed training or have trained under the supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict guidelines and standards of safety technology (functional safety).

For your safety and that of others, use the product for its designated purpose only.

Correct EMC installation is also included under designated use.

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this manual or the specifications defined in the technical data.

As required by EN ISO 13850, section 4.1 and EN 60204-1, section 10.7.1, confusion between a functioning and non-functioning handheld operating panel must be prevented.

3.5 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor, the safety application is created using the LASAL SAFETYDesigner. Basic information on safety (functional safety) can be found in the Safety System Handbook.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

4 Norms and Guidelines

4.1 Residual Risks

CAUTION



In the system integrator's risk analysis, the following residual risks must be taken into consideration for the product:

- release of environmentally harmful substances, emissions and undesired temperatures
- dangerous contact voltages
- effects of electrical, magnetic and electromagnetic fields produced during operation
- possible effects of information technology devices

4.2 Safety of the Machine or Equipment



Observe all on-site rules and regulations for accident prevention and occupational safety.

4.3 Regular Technical Inspection of the Safety-Related Switches

CAUTION



According to the machine guideline, mechanical and electromechanical safety-oriented components (e.g. relays, switches, etc.) must be regularly checked for correct function.

Emergency stop switch: at least 1x/month

Key switch: at least 1x/year

Confirmation switch: at least 1x/year

Please note the requirements of your machine. Due to Type C standards or other guidelines, requirements could differ regionally.

4.4 Guidelines

The product was constructed in compliance with the following European Union guidelines and tested for conformity.

4.4.1 Functional Safety Standards

EN IEC 62061	Safety of machinery - Functional safety of safety-related control systems
EN ISO 13849-1	Safety of machinery - Safety-related components of controls - Part 1: General Design Principles
EN ISO 13849-2	Safety of machinery - Safety-related components of controls - Part 2: Validation
EN ISO 13850	Safety of machines - Emergency stop function - design principles

4.4.2 EU Declaration of Conformity



EU Conformity Declaration

The HBG 0811 conforms to the following European guidelines:

- **2006/42/EG** Machine Guideline
- **2014/30/EU** "Electromagnetic Compatibility" (EMC guideline)
- **2011/65/EU** "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Guideline)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product or use the search function and the keyword "EU Declaration of Conformity".

4.5 Safety-relevant Parameters

The use of the specified parameters requires a risk analysis of the end application.

Input Module	Safety Ratings (SIL 3, HFT 1, PL e / Cat. 4) ¹⁾
HBG 0811	PFH = 1.1E-11 (1/h)
Including Safe CPU (SCP XXX)	MTTF _D = 306 years
	DC = 99 %

Confirmation switch	B _{10D} = 100,000
Key switch	B _{10D} = 10,000
Emergency stop switch	B _{10D} = 325,000

¹⁾ Depending on the application, the probability of failure must be determined for the electromechanical components included based on the B_{10D} values listed here and integrated into the calculation for the entire system.

5 Type Label



HW: X.XX
SW: XX.XX.XXX
Safety Version: SXX.XX.XX

SIGMA TEK GMBH & CO KG
Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN

Serial No.

Article Number Product Name Short Name

Exemplary nameplate (symbol image)



HW: 1.00
SW: 01.00.000
Safety Version: S01.00.00

SIGMA TEK GMBH & CO KG
Sigmatekstrasse 1 A-5112 LAMPRECHTSHAUSEN

12345678

12-246-133-3 Handbediengerät Wireless HGW 1033-3

HW: Hardware Version
SW: Software Version

6 Technical Data

6.1 Performance Data

Interfaces	1x HMI-Link 1x USB 2.0 (Type-A) 1x Safety interface
Internal interface connections and devices	1x TFT color display 1x touch screen
Operating panel	touch screen (analog resistive) Emergency stop switch (2 normally closed contacts) confirmation switch (2 normally open, 3-stage contacts) key switch (2 normally open)
Display	8.4" TFT color display 800 x 600 RGB

CAUTION



The Safety interface must be used exclusively with the SIGMATEK SCP XXX! The status of the Safety-related inputs (confirmation, key, emergency stop switches) is sent to the SCP XXX.

6.2 Electrical Requirements

Supply voltage	typically +24 V DC (PELV)	
	minimum +24 V DC (PELV)	maximum +30 V DC (PELV)
Supply voltage (UL)	+24-30 V DC (NEC Class 2 or LVLC)	
Current consumption Power supply +24 V	typically 550 mA (without externally connected devices)	maximum 750 mA (with external devices connected)
Protection class	III	
Inrush current	maximum 15 A for 500 µs	
USB current load	maximum 0.5 A	



USA and Canada:

The supply must be limited to:

- a) max. 5 A at voltages from 0-20 V DC, or
- b) 100 W at voltages from 20-60 V DC.

The limiting component (e.g. transformer, power supply or fuse) must be certified by an NRTL (Nationally Recognized Testing Laboratory).

6.3 Display

Type	8.4" TFT LCD color display
Resolution	SVGA 800 x 600 pixels
Color depth	18-bit RGB (262K colors)
LCD mode	normal black
LCD Polarizer	transmissive
Pixel size	0.213 x 0.213 mm
Backlighting	LED
Contrast	typically 600 : 1
Brightness	typically 250 cd/m²
Angle CR ≥ 10	left and right 75, above 70° and below 60°

6.4 Terminal

Dimensions	217.4 x 187.7 x 72 mm (W x H x D) (without emergency stop/key switch)
Material	housing: PC/ASA color: RAL7024
Weight	typically, circa 0.95 kg without connector cable

6.5 Terminal Requirements

Connection technology:	M16 plug (see X2 on page 23)
	Special connector cable
	minimum bend radius: 147 mm

6.6 Miscellaneous

Article number	12-245-0811
Connector cable	optionally available (see documentation Connection Cables for Operating Devices)
Standard	UL 508 (E247993)
Approvals	CE, TÜV EG type tested, ^c UL _{US}
Mission time	20 years




On HMI-Link extenders with SW version 1.x, HMI-Link display units/operating devices with SW version 1.x must be used.



6.7 Environmental Conditions

Storage temperature	-10 ... +60 °C	
Ambient temperature	0 ... +45 °C	
Humidity	10-90 %, non-condensing	
Operating conditions	pollution degree 2 altitude up to 2000 m	
Noise emissions	≤ 70 dB	
EMC stability	EN 61000-6-2 (industrial area) (increased requirements according to EN IEC 62061)	
Shock resistance	EN 60068-2-27	150 m/s ²
Vibration resistance	10 m/s ²	
Protection type	EN 60529	IP54 (only with all protective caps in place)
Free fall (without packaging)	DIN EN 60068-2-31	500 mm

7 Mechanical Dimensions

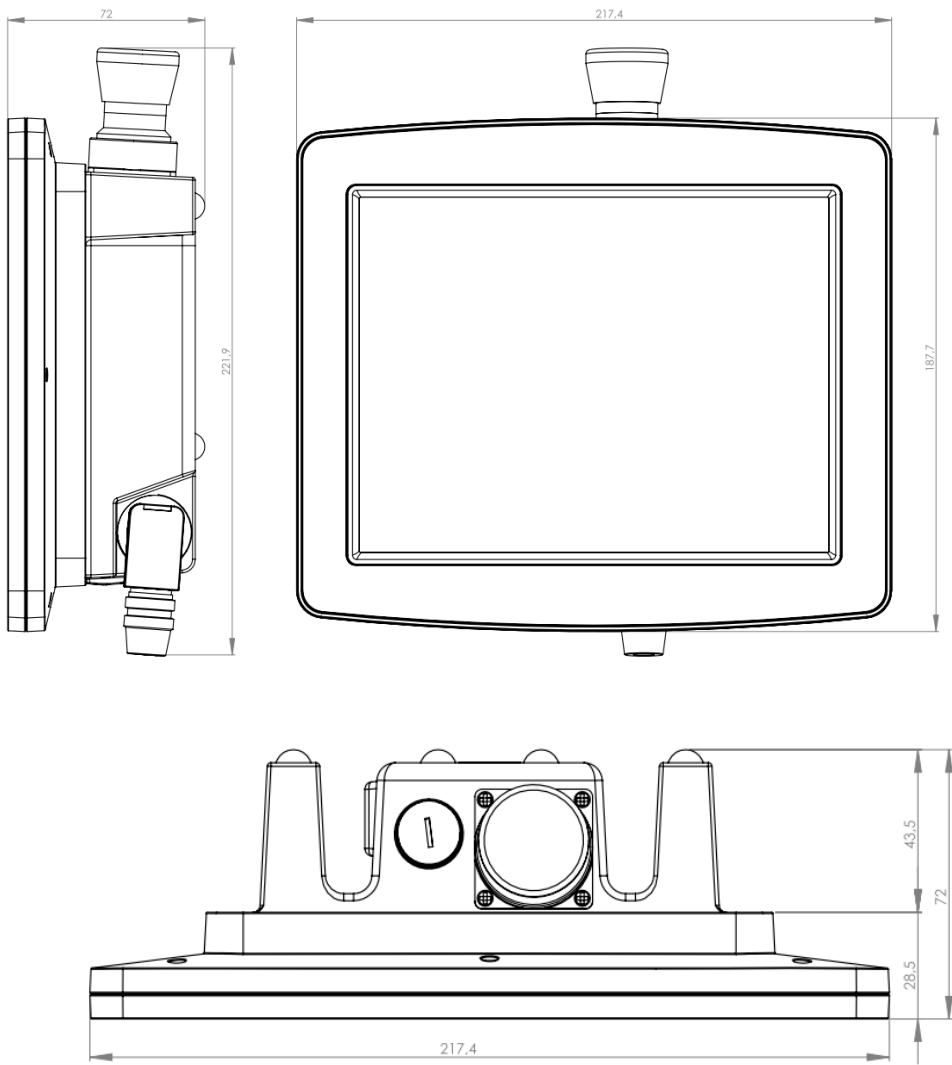


7.1 Wall Mount

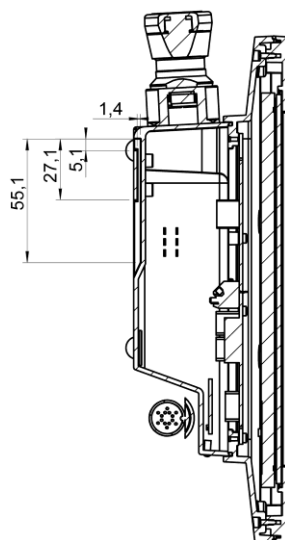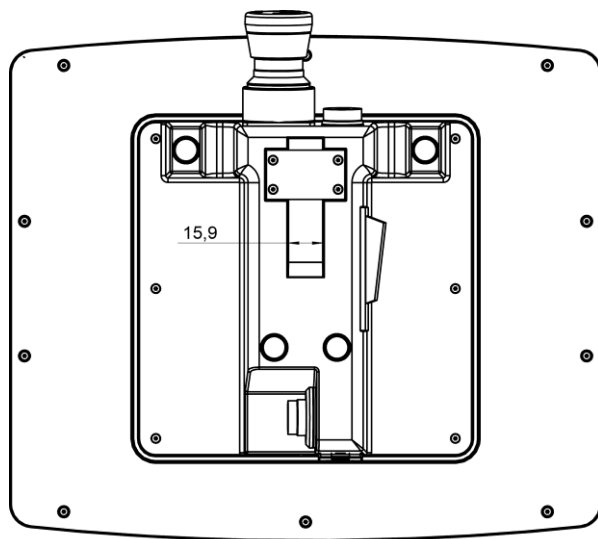


8 Interfaces

8.1 Rear Connectors

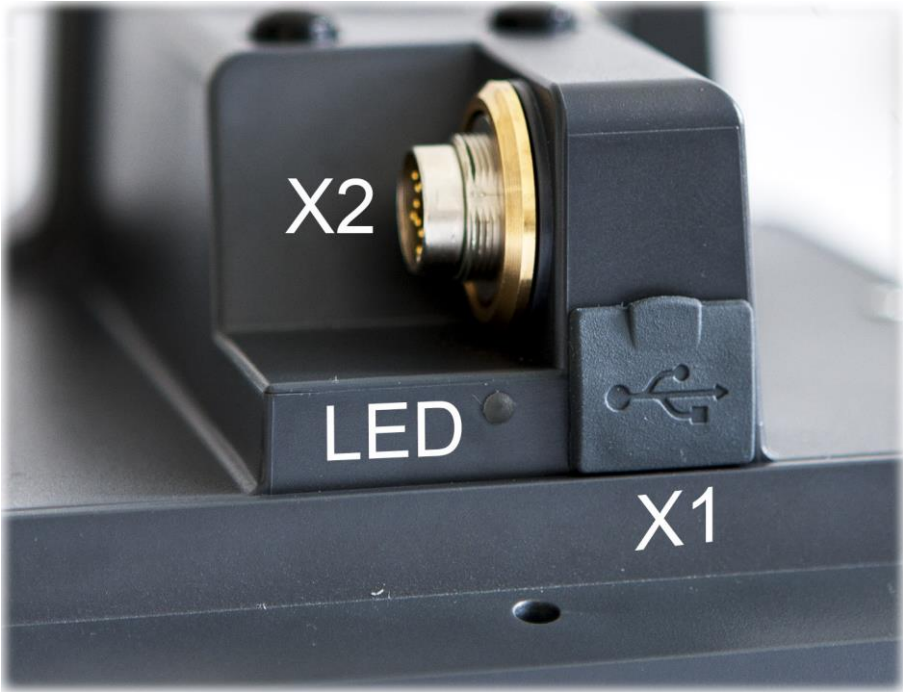

X1: USB 2.0 Interface

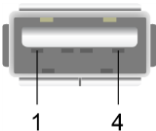


Pin	Function
1	+5 V
2	D-
3	D+
4	GND



It should be noted that many of the USB devices on the market do not comply with USB specifications; this can lead to device malfunctions. It is also possible that these devices will not be detected at the USB port or function correctly. It is therefore recommended that every USB stick or USB supply be tested before actual use.

X2: Cable Connector M16

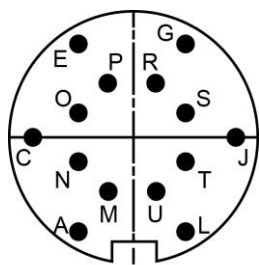

Pin	Wire color	Function	
L	Yellow	Safety interface H	
J	Green	Safety interface L	
G	Black	Safety interface shield	
E	Red	+24 V DC	
C	Black	GND	
A	shield	HMI-Link shield	
And	White	HMI-Link	D2+
T	Red		D3+
S	Blue		D3-
R	Pink		D4-
P	Grey		D4+
O	Yellow		D1-
N	Green		D1+
M	Brown		D2-



The appropriate connector cables are available as accessories. See documentation [Connection Cables for Operating Devices](#).

LED

LED Status	Meaning
LED lights green	DC OK


8.2 Key Switch

The key switch is implemented two-stage and in series with the confirmation switch.




8.3 Confirmation Switch

The confirmation switch is three-stage. The confirmation switch must be activated with the key switch, since they are connected in series. If the switch is not pressed or pressed only partially, it is inactive. The switch is activated with a single press (middle stage). In the SCP XXX, the "HBG0811" module is used and inputs 1 and 2 are used for the confirmation switch.

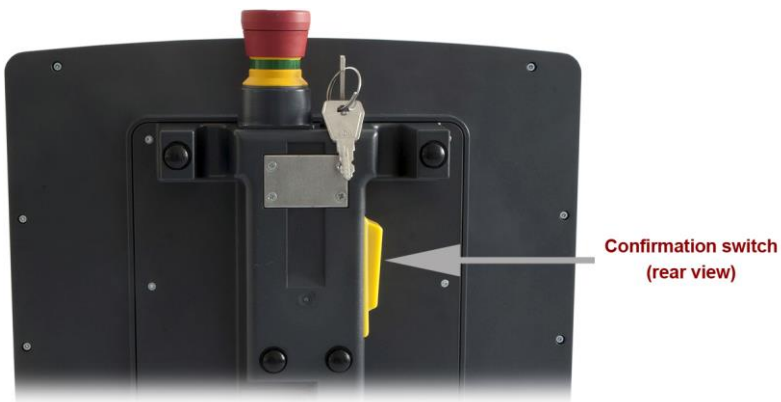

8.4 Emergency Stop

The Emergency Stop is two-stage. In the SCP XXX, the "HBG0811" module is used with the inputs 3 and 4.

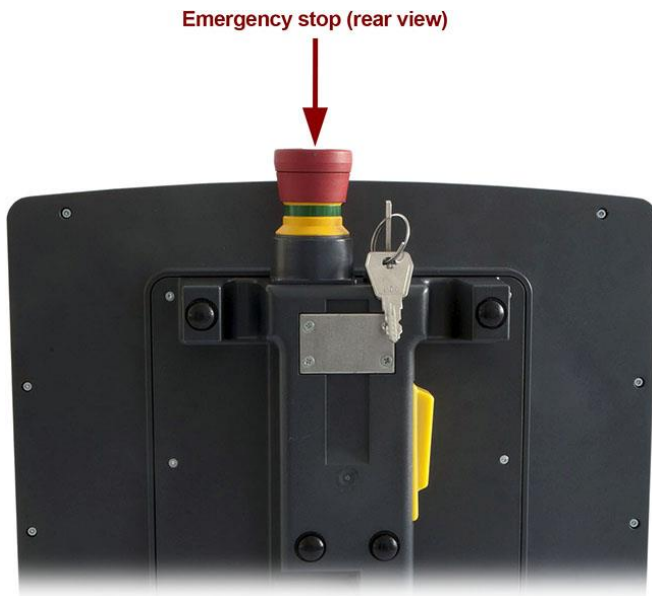

9 Assembly/Installation

9.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 2.3 Contents of Delivery for more information.



On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.

Damaged components can disrupt or damage the system.

10 Wiring

10.1 ESD Protection



The operator must ensure that no ESD disturbances affect the product.

10.2 USB Interface Connections


The handheld operating panel has a USB interface. This interface has a USB interface connection that can be used to connect various USB devices (keyboard, mouse, storage media, hubs, etc.).

10.3 Recommended Cable Shielding

For applications in which the bus is operated outside the control cabinet, the correct shielding is required. Especially when for structural reasons, the bus line must be placed next to sources of strong electromagnetic interference. It is recommended that wiring the connector cable in parallel with power cables be avoided whenever possible.

10.4 Connection from the Control Cabinet to the HBG

It is recommended that the shielding be mounted at the entry point of the control cabinet housing. Noise can then be deflected from the electronic components before reaching the module.

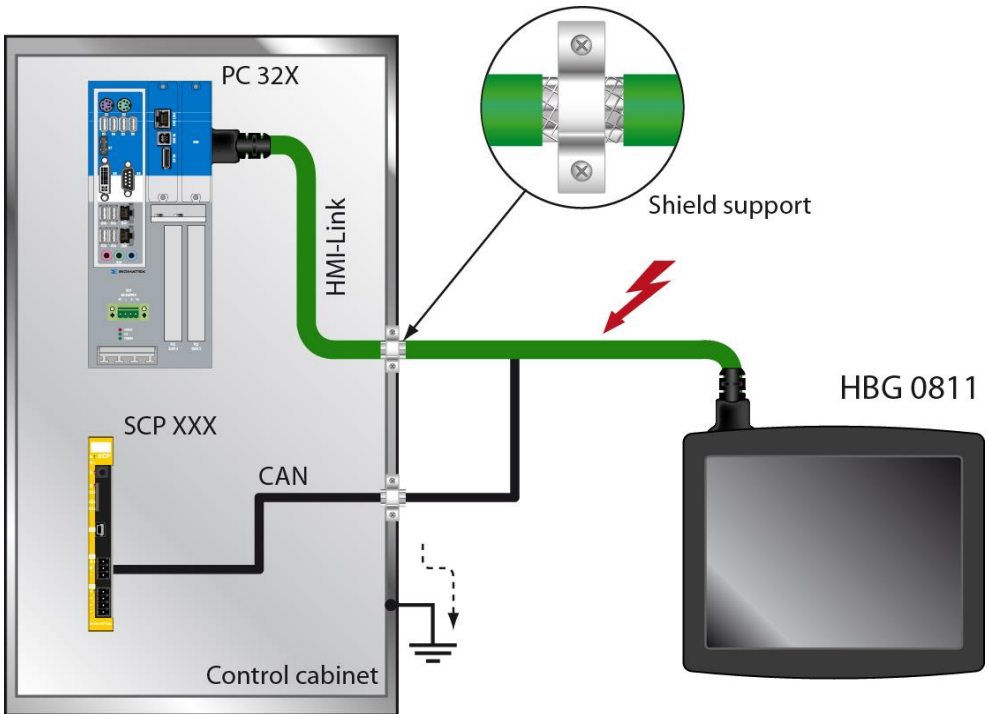

11 Transport/Storage



This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

During transport, temperature and humidity fluctuations may occur. Ensure that no moisture condenses within or on the device by letting the device climatize to room temperature while turned off.

When possible, the device should be transported in its original packaging. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences, such as cardboard filled with air cushioning.

12 Storage



When not in use, store the operating panel according to the storage conditions. See Chapter 11.

During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

13 Maintenance



During maintenance and service, observe the safety guidelines in Chapter 3.

13.1 Cleaning and Disinfecting the Touch Screen

CAUTION



Before cleaning and disinfecting the touch screen, it must be deactivated in order to prevent triggering functions or commands unintentionally; either by turning off the terminal or disabling the touch screen via the application!

The touch screen can only be cleaned with a soft, damp cloth. To dampen the cloth, a mild cleaning solution such as an anti-static foam cleaner is recommended. To avoid fluids/cleaning solutions from getting into the housing, the device must not be sprayed directly. To clean, no erosive cleaning solutions, chemicals, abrasive cleansers or hard objects that can scratch or damage the touch screen may be used. The use of steam jets or compressed air is prohibited.

For disinfecting, alcohol-based surface disinfectants that do not contain lubricating agents can be used. For error-free function of the touch screen, the disinfectant cannot leave any residue on the screen.

WARNING



If the device is contaminated with toxic or erosive chemicals, it must be carefully cleaned as quickly as possible to prevent personal injury and machine damage!



To ensure the optimal function of the panel, the touch screen should be cleaned at regular intervals!

To avoid damaging the touch screen, using either the fingers or a stylus to operate the panel is recommended.

13.2 Service

This product was constructed for low-maintenance operation.

13.3 Repair



In the event of a defect/repair, send the panel with a detailed error description to the address listed at the beginning of this document.

For transport conditions, see chapter Transport/Storage.

14 Disposal



Should you need to dispose of the device, the national electronic waste regulations must be observed.

The panel cannot be discarded with domestic waste.



Documentation Changes

Change date	Affected page(s)	Chapter	Note
27.06.2016			CAN -> safety interface
09.02.2017	20	5.2 Connector Cable Layout	Graphic corrected
12.04.2017	4	1 Essential Components	Length specification removed
	14	3.5 Terminal Requirements	Cable expanded
	14	3.6 Miscellaneous	Article number expanded
	20	5.2 Connector Cable Layout	Length specification removed; graphic replaced
08.03.2018		Document	Safety recertification
	10	2.8 Safety-Relevant Parameters	Emergency stop switch changed
	13	3.5 Terminal Requirements	Connection technology:
		3.6 Miscellaneous	Connector cable removed
		5.2 Connector Cable Layout	
16.08.2018	11	3.1 Performance Data	Note corrected
08.09.2020	12	3.2 Electrical Requirements	Protection class added
	14	3.7 Environmental Conditions	For protection type, (only with all protective caps in place) added
26.02.2021	10	2.8 Safety-Relevant Parameters	PFH and DC values changed
07.06.2024	7	3 Basic Safety Guidelines	Norms specified
	18	6.6 Miscellaneous	Mission time added
	31	13.2 Service	Chapter added
		Document	Documentation expanded Wording of standards corrected

