

SDM 081

S-DIAS Safety Digital Mixed Module

Instruction Manual

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2015
SIGMATEK GmbH & Co KG

Translation of the Original Instructions

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

S-DIAS Safety Digital Mixed Module

SDM 081

The S-DIAS Safety digital output module SDM 081 has the safety integrity level SIL 3 (EN IEC 62061) or Performance level e (PL e) (EN ISO 13849).

The SDM 081 has:

- 2 safe +24 V outputs with a maximum of 2 A per output (EN 61131-2, EN IEC 62061 and EN ISO 13849)
- 6 safe +24 V DC/0.5 ms inputs (EN 61131-2; EN IEC 62061 und EN ISO 13849)
- Double clock output signal (short circuit proof)

The safe outputs are used for the safety-oriented output of eight actuator signals to, for example, control relays, valves, etc.

The safety inputs are used for reading six actuator signals (Emergency Stop, confirmation button etc.).

To test inputs and detect cross circuits (e.g. Emergency Stop), the SDM 081 has two non-safe signal outputs, A and B.

The safety-related SDM 081 is ideal for use in systems with optional modules and interface variables according to Safety System Handbook, see homepage.¹⁾

To use the SDM 081 in an application, at least one Safety CPU module that regulates the synchronized communication with the safety modules using safe bus telegrams is also required. This also includes

- Processing the safe application and
- the distribution of configuration data to remote Safety modules.



1) Using the search function with the keyword "Safety System Handbook"

Table of Contents

1 Introduction	4
1.1 Target Group/Purpose of this Operating Manual	4
1.2 Important Reference Documentation	4
1.3 Contents of Delivery	4
2 Basic Safety Directives	5
2.1 Symbols Used	5
2.2 Disclaimer	7
2.3 General Safety Directives	7
2.4 Designated Use	9
2.5 Software/Training	10
3 IT Security	11
4 Standards and Directives	12
4.1 Residual Risks	12
4.2 Safety of the Machine or Equipment	12
4.3 Directives	12
4.3.1 Functional Safety Standards	13
4.3.2 EU Conformity Declaration	13
5 Safety-Relevant Parameters	14
5.1 Mounting Position Horizontal 0-55 °C Ambient Temperature	14
5.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	15
5.3 Compatibility	16
6 Type Plate	17
7 Technical Data	18
7.1 Input Specifications	18
7.2 Cross-Circuit Detection Signal Outputs Specifications	18
7.3 Input Circuit	19

7.4 Output Specifications	20
7.5 Maximum Inductive and Capacitive Load	21
7.5.1 Maximum Inductive Load L (mH) at Load Current I (A)	21
7.5.2 Maximum Capacitive Load L (mH) at Load Current I (A)	22
7.6 Output Circuit	23
7.7 Electrical Requirements	23
7.8 Miscellaneous	25
7.9 Environmental Conditions	25
8 Mechanical Dimensions	26
8.1 Connector Layout	27
8.2 Status LEDs	28
8.3 Applicable Connectors	29
8.4 Label Field	30
9 Wiring	31
9.1 Wiring Example	31
9.2 Note	32
10 Assembly/Installation	33
10.1 Check Contents of Delivery	33
10.2 Mounting	34
11 Transport/Storage	36
12 Storage	37
13 Maintenance	38
13.1 Service	38
13.2 Repair	38
14 Disposal	39

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions.
Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

- Safety System Handbook

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x SDM 081

2 Basic Safety Directives

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes.



DANGER

Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



WARNING

Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

→ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.

CAUTION

Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

INFORMATION**INFORMATION**

→ Provides important information on the product, handling or relevant sections of the documentation, which require particular attention.

2.2 Disclaimer

The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.

According to EU Directives, the operating manual is a component of a product. This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions. This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

INFORMATION



Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.
Prevent foreign bodies and fluids from entering the device.
The device must not be opened!

Manipulez l'appareil avec précaution et ne le laissez pas tomber.
Empêchez les corps étrangers et les liquides de pénétrer dans l'appareil.
L'appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé !

For your own safety and that of others, compliance with the environmental conditions is essential.

Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essentiel.

2.4 Designated Use

The Safety functions implemented in the product are designed for use with safety applications in a PLC control and meet the required conditions for safe operation.

CAUTION



The instructions contained in this operating manual must be followed. For error-free operation, proper transport and storage are essential. Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.

Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict directives and standards of safety technology (Functional Safety).

Les instructions contenues dans ce manuel technique doivent être suivies. Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels.

L'installation, le montage, la programmation, la mise en service initiale, l'exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.

Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d'un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l'équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité (Sécurité fonctionnelle).

For your own safety and that of others, the product should be used for their designated purpose only.

Correct EMC installation is also included under designated use.

Pour votre propre sécurité et celle des autres, le produit ne doit être utilisé qu'à des fins prévues.

Une installation CEM correcte est également incluse dans l'utilisation prévue.

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this operating manual or the specifications defined in the technical data.

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
 - utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques.
-

2.5 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor, the Safety application is created using the SAFETYDesigner. Basic information on Safety (Functional Safety) can be found in the Safety System Handbook.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 IT Security

S-DIAS safety modules were developed for integration into a network protected against unauthorized access.

For example, the following dangers can affect the network:

- Unauthorized access
- Data manipulation
- and many other IT security violations

It is the responsibility of the integrator or operator to carry out a risk analysis of the connections between S-DIAS modules and the integration into the overall infrastructure. The following measures, for example, may result from this (if necessary):

- Separation of IT/OT networks (VLANs or physical)
- Firewalls
- Password-protected user accounts
- Data encryption
- and much more

With regard to the functional safety objective, in this case the STO safety function, no direct effects on the function or its integrity are possible, since the function cannot be influenced via communication-based interfaces.

The availability of the overall system (as with all safety functions) can be compromised by external attacks, hence the above measures are necessary.

4 Standards and Directives

4.1 Residual Risks



CAUTION

The following residual risks for the product must be included in the system integrator's risk assessment:

- Release of non-environmentally safe substances, emissions and unusual temperatures
- Hazardous contact voltages
- Effects of operational electrical, magnetic and electromagnetic fields
- Possible effects of information technology devices

Les risques résiduels suivants pour le produit doivent être inclus dans l'évaluation des risques de l'intégrateur de système :

- Libération de substances non respectueuses de l'environnement, émissions et températures inhabituelles
- Tensions de contact dangereuses
- Effets des champs électriques, magnétiques et électromagnétiques opérationnels
- Effets possibles des dispositifs de technologie de l'information

4.2 Safety of the Machine or Equipment

Observe all on-site rules and regulations for accident prevention and occupational safety.

4.3 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

4.3.1 Functional Safety Standards

EN IEC 62061	Safety of machinery - Functional safety of safety-related control systems
EN ISO 13849-1	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2	Safety of machinery - Safety-related parts of control systems - Part 2: Validation
EN IEC 61508-1	Functional safety - Part 1: General requirements
EN IEC 61508-2	Functional safety - Part 2: Requirements for electrical / electronic / programmable electronic safety-related systems
EN IEC 61508-3	Functional safety - Part 3: Software requirements

The issue status of the applied standards can be found in the EU declaration of conformity.

4.3.2 EU Conformity Declaration



EU Declaration of Conformity

The product SDM 081 conforms to the following European directives:

- 2006/42/EG Machine Directive
- 2014/30/EU Electromagnetic Compatibility (EMC Directive)
- 2011/65/EU "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product.

5 Safety-Relevant Parameters

5.1 Mounting Position Horizontal 0-55 °C Ambient Temperature

Mixed Module	Safety Parameters	Safety Levels
SDM 081 in combination with CPU module SCP 011/SCP 111		
Inputs	1-channel application: PFH = 2.20E-09 (1/h) SFF = 99 % MTTF _D = 1552 years DC = 97 %	1-channel application: PL d ¹⁾ / Cat. 2 SIL 3
	2-channel application: PFH = 7.70E-10 (1/h) SFF = 99 % MTTF _D = 1753 years DC = 97 %	2-channel application: PL e / Cat. 4 SIL 3
Outputs up to HW version 3.00	PFH = 2.00E-09 (1/h) SFF = 99 % MTTF _D = 1680 years DC = 98 %	PL e / Cat. 4 SIL 3
Outputs starting with HW version 4.00	PFH = 2.40E-09 (1/h) SFF = 99 % MTTF _D = 1346 years DC = 98 %	PL e / Cat. 4 SIL 3

¹⁾ DC is "high" according to table 5 and the corresponding note EN ISO 13849. In combination with the high MTTF_D value and the good PFH value, DC is the performance level PL d according to table K.1.

5.2 Mounting Position Horizontal 0-60 °C Ambient Temperature

Mixed Module	Safety Parameters	Safety Levels
SDM 081 in combination with CPU module SCP 011/SCP 111		
Inputs	1-channel application: PFH = 2.60E-09 (1/h) SFF = 99 % MTTF _D = 1300 years DC = 97 %	1-channel application: PL d ¹⁾ / Cat. 2 SIL 3
	2-channel application: PFH = 9.50E-10 (1/h) SFF = 99 % MTTF _D = 1475 years DC = 97 %	2-channel application: PL e / Cat. 4 SIL 3
Outputs up to HW version 3.00	PFH = 2.20E-09 (1/h) SFF = 99 % MTTF _D = 1461 years DC = 98 %	PL e / Cat. 4 SIL 3
Outputs starting with HW version 4.00	PFH = 2.70E-09 (1/h) SFF = 99 % MTTF _D = 1140 years DC = 98 %	PL e / Cat. 4 SIL 3
SDM 081 in combination with CPU module SCP 211/SCP 111-S		
Inputs	1-channel application: PFH = 2.90E-09 (1/h) SFF = 99 % MTTF _D = 973 years DC = 97 %	1-channel application: PL d ¹⁾ / Cat. 2 SIL 3
	2-channel application: PFH = 9.60E-10 (1/h) SFF = 99 % MTTF _D = 1063 years DC = 98 %	2-channel application: PL e / Cat. 4 SIL 3
Outputs	PFH = 3.50E-09 (1/h) SFF = 99 % MTTF _D = 791 years DC = 98 %	PL e / Cat. 4 SIL 3

Reason for SIL 3 with single-channel use:

Because the high SFF value is greater than 99 %, SIL 3 can be accepted with a hardware tolerance (HFT) of 0 according to EN IEC 62061.

¹⁾ DC is "high" according to table 5 and the corresponding note EN ISO 13849. In combination with the high MTTF_D value and the good PFH value, DC is the performance level PL d according to table K.1.

5.3 Compatibility

INFORMATION



Compatibility

For compatibility of the S-DIAS Safety modules, see section "Compatibility of S-DIAS Safety Modules" in the system handbook.

Test Signals for Cross-Circuit Detection

The module sends pulses in cyclic time intervals to detect a crossed circuit in the outputs. When selecting the actuators, keep in mind that these pulses do not activate the actuators or trigger any diagnostic messages. The pulse signals cannot be deactivated or configured.

CAUTION



Cross-Circuit Detection

It is important to keep in mind that the cross-circuit detection only functions correctly when it is configured and wired correctly. This applies equally to in- and outputs.

It must also be considered that the cross-circuit detection only works between adjacent inputs. Cross circuits between adjacent inputs must be prevented via constructive measures (e.g. separate wiring, insulated cables).

6 Type Plate

The type plate provides information about the product's features. The type plate shown here is only an example.

Approbations		Standards
QR-Code  BJ: XXXX/XX S/N XXXXXXXX	Short Name Specifications FS: XXX.XX.XX FW: XXX LD: XX.X HW: X.XX	Electrical Ratings  SIGMATEK Sigmatelstraße 1 A-5112 Lamprechtshausen www.sigmatek-automation.com
Article Number		Product Name

- HW: Hardware version
- FS: Safety version number
- FW: Firmware version
- LD: Logic device version
- QR-Code: Serial number

7 Technical Data

7.1 Input Specifications

The inputs are Type 1 according to EN 61131-2

Number	6	
Input voltage	typically +24 V DC	
Input voltage range	minimum +18 V	maximum +30 V ¹⁾
Signal level	low: $\leq +5$ V	high: $\geq +15$ V
Switching threshold	typically +11 V	
Input current	3 mA at +24 V	
Input delay	0.5 ms	

INFORMATION



¹⁾ With increased ambient temperature > 55 °C the maximum permissible supply voltage is reduced from +30 V to +28.8 V.

7.2 Cross-Circuit Detection Signal Outputs Specifications

Number	3x signal A	3x signal B
Rated output voltage	+24 V DC	
Output voltage range	minimum +18 V	maximum +30 V ²⁾
Output current	100 mA at +24 V	
Miscellaneous	short-circuit proof	


INFORMATION

2) With increased ambient temperature $> 55^{\circ}\text{C}$ the maximum permissible supply voltage is reduced from $+30\text{ V}$ to $+28.8\text{ V}$.

With increased ambient temperature $> 55^{\circ}\text{C}$ the maximum permissible supply voltage is reduced from 30 V to 28.8 V . The clock outputs A and B are generated once internally and are wired in parallel to the connectors. A direct cross-circuit of Clock A and/or B of a connector therefore results in cross-circuit detection in all channels.

When using the digital inputs with the clock outputs for cross-fault detection for long cable lengths, make sure that the cable capacitance from the clock output to the digital input does not exceed a value of 100 nF and that the cable resistance does not exceed a value of $250\ \Omega$, so that the cross-fault detection does not detect a wiring error with proper wiring.

7.3 Input Circuit

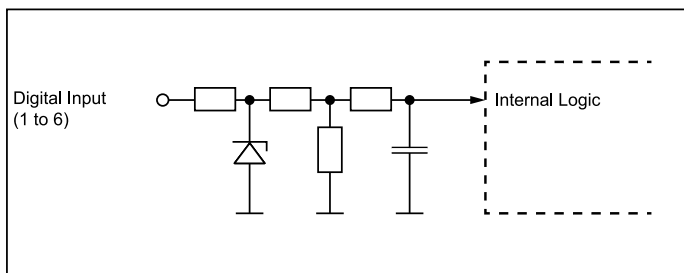


7.4 Output Specifications

All safety outputs are short-circuit protected and specified in accordance with EN 61131-2. The outputs are compatible with input of type 1, 2 and 3.

Number	2	
Rated output voltage	+24 V DC	
Output voltage range	minimum +18 V	maximum +30 V
Maximum output current	2 A	
Maximum total current per output group (2 outputs)	4 A up to max. 55 °C ambient temperature	
Brake voltage with switching-off inductive loads	typically 0.85 V	
Maximum switch-off energy of the outputs (inductive load)	maximum 0.4 Joule per channel	
Turn-on delay	< 200 µs	
Turn-off delay	< 1 ms	
Miscellaneous	short-circuit proof	
Cutoff test pulse width (t_1)	minimum 0.1 ms	maximum 1.5 ms
Cutoff test pulse interval bet. FET Test and HSS Test (t_2)	minimum 112 ms	maximum 6450 ms
Cutoff test pulse interval (t_3)	60 s	

Cutoff Test Pulse Timing

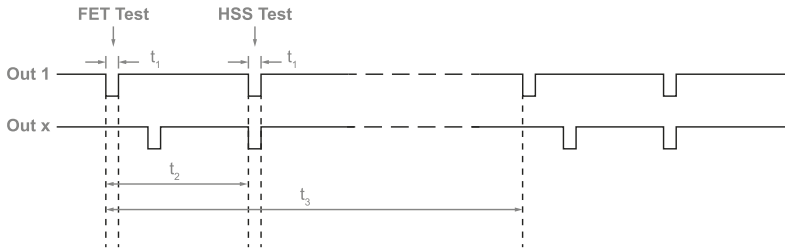


INFORMATION




A fuse for the supply voltage must be installed, which can sufficiently limit voltage and current.

7.5 Maximum Inductive and Capacitive Load

7.5.1 Maximum Inductive Load L (mH) at Load Current I (A)

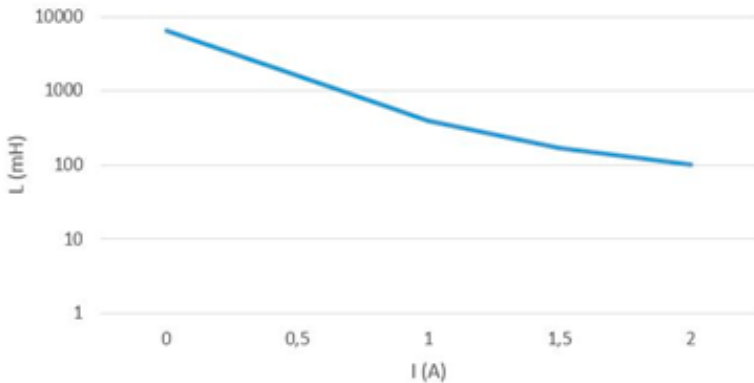


7.5.2 Maximum Capacitive Load L (mH) at Load Current I (A)

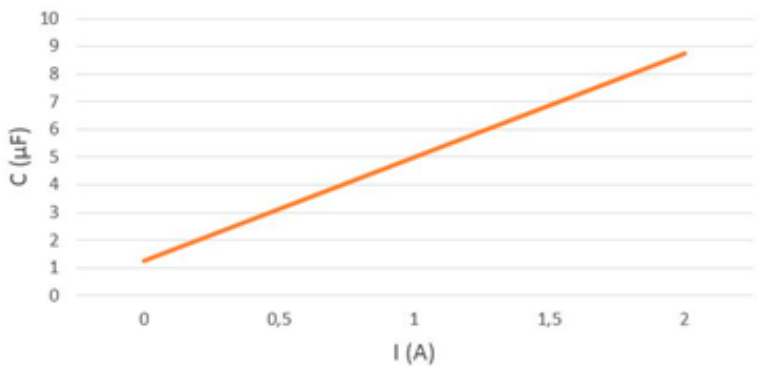

I (A)	L (mH)	C (μF)
0	6400	1.25
0.5	1600	3.13
1	400	5
2	100	8.75


7.6 Output Circuit

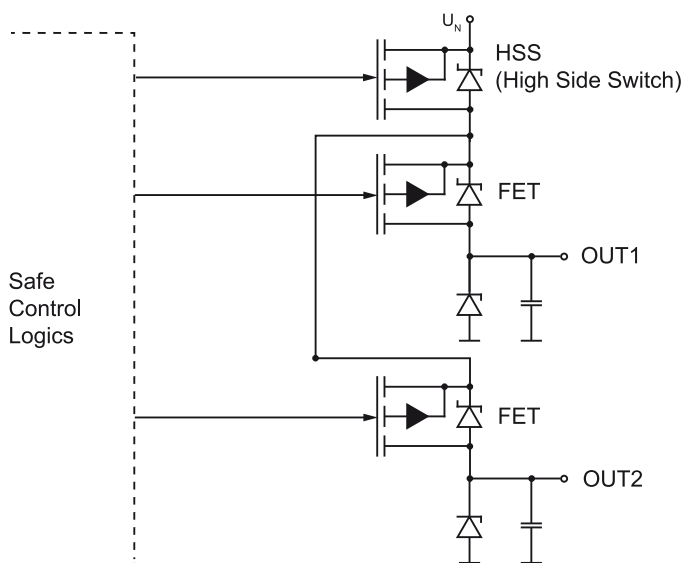

The figure shows the internal output circuit of the SDM 081.

7.7 Electrical Requirements

Voltage supply from Safety bus	+12 V	
Current consumption on the Safety bus (+12 V supply)	-	maximum 34 mA
Voltage supply from S-DIAS bus	+24 V	
Current consumption on the S-DIAS bus (+24 V supply)	-	maximum 21 mA

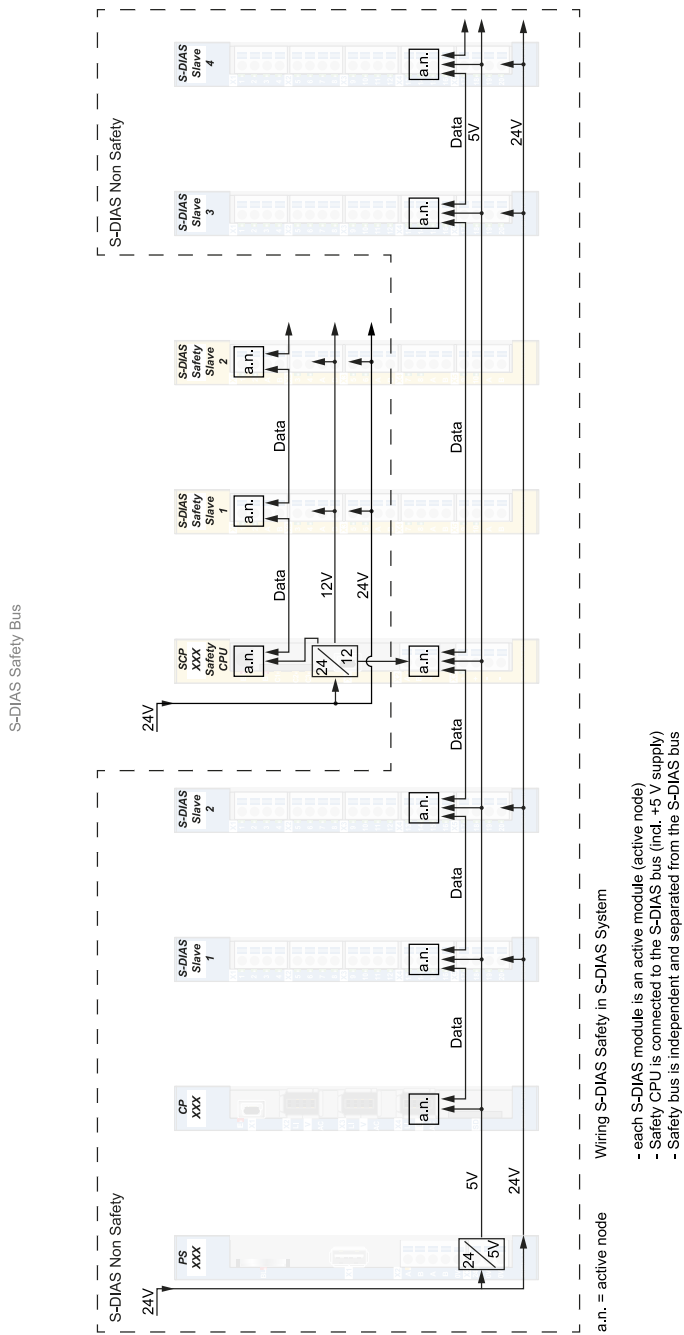


7.8 Miscellaneous

Article number	20-895-081	
Printed circuit board coating	no	
Approvals	CE	yes
	UL	cULus (E247993)
	Functional Safety	yes, EG-type-examined
	UKCA	no
Mission time	20 years	

7.9 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +55 °C (UL) 0 ... +60 °C (CE)	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
Noise emission	≤ 70 dB	
EMC resistance	EN 61000-6-2 (industrial area) EN 61000-6-7 (noise immunity industry functional safety) (increased requirements in accordance with EN IEC 62061)	
EMC noise generation	EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g (147.15 m/s ²)
Protection type	EN 60529/NEMA 250	IP20/Type1 (not evaluated by UL)


8 Mechanical Dimensions

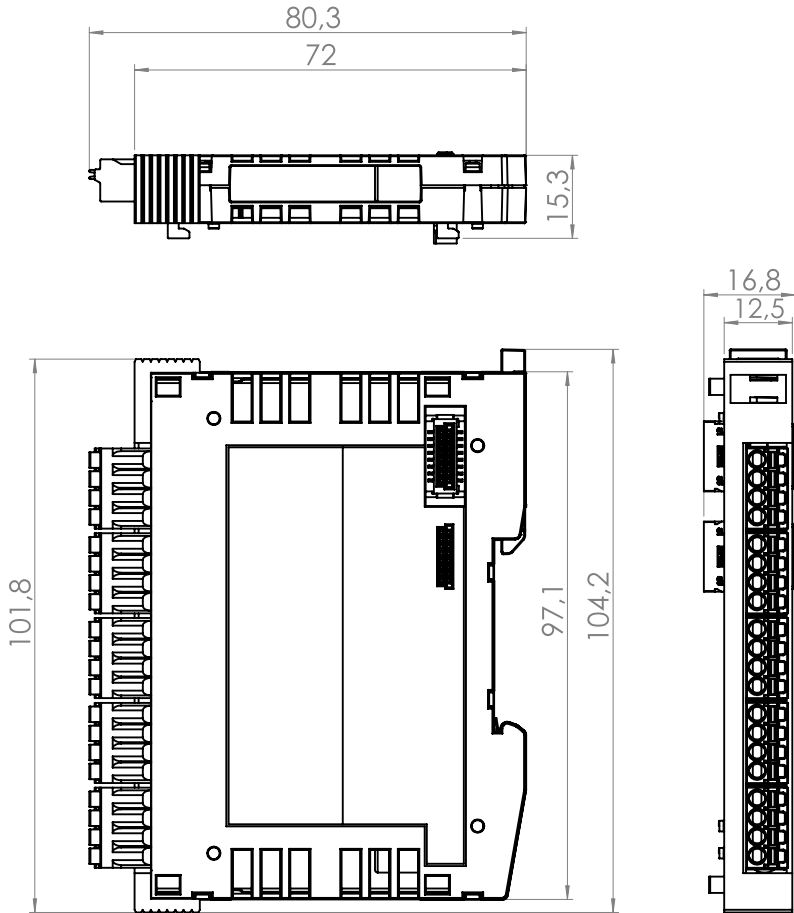

Measurements

12.5 x 104 x 72 mm (W x H x D)

8.1 Connector Layout

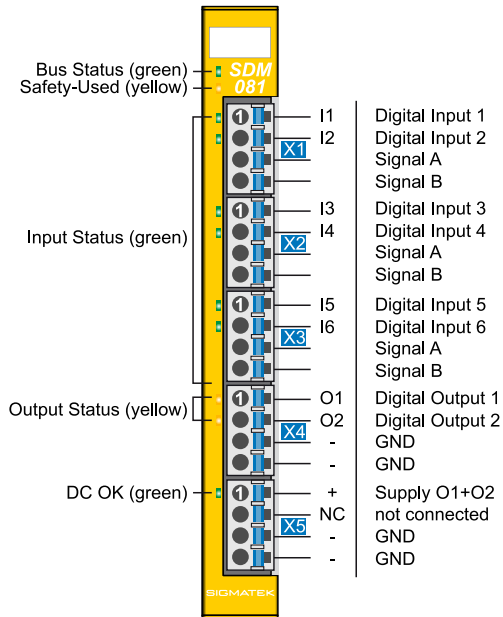

INFORMATION



The GND supply (X5: Pin 3 and Pin 4) is internally bridged. Only one GND pin (pin 3 or pin 4) is required to power the module. The bridged connections may be used for further looping of the GND supply. However, it must be taken into account that a total current of 6 A per connection is not exceeded by the forward looping!

8.2 Status LEDs

Bus status	green	ON	bus communication OK
		OFF	no supply available
		BLINKING (5 Hz)	no communication
Safety-used	yellow	ON	module is used and no error
		OFF	module is not used or not in operational mode
Input status	green	ON	input ON
		OFF	input OFF
Output status	yellow	ON	output ON
		OFF	output OFF
DC OK	green	ON	output group is powered

8.3 Applicable Connectors

X1-X5: Connectors with spring terminals (included in delivery)


The spring terminals are suited for the connection of ultrasonically compacted (ultrasonically welded) stranded wire.

Connection capacity:

Stripping length/sleeve length	10 mm
Mating direction	parallel to the conductor axis or circuit board
Conductor cross section rigid	0.2-1.5 mm ²
Conductor cross section flexible	0.2-1.5 mm ²
Conductor cross section, ultrasonically compacted	0.2-1.5 mm ²
Conductor cross section AWG/kcmil	24-16
Conductor cross section flexible with ferrule without plastic sleeve	0.25-1.5 mm ²
Conductor cross section flexible with ferrule with plastic sleeve	0.25-0.75 mm ² (reason for reduction d2 of the ferrule)




8.4 Label Field

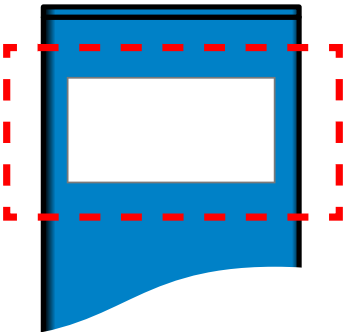

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Article number Weidmüller	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Article number Weidmüller	1324380000

9 Wiring

9.1 Wiring Example

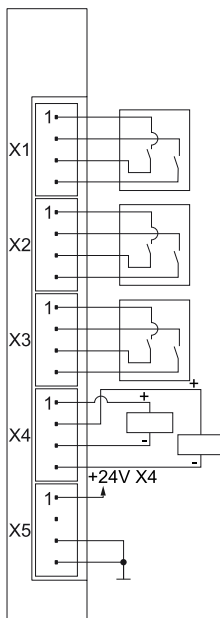

9.2 Note

The input filters, which suppress noise signals, allow operation in harsh environmental conditions. A careful wiring method is also recommended to ensure error-free function.

The following installation guidelines should be observed:

- Avoid parallel connections between input lines and load-bearing circuits.
- Protective circuits for all relays (RC networks or free-wheeling diodes)
- Correct wiring to ground

INFORMATION



The ground bus should be connected to the control cabinet when possible!

The wiring and assembly must be performed when no voltage is applied!

The S-DIAS module CANNOT be connected/disconnected while voltage is applied!

10 Assembly/Installation

10.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 1.3 Contents of Delivery.

INFORMATION




On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.


Damaged components can disrupt or damage the system.

10.2 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules, a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding lug on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation to ensure proper function up to the maximum operating temperature.

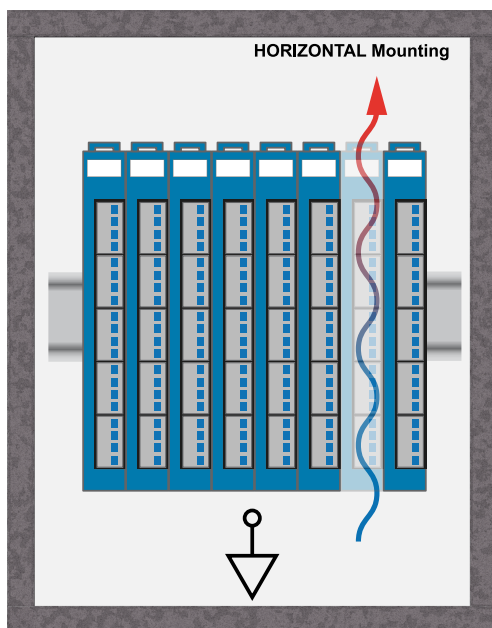

Recommended minimum distances between the S-DIAS modules and the surrounding components or control cabinet wall:

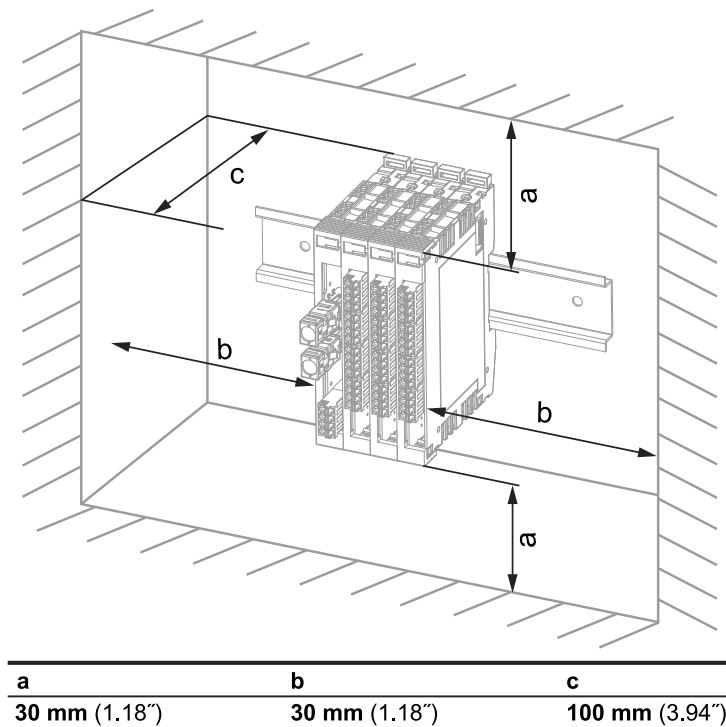

a, b, c ... distances in mm (inches)

11 Transport/Storage

This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

12 Storage

When not in use, store the device according to the storage conditions. See chapter 11 Transport/Storage.

INFORMATION



During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

13 Maintenance

During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

13.1 Service

This product was constructed for low-maintenance operation.

13.2 Repair

In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document.

For transport conditions, see chapter 11 Transport/Storage.

14 Disposal



INFORMATION

Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.



Changes Chart

Change date	Affected page(s)	Chapter	Note
18.07.2014	27	8.1 Connector Layout	Added wiring notice
08.09.2014	25	7.8 Miscellaneous	Added UL standard
30.01.2015	32	9.2 Note	Added note concerning connecting the S-DIAS module while voltage is applied
26.03.2015	29	8.3 Applicable Connectors	Added connections
07.05.2015			New writing: EN ISO 13849
18.05.2015	25	7.9 Environmental Conditions	Expanded vibration resistance
08.07.2015	20	7.4 Output Specifications	Added note
04.08.2015			Info Cover Translation from German added
28.08.2015	27	8.1 Connector Layout	Changed note
17.02.2016	20	7.4 Output Specifications	Switching-off inductive loads
18.02.2016	27	8.1 Connector Layout	Graphics changed
28.04.2016	33	10 Assembly/Installation	Graphics distances
13.03.2017	18	7.2 Cross-Circuit Detection Signal Outputs Specifications	Note added
15.05.2017	21	7.5 Maximum Inductive and Capacitive Load	Chapter added
17.08.2017	25	7.9 Environmental Conditions	Pollution degree
	29	8.3 Applicable Connectors	Sleeve length added Added info regarding ultrasonically welded strands
23.08.2017	20	7.4 Output Specifications	Table expanded, Cutoff Test Pulse Timing added
30.08.2017	20	7.4 Output Specifications	Cutoff Test Pulse Timing
18.10.2017	30	8.4 Label Field	Chapter added
	33	10 Assembly/Installation	Graphic replaced

Change date	Affected page(s)	Chapter	Note
20.09.2018	27	8.1 Connector Layout	Added note
05.10.2018	18	7.2 Cross-Circuit Detection Signal Outputs Specifications	Note for cable capacitance and for cable resistance added
02.04.2019	14	5 Safety-Relevant Parameters	Correction of the safety-relevant parameters
	25	7.9 Environmental Conditions	Corrections environmental conditions
	all		Corrections due to CE
20.09.2019	14	5 Safety-Relevant Parameters	Values adjusted
14.11.2019	24	9 Supported Cycle Times	Chapter added
02.12.2019	14	5 Safety-Relevant Parameters	Values updated
28.02.2020	24	9 Supported Cycle Times	Text adapted
28.05.2020	24	9 Supported Cycle Times	Entire chapter removed
20.07.2020	all		Up to 60 °C ambient temperature
02.09.2020	16	5.3 Compatibility	Text correction
	7	1.3 General Requirements	Text correction of Designated Use
	14	5.1 Mounting Position Horizontal 0-55 °C Ambient Temperature	Mounting Position Horizontal 0-55 °C Ambient Temperature - Safety-relevant parameters changed
	15	5.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	Mounting Position Horizontal 0-60 °C Ambient Temperature - Safety-relevant parameters changed
	16	5.3 Compatibility	Text correction of Contact short detection
	18	7 Technical Data	Text "horizontal mounting position and" removed from footnotes
	25	7.9 Environmental Conditions	At Environmental temperature 0 ... +55 °C deleted
08.09.2020		10 Hardware Class SDM 081	Chapter added
04.11.2020	33	10 Assembly/Installation	Expansion functional ground connection

Change date	Affected page(s)	Chapter	Note
05.03.2021	25	7.9 Environmental Conditions	Standards added
07.02.2022	15	5.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	Parameters SCP 211/SCP 111-S added
22.03.2022	14	5.1 Mounting Position Horizontal 0-55 °C Ambient Temperature	Safety characteristic values outputs changed + Safety parameters added as of HW version 4.00
	15	5.2 Mounting Position Horizontal 0-60 °C Ambient Temperature	Safety parameters added as of HW version 4.00
	14	5 Safety-Relevant Parameters	SDM 081 in combination with SCP 211/SCP 111-S outputs value PFHD changed.
12.09.2022	25	7.8 Miscellaneous	Hardware version removed
20.04.2023	27	8.1 Connector Layout	Info box corrected
05.12.2023	25	7.8 Miscellaneous	Mission time added
	25	7.9 Environmental Conditions	Noise emissions added
		10 Hardware Class SDM 081	Chapter removed
01.02.2024	13	4.3.2 EU Conformity Declaration	Note on download adjusted
	14	5 Safety-Relevant Parameters	The safety indicators (PFH, MTTF _D) were adjusted slightly with the recertification.
21.02.2024	11	3 IT Security	Chapter added
18.03.2025		Document	Layout corrected
07.08.2025	14	5 Safety-Relevant Parameters	SCP 011/SCP 111 inputs, dual-channel use PFH value changed (-09 => -10)